

Ident – Nummern – Konstante
3740

Gebrauchsanweisung
51 3590
(DE,EN,FR,IT,NL,SE,FI,
ES,PT,DE,NO)
Montageanleitung
58 1031
(DE,EN,FR,IT,NL)




07 4445

10 6850



10 5046

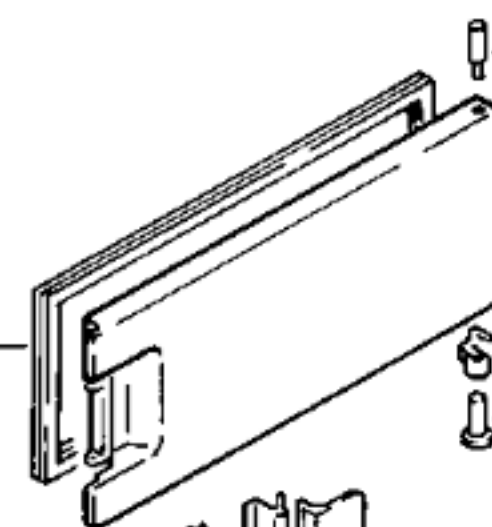

15 3429

35 0930
kompl.

02 9965

02 9966

21 9852
kompl.

02 9973

02 9963

02 9974

05 9129

28 8280

15 2784

48 1230



15 2788

15 2787

09 3110

06 5644




15 2786

15 2789

15 3285

15 2789

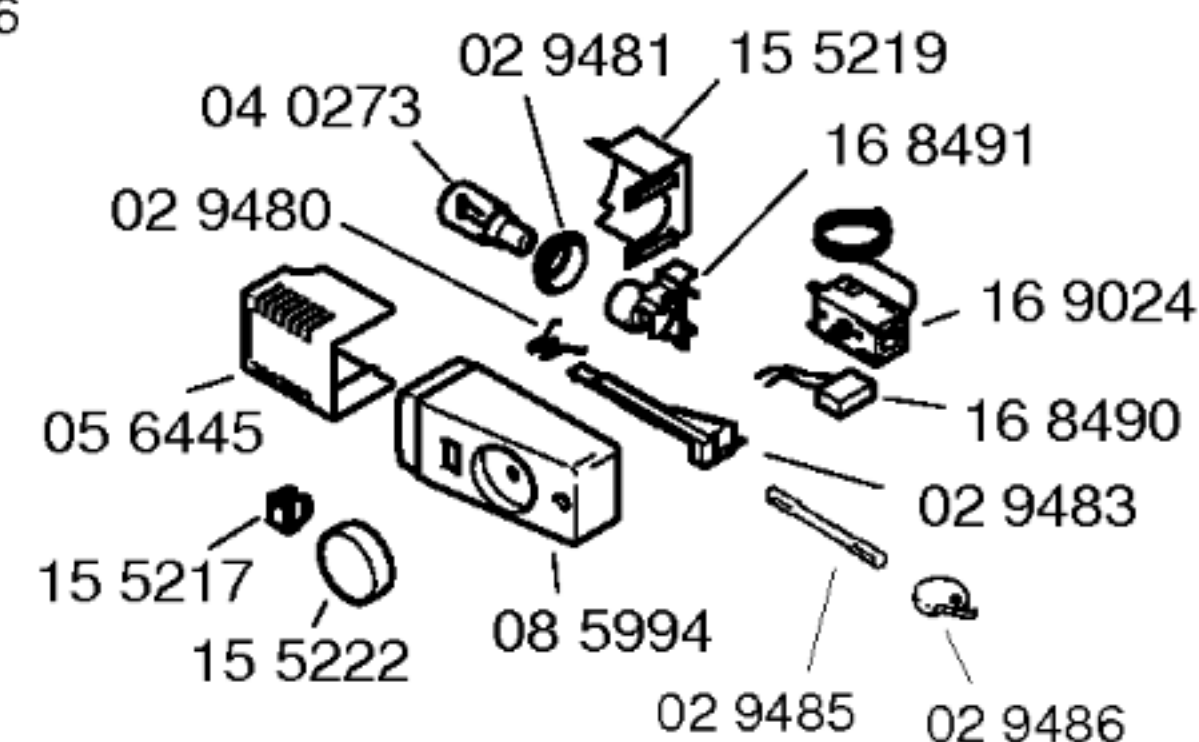

04 0273

02 9481

15 5219

16 8491

02 9480

05 6445

08 5994

16 8490

02 9483



15 5217

15 5222


02 9485

02 9486

Ident – Nummern – Konstante
3740

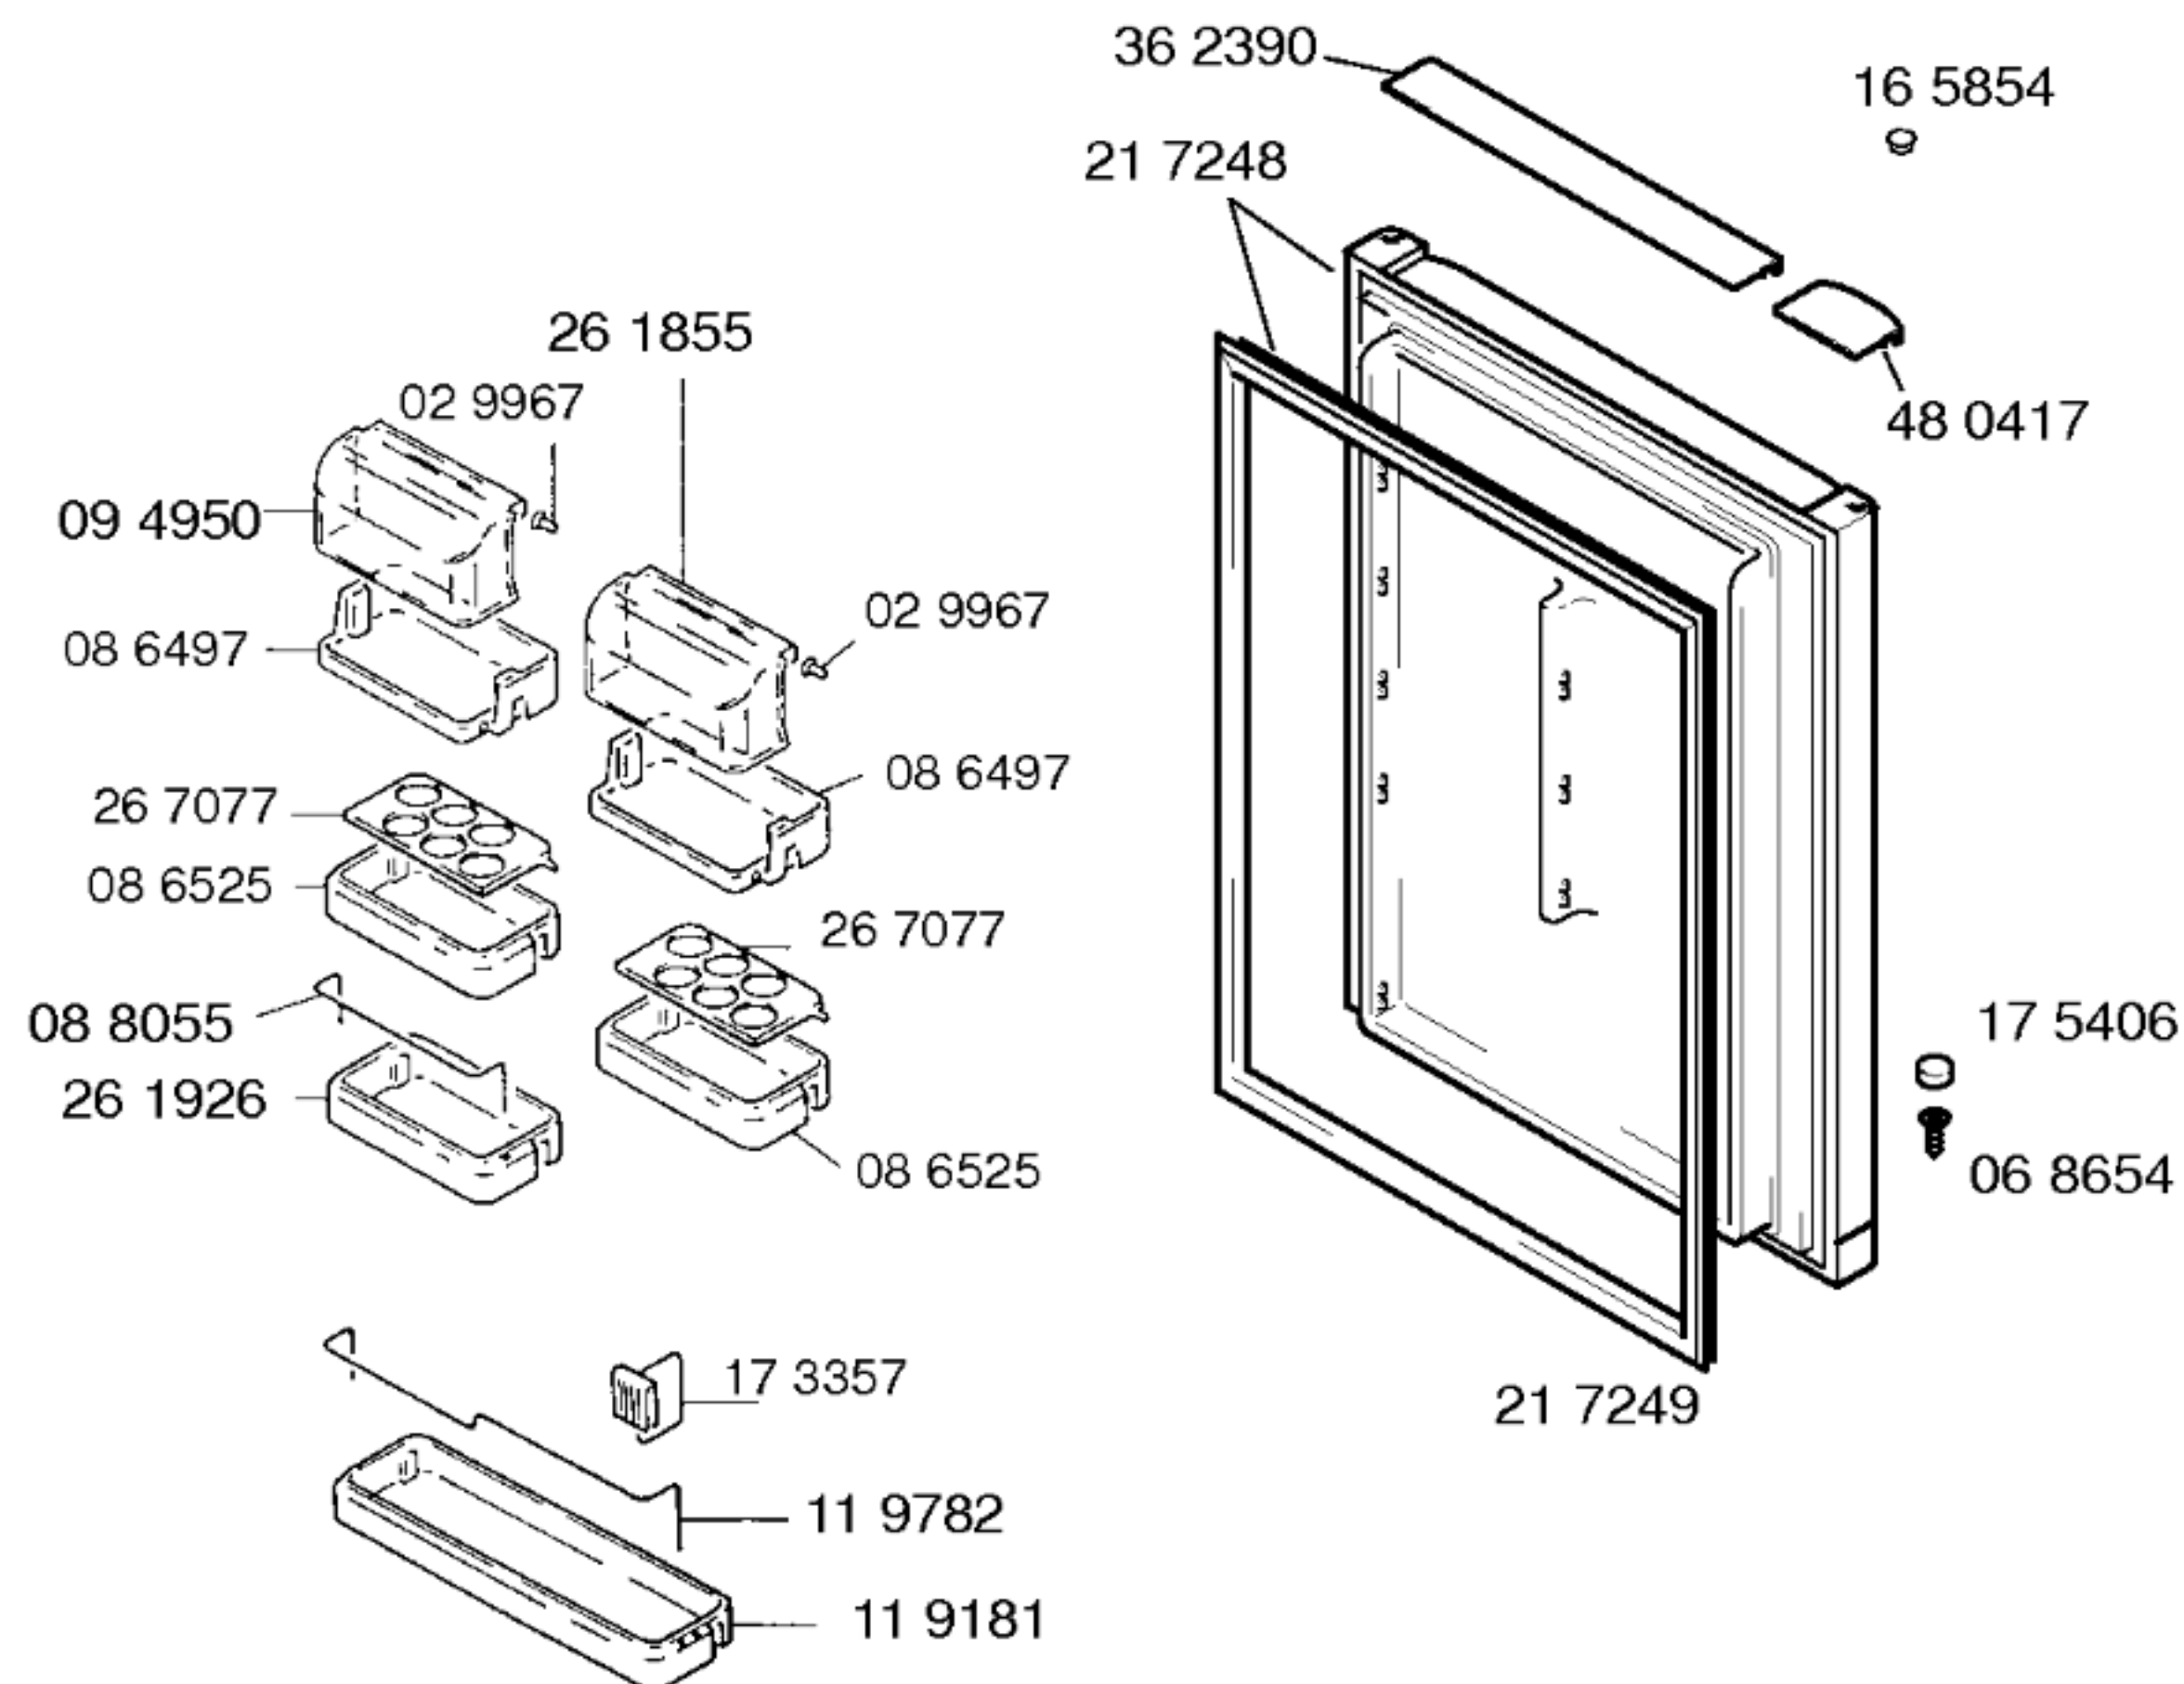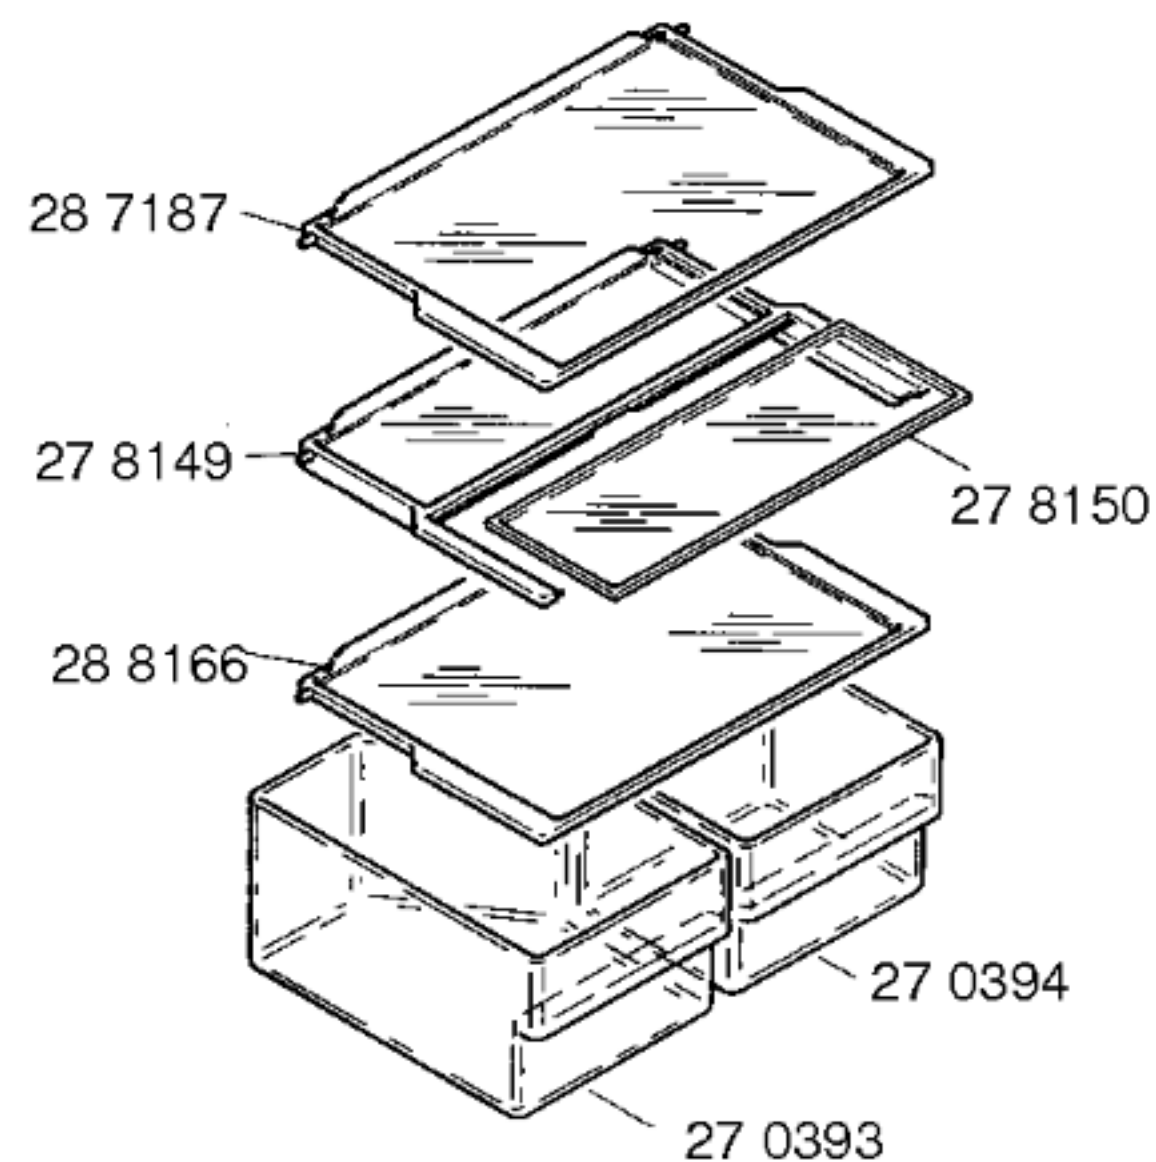

Ident – Nummern – Konstante
3740

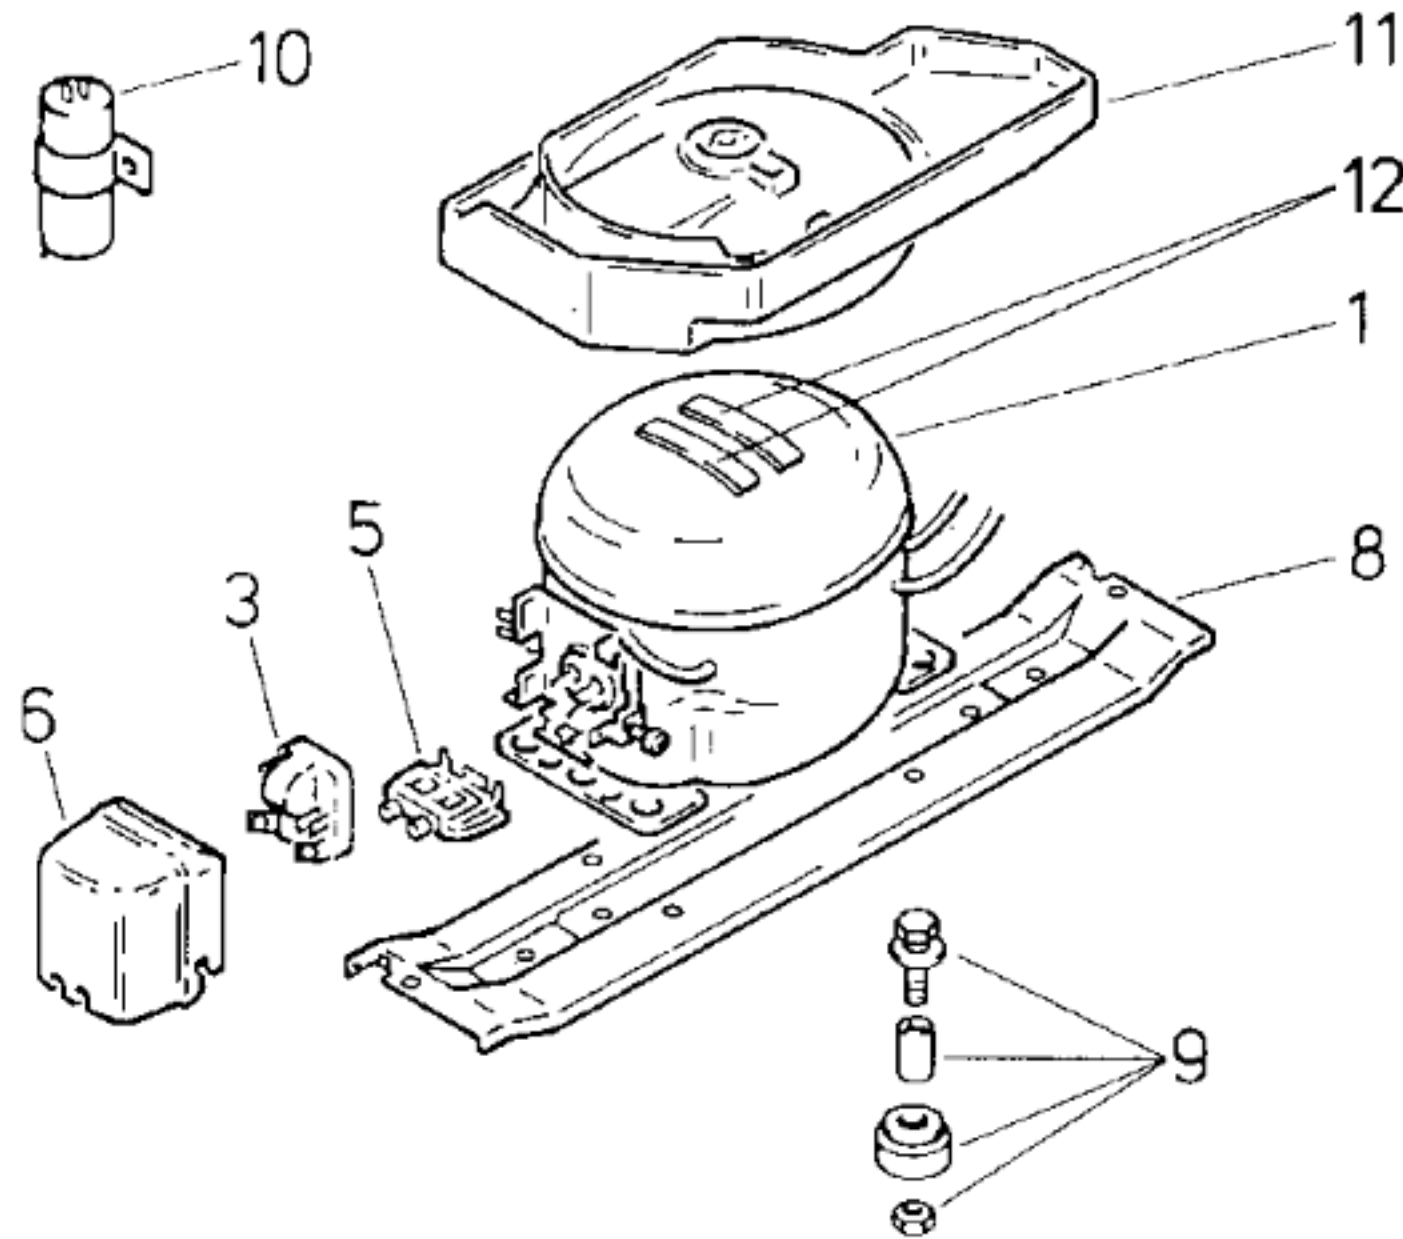

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES			
Verdichter/Compressor/Compresseur		Danfoss	
Typ/Type		TLES 7 KK2	
Förderleistung/Delivery/Débit		l/h	1168
Anlaufstrom/Starting current/Cour de démarrage		A	4,5
Widerstand/Resistance/Résistance		Ha/main/prin. Ω	18,9
		Hi/aux Ω	15,3
Temp. Regler/Thermostat			
Typ/Type			
Reglerstellung/Position			
Schaltwerte/Switching values/		„ein“ $^{\circ}\text{C}$	
Valeurs de commutation		„aus“	
		(„abtauen“ od.) „alarm“	
Füllmenge/Fill.quantity/Charge		R600a	g
			*
Anschlußwert/Conn.load/Puiss. connectée		W	78
Heizung/Heater/Chauffage			
Widerstand/Resistance/Résistance		Ω	
Leistung/Power/Puissance		W	
Ventilator/Blower/Ventilateur			
Widerstand/Resistance/Résistance		Ω	
Schaltuhr/Timer/Minuterie de contact			
Widerstand/Resistance/Résistance		Ω	
Magnetventil/Magnetic valve/Electrovanne			
Widerstand/Resistance/Résistance		Ω	
Spannung/Voltage/Tension		V	

* siehe Typenschild

Pos.	V01		
	Danfoss		
	TLES 7 KK2		
1	14 1903		
2			
3	15 1055		
4			
5	15 0760		
6	15 1072		
7			
8	27 1375		
9	05 0166		
10			
11	08 4744		
12	05 6008		