 
 


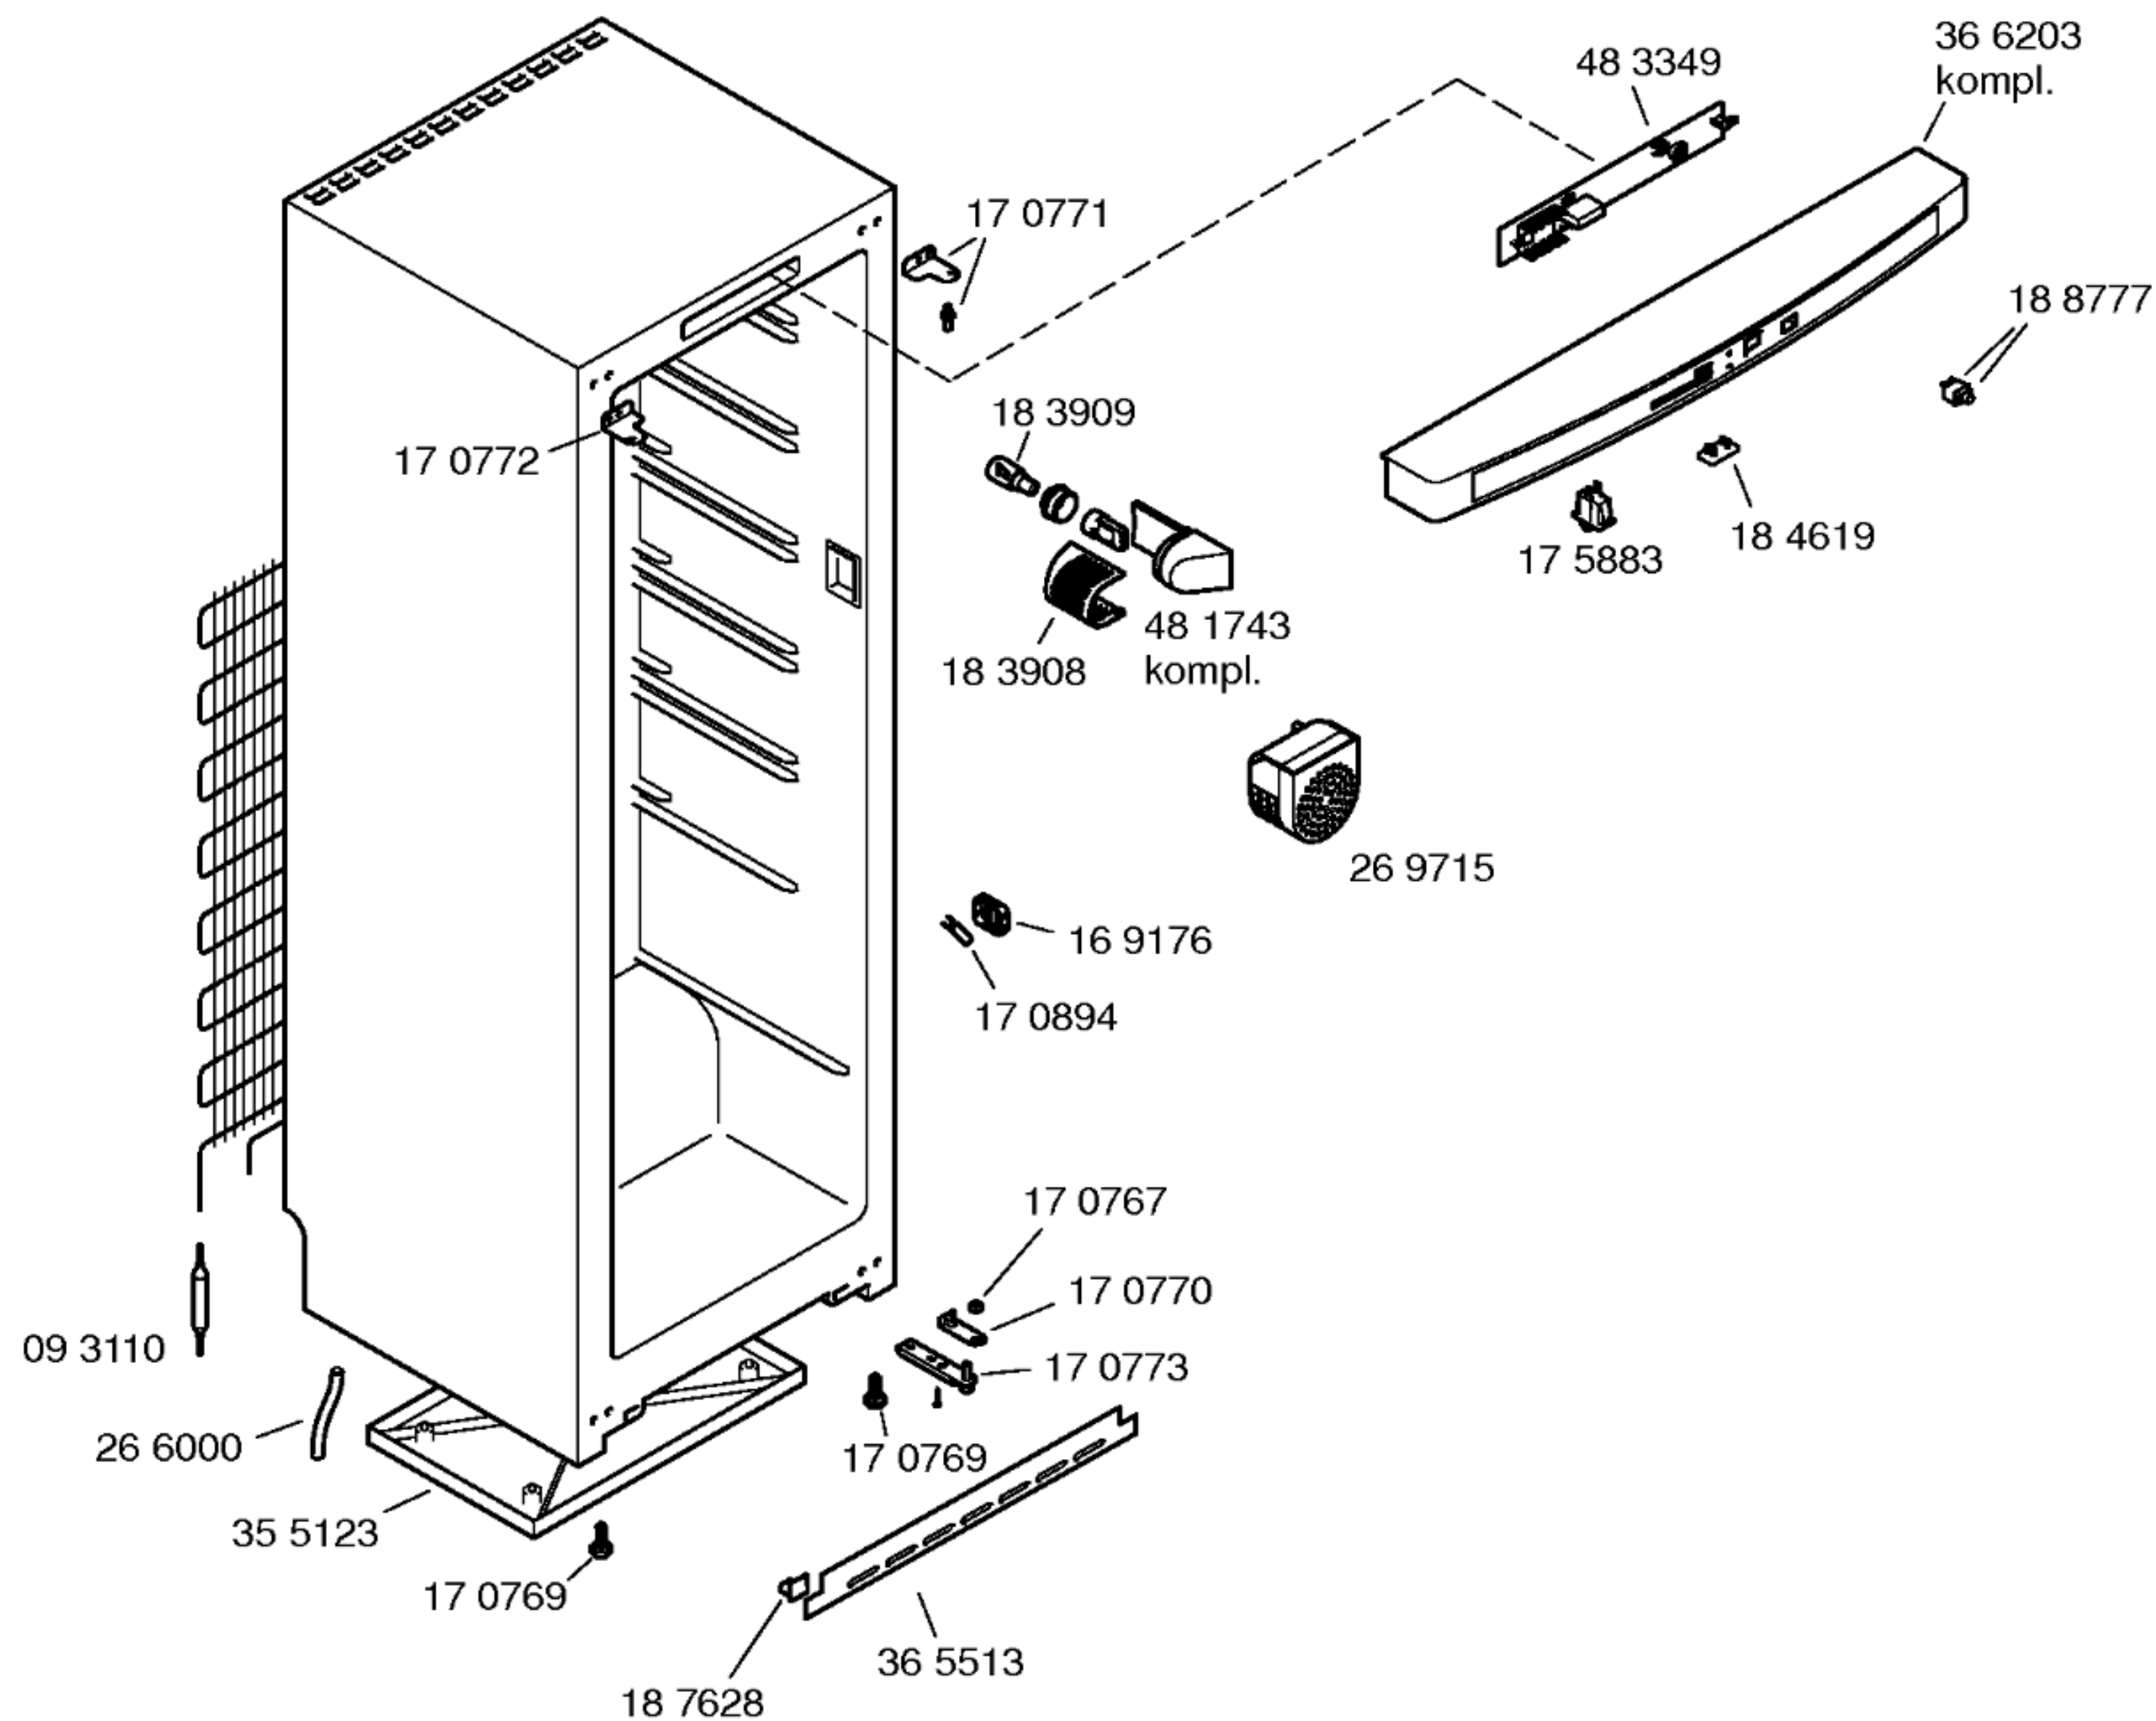 


Gebrauchsanweisung
58 0707
(D,GB,F,I,NL,DK,N,SF,
S,GR,TR)
Montageanleitung
58 0241

Beistellsatz
26 5627

Side by Side
Beistellsatz zu GS
48 1044

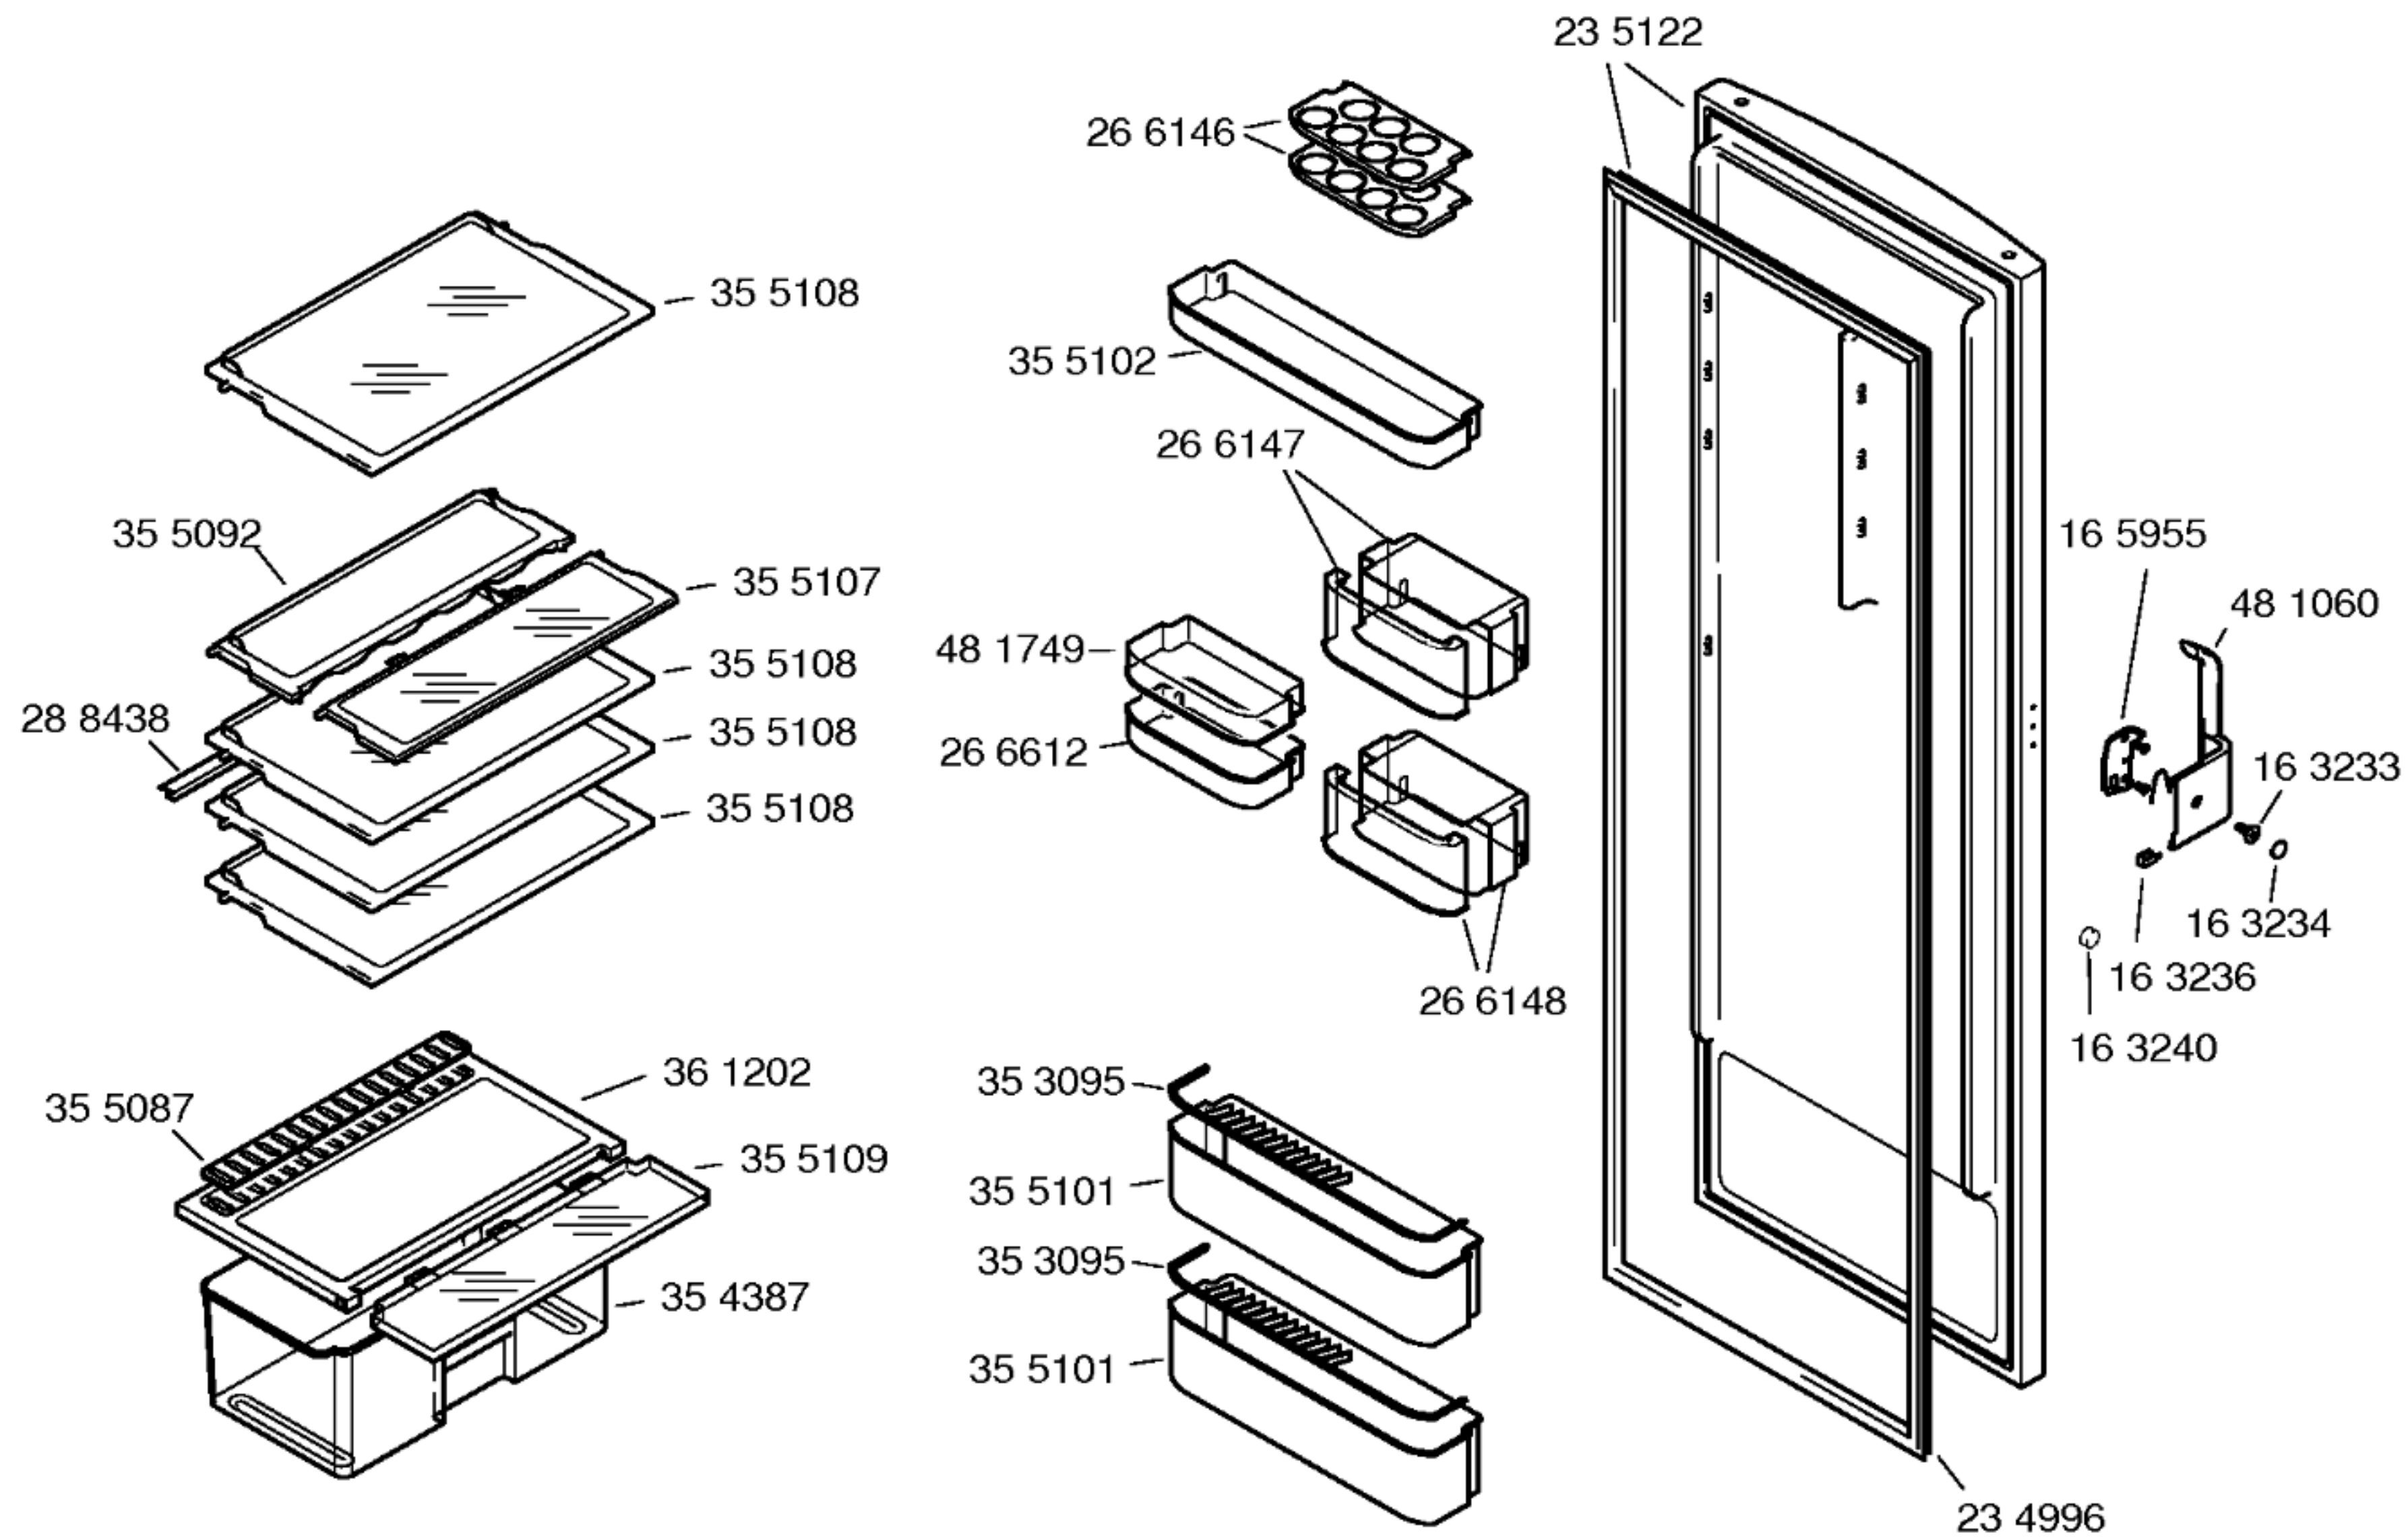

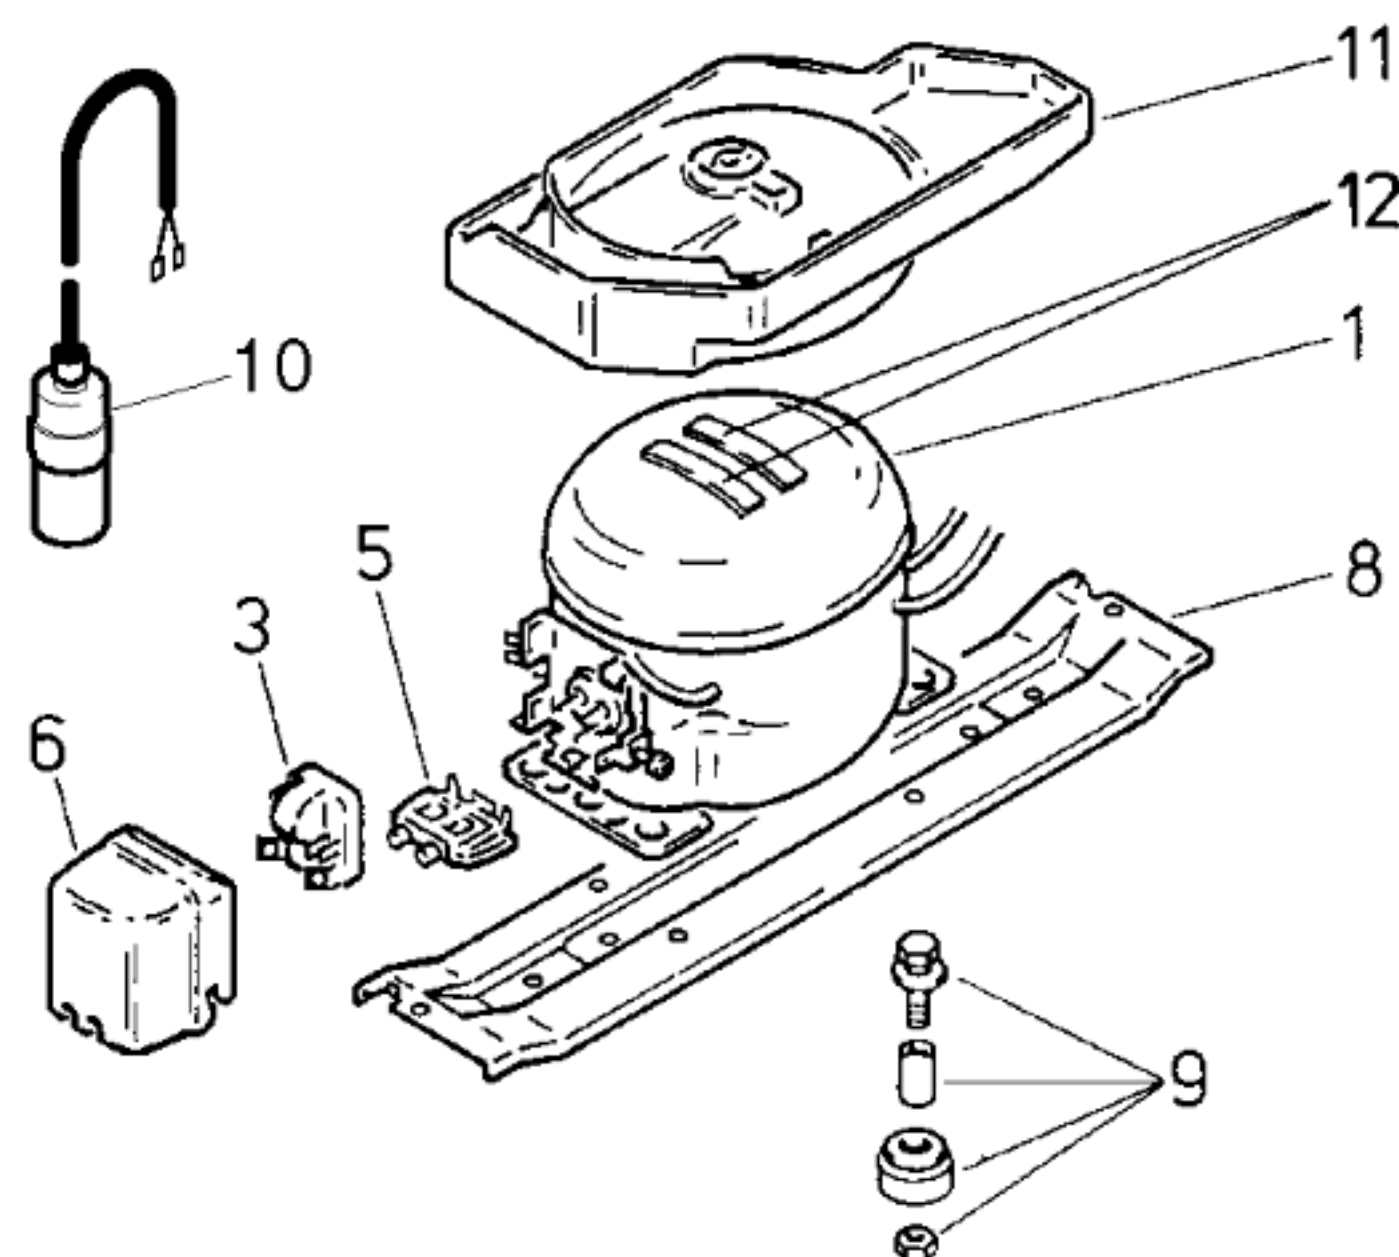

	V01	V02	
Pos.	Danfoss	Goldstar	
	TLES 5 KK2	NDA52NAEG	
1	14 1633	14 2206	
2			
3	15 1055	18 4685	
4			
5	15 0760	17 0746	
6	15 1072	17 0744	
7			
8	27 1375	27 1375	
9	05 0166	05 0166	
10			
11	08 4744	08 4744	
12	05 6008	05 6008	

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES			
Verdichter/Compressor/Compresseur		Danfoss	Goldstar
Typ/Type		TLES 5 KK2	NDA52NAEG
Förderleistung/Delivery/Débit	l/h	914	1121
Anlaufstrom/Starting current/Cour de démarrage	A	2,9	0,0
Widerstand/Resistance/Résistance	Ha/main/prin. Ω	25,7	31,5
	Hi/aux Ω	15,7	6,0
Temp.-Regler/Thermostat			
Typ/Type			
Reglerstellung/Position			
Schaltwerte/Switching values/	„ein“ $^{\circ}\text{C}$		
Valeurs de commutation	„aus“		
(„abtauen“ od.)	„alarm“		
Füllmenge/Fill.quantity/Charge	R600a g	*	
Anschlußwert/Conn.load/Puiss. connectée	W	58	61
Heizung/Heater/Chauffage			
Widerstand/Resistance/Résistance	Ω		
Leistung/Power/Puissance	W		
Ventilator/Blower/Ventilateur			
Widerstand/Resistance/Résistance	Ω		
Schaltuhr/Timer/Minuterie de contact			
Widerstand/Resistance/Résistance	Ω		
Magnetventil/Magnetic valve/Electrovanne			
Widerstand/Resistance/Résistance	Ω		
Spannung/Voltage/Tension	V		

* siehe Typenschild