


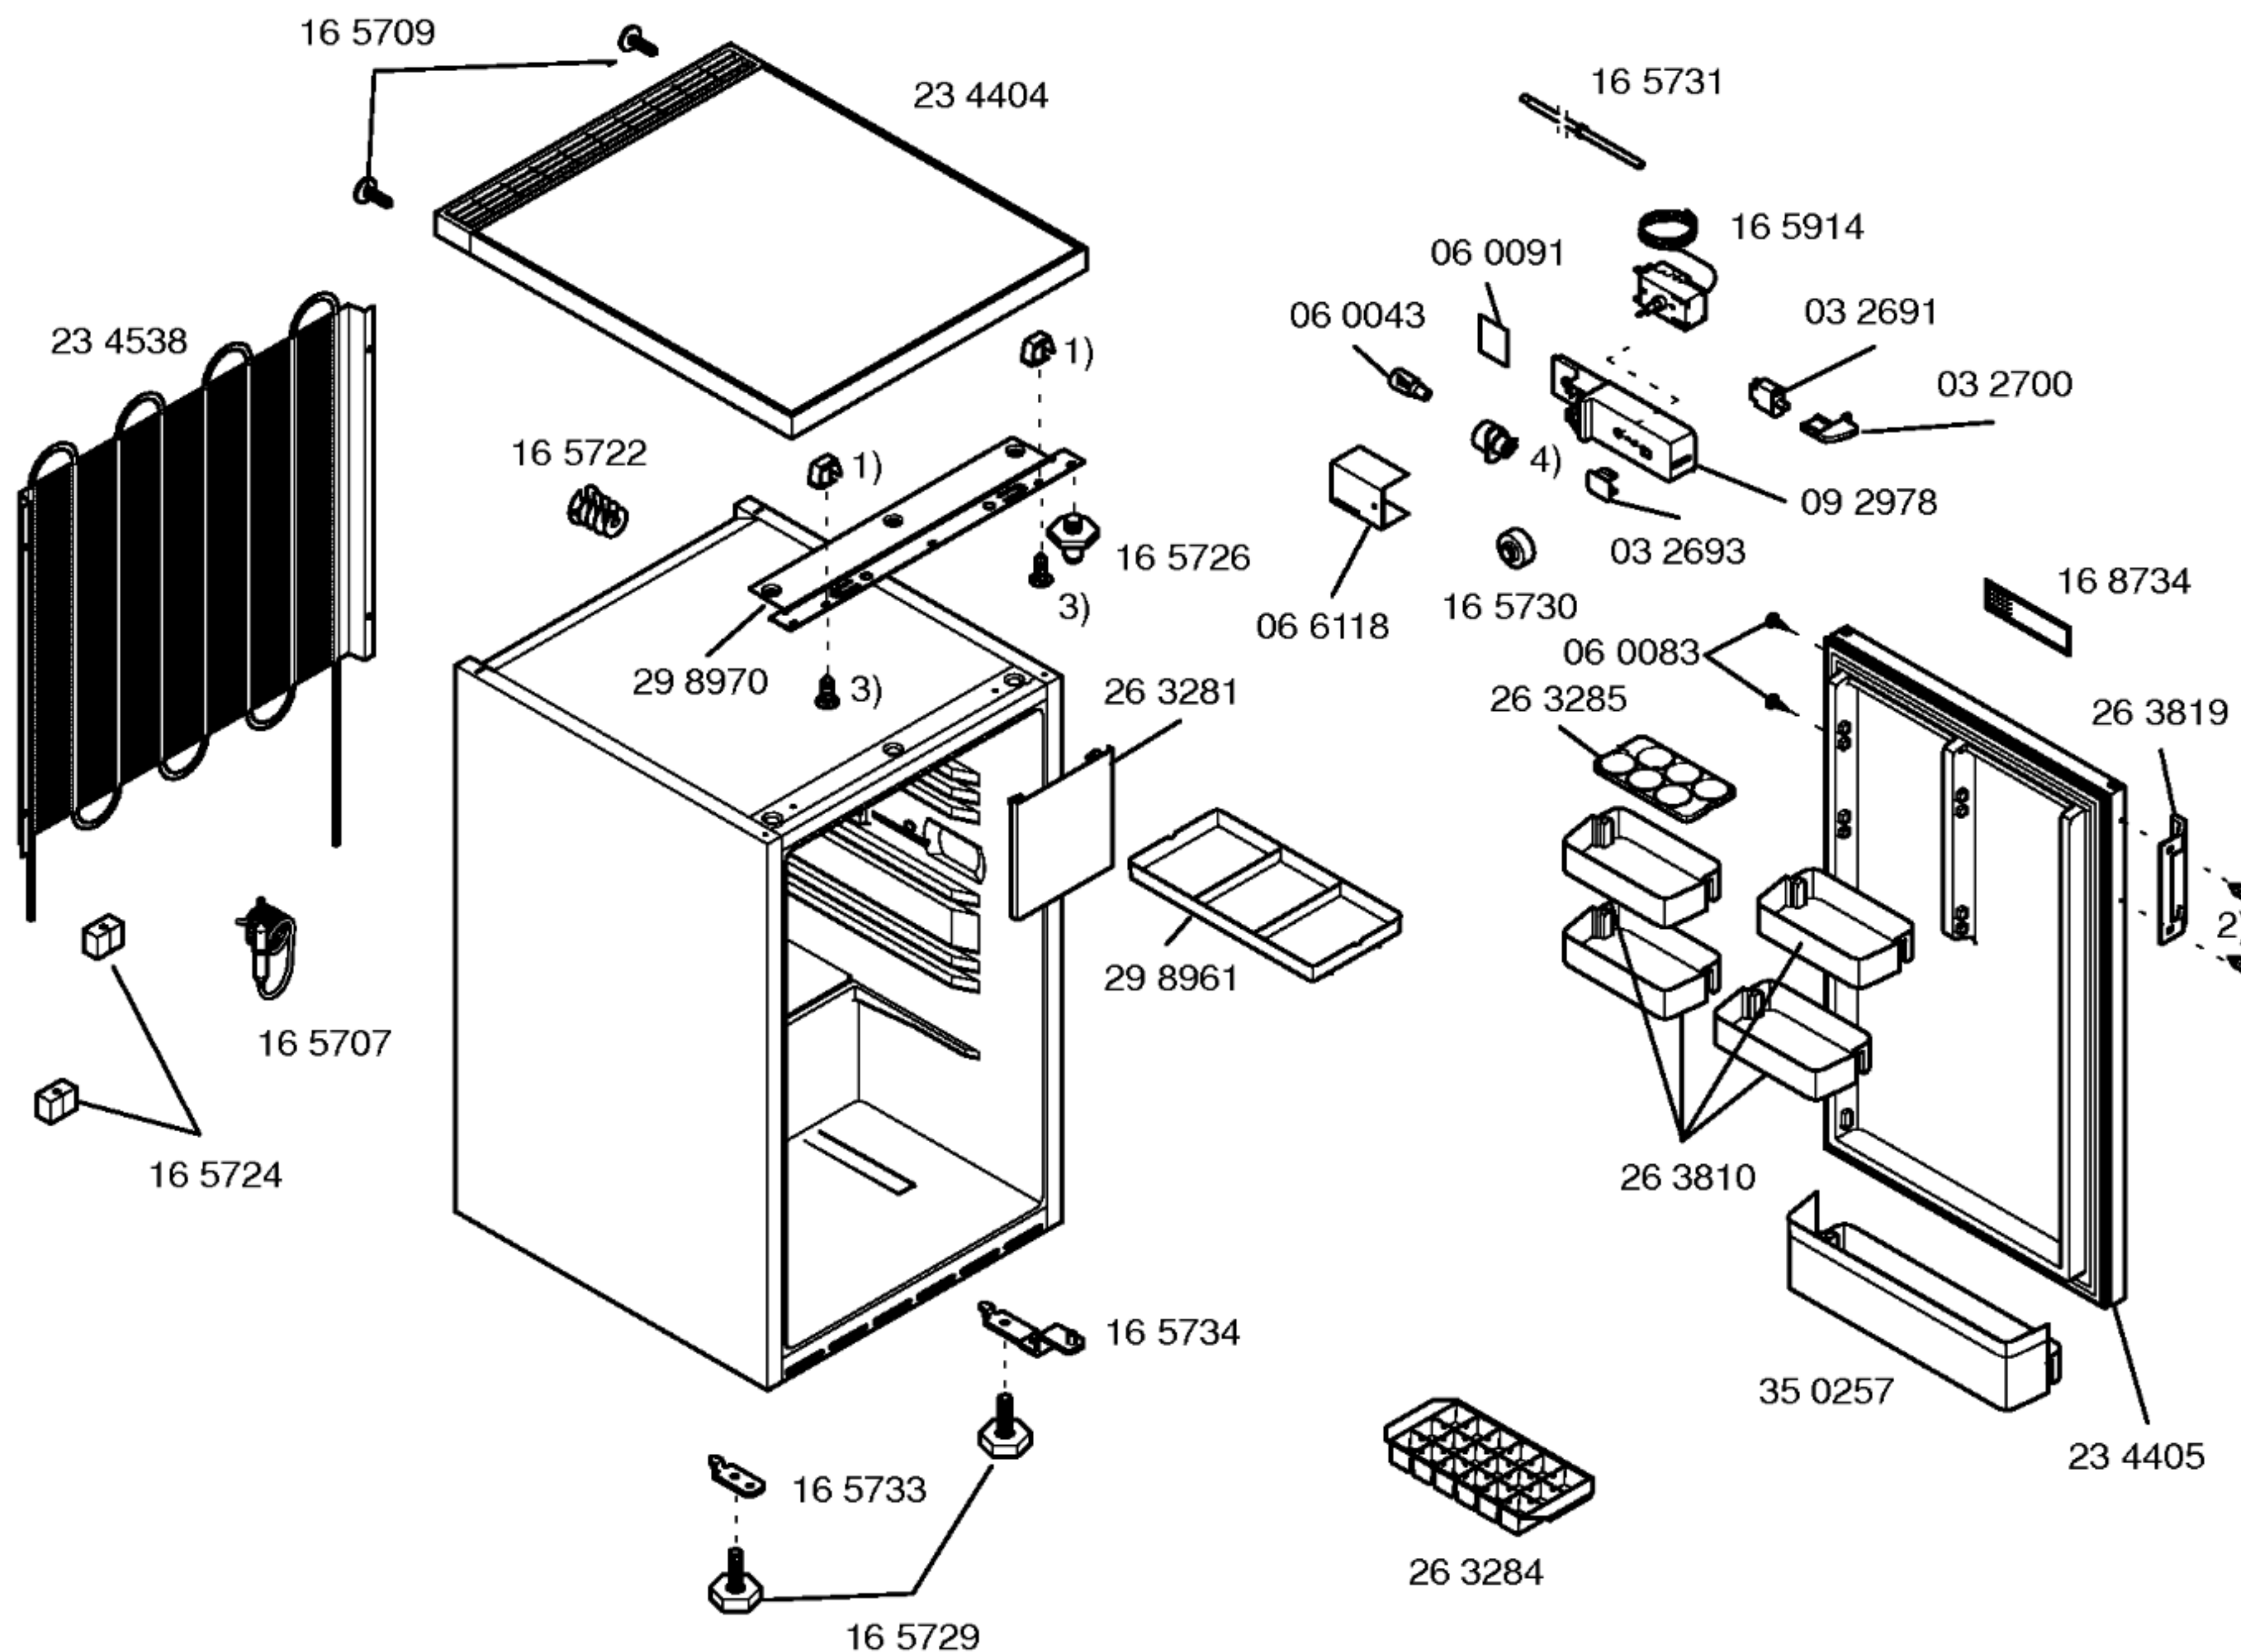
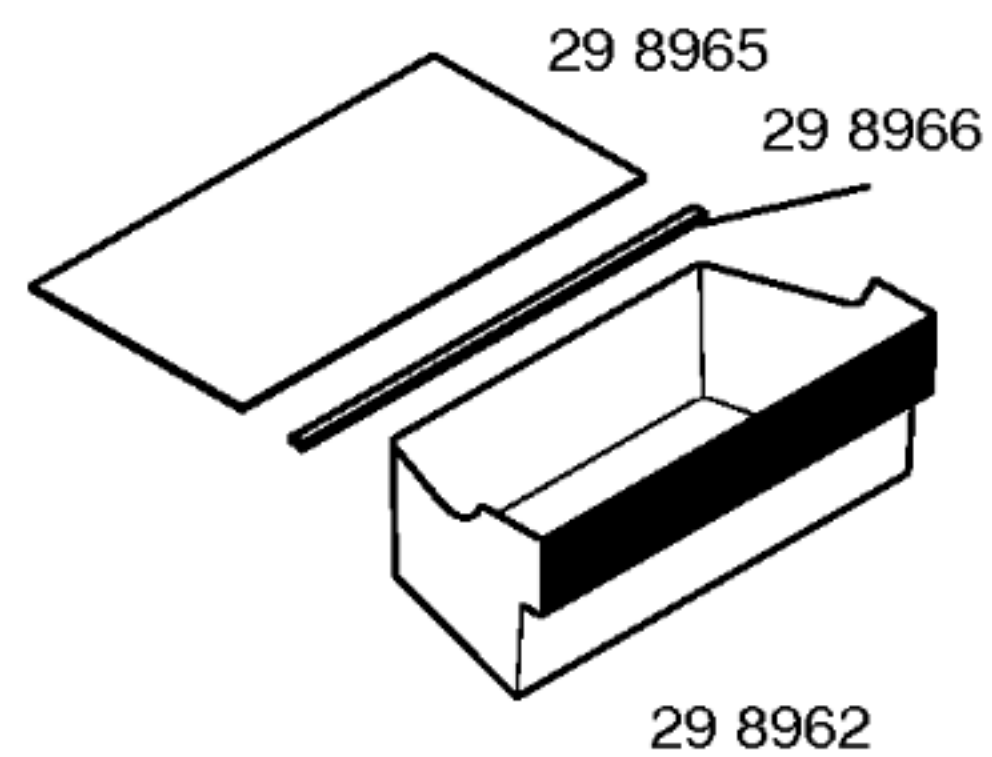


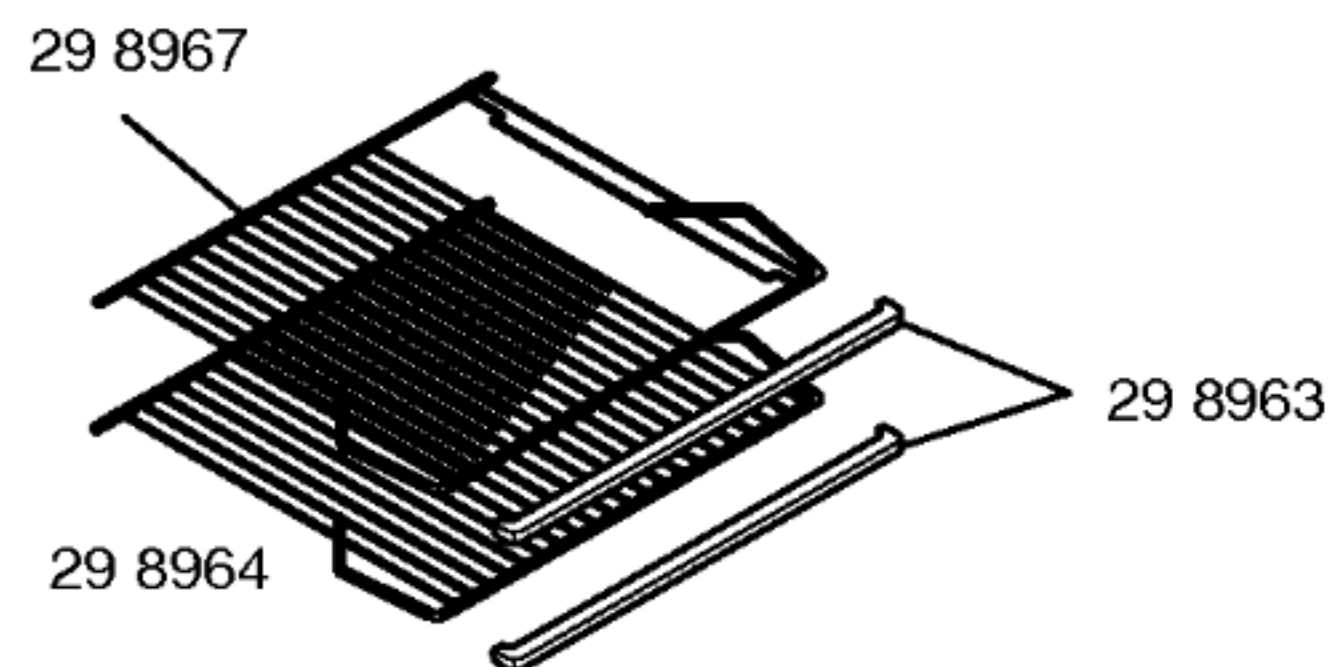

Libro de instrucciones
(DE,GB,FR,IT,NL,SE,
FI,NO,PT,ES)
52 1375

- 1) 16 5720
- 2) 06 0637
- 3) 16 5727
- 4) 06 0472

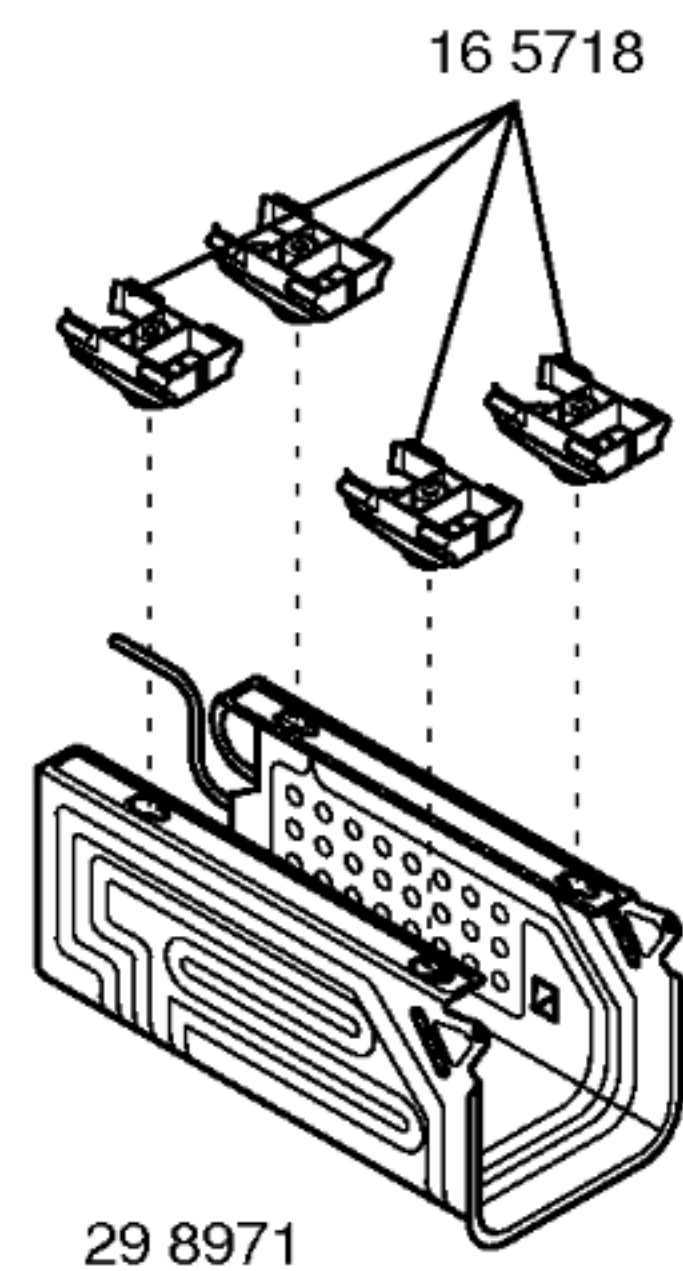

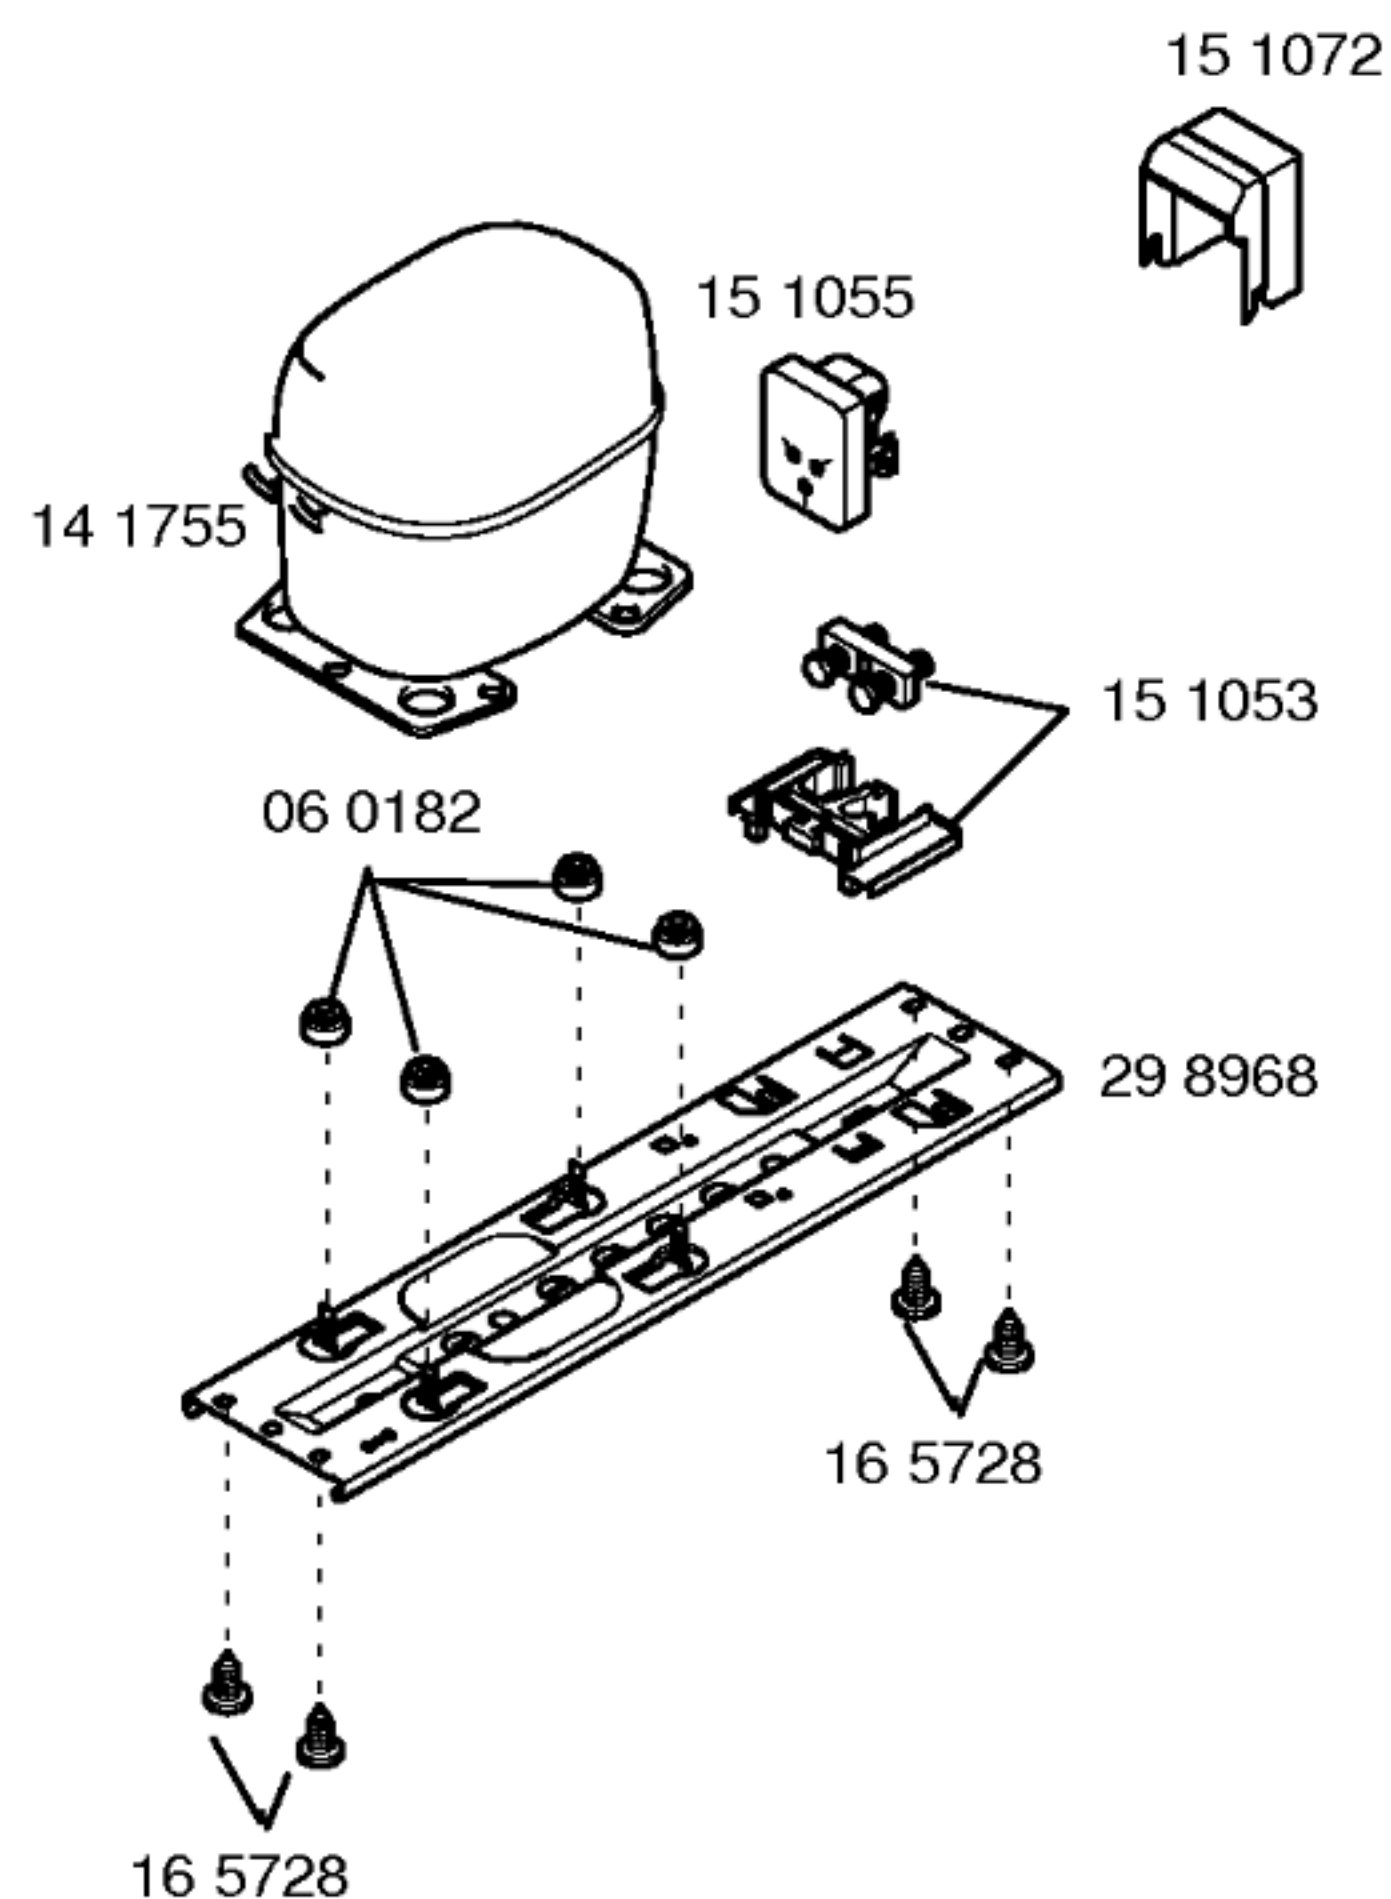

TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECHNIQUES/DATOS TECNICOS		
Verdichter/Compressor/Compresseur/Compresor Typ/Type/Tipo Förderleistung/Delivery/Debit/Aspiración l/h Anlaufstrom/Starting current/Cour.démarrage/Int.arranque A Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm Hi/aux.	DANFOSS TL4F 695 3,2 17,1 26,7	
Temp.Reyler/Thermostat/Termostato Typ/Type/Tipo Reglerstellung/Position/Conexión Schaltwerte/Switching values/ ..ein/conex. °C Valeurs de commutation/Desconex. ..aus"/descon. (..abtaven' od) ..alarm'	DANFOSS 077B4005 MIN MAX. -1,5° -10,5° -22,5° -----	
Füllmenge/Fill. quantily/Charge/Carga R134a g	40	
Anschlusswert/Comm. load/Puiss. Connect./Potenc. W	90	