

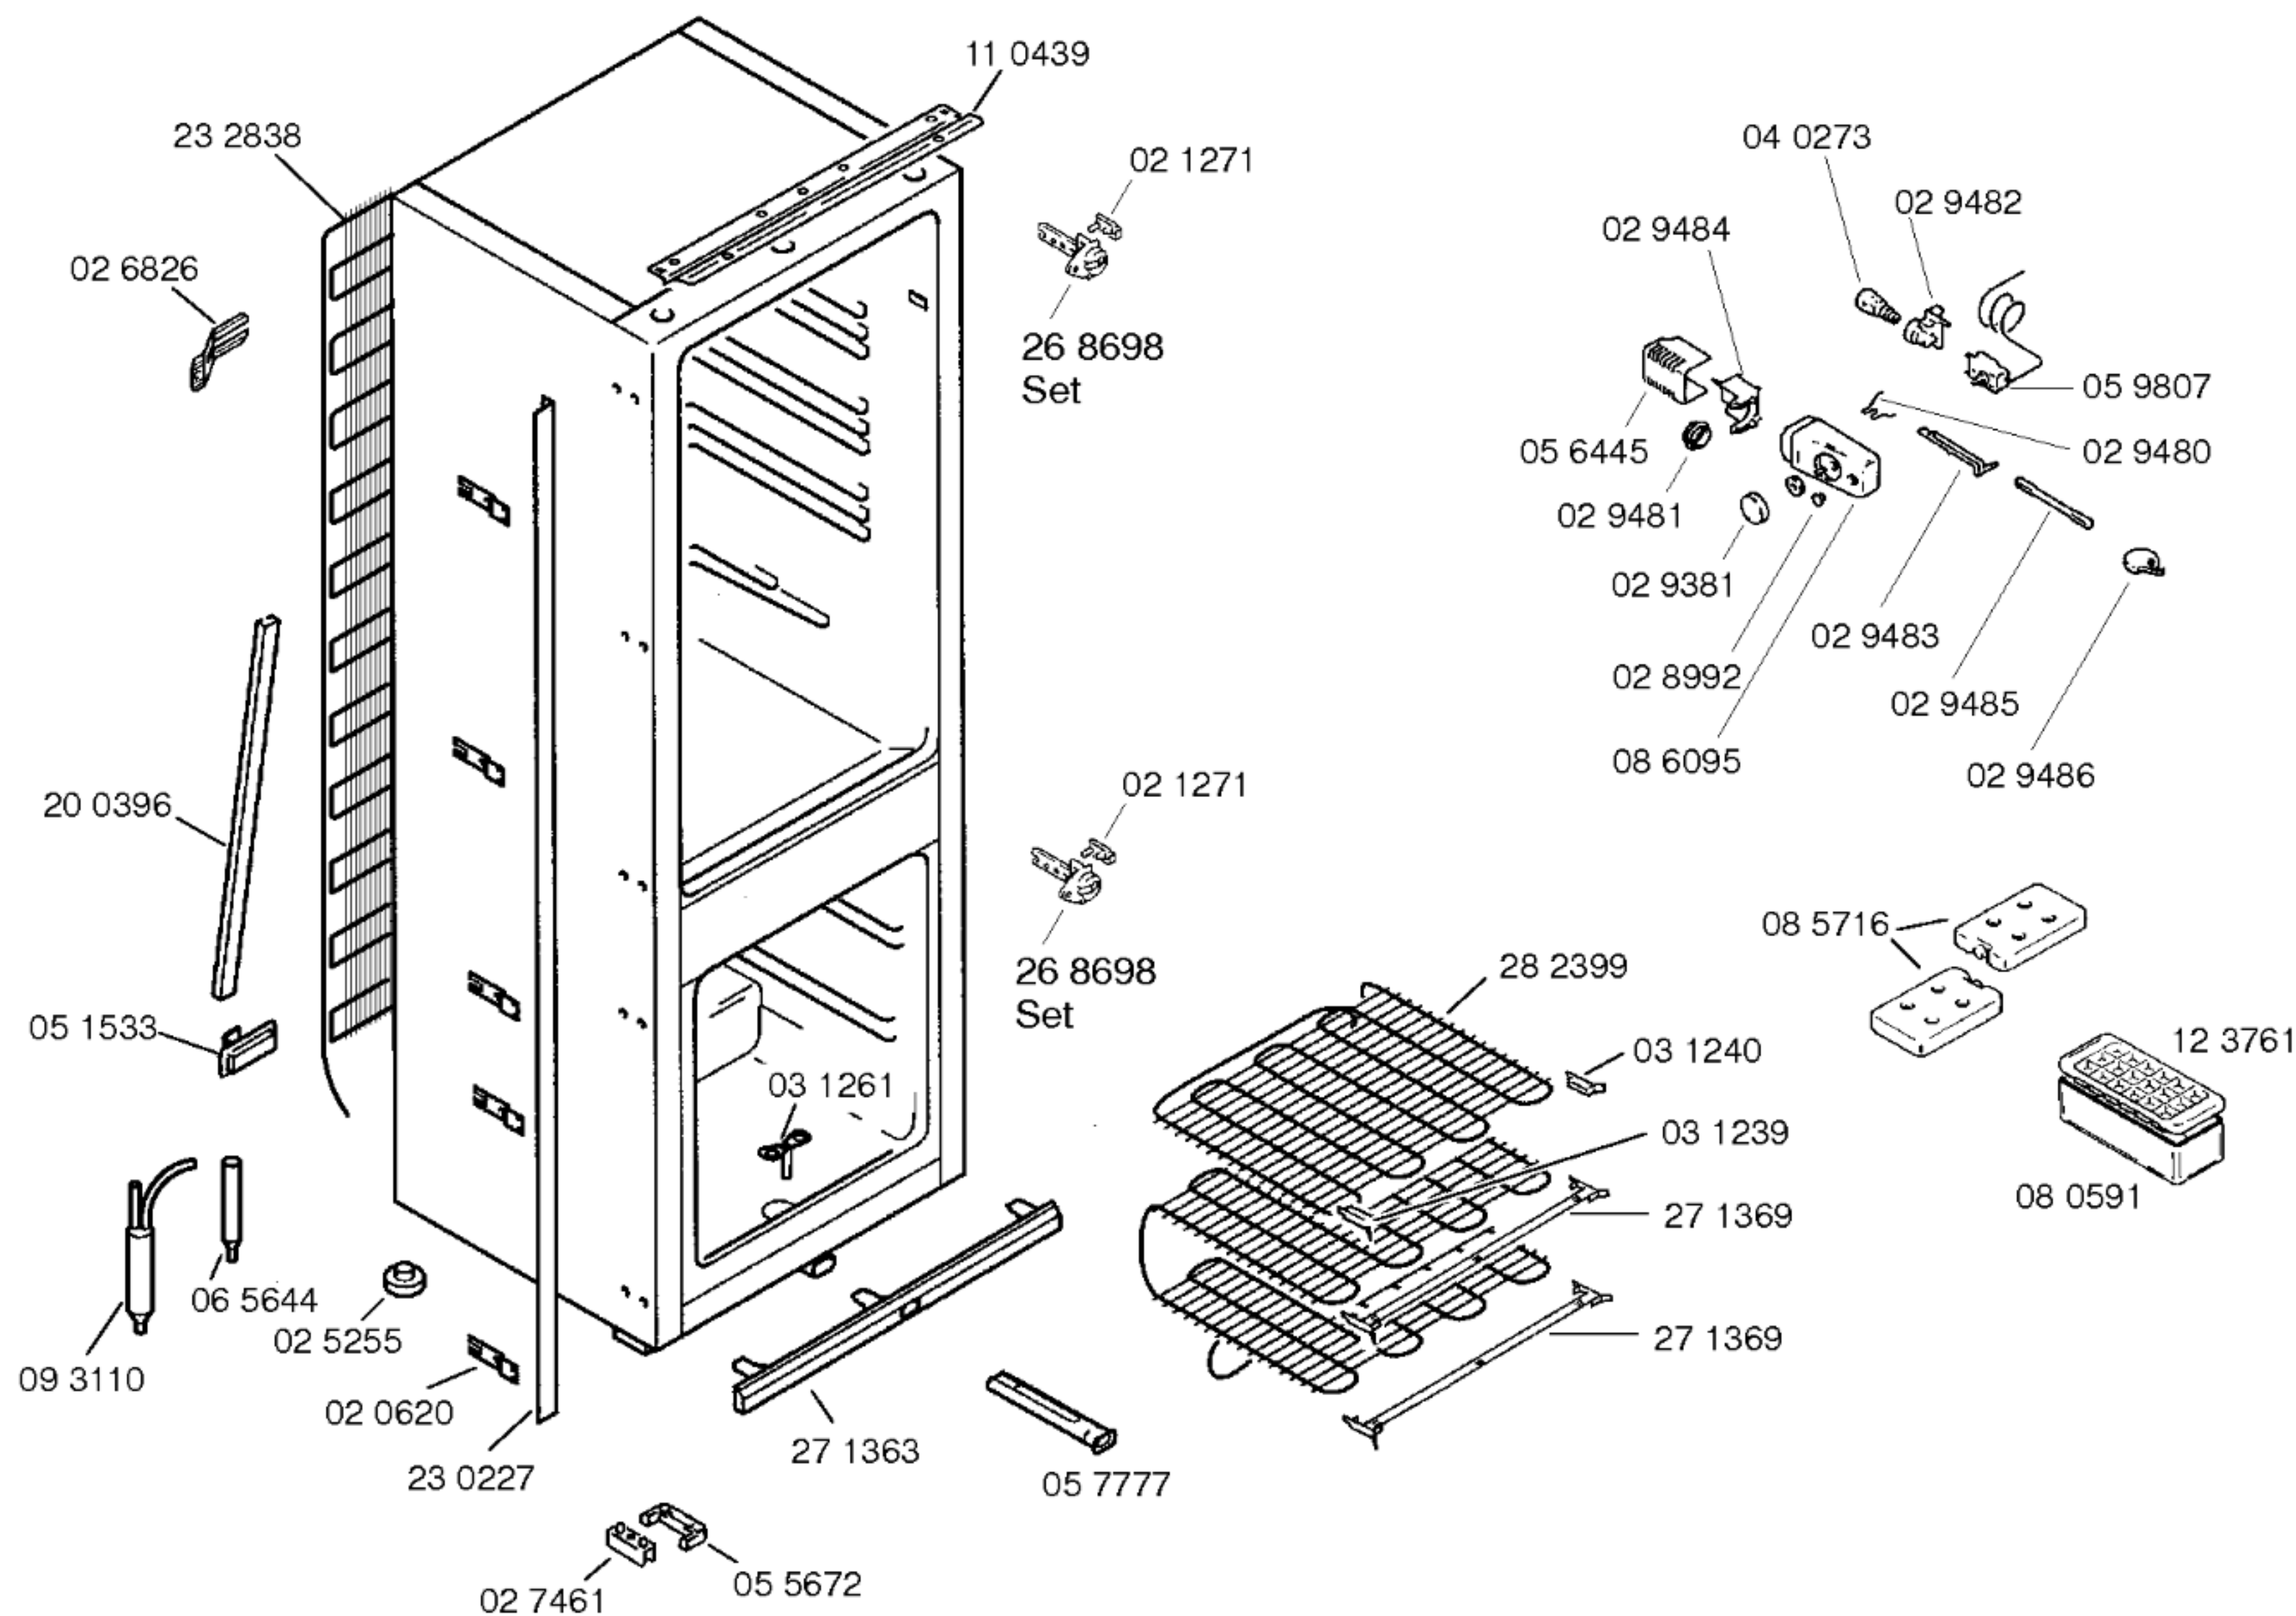


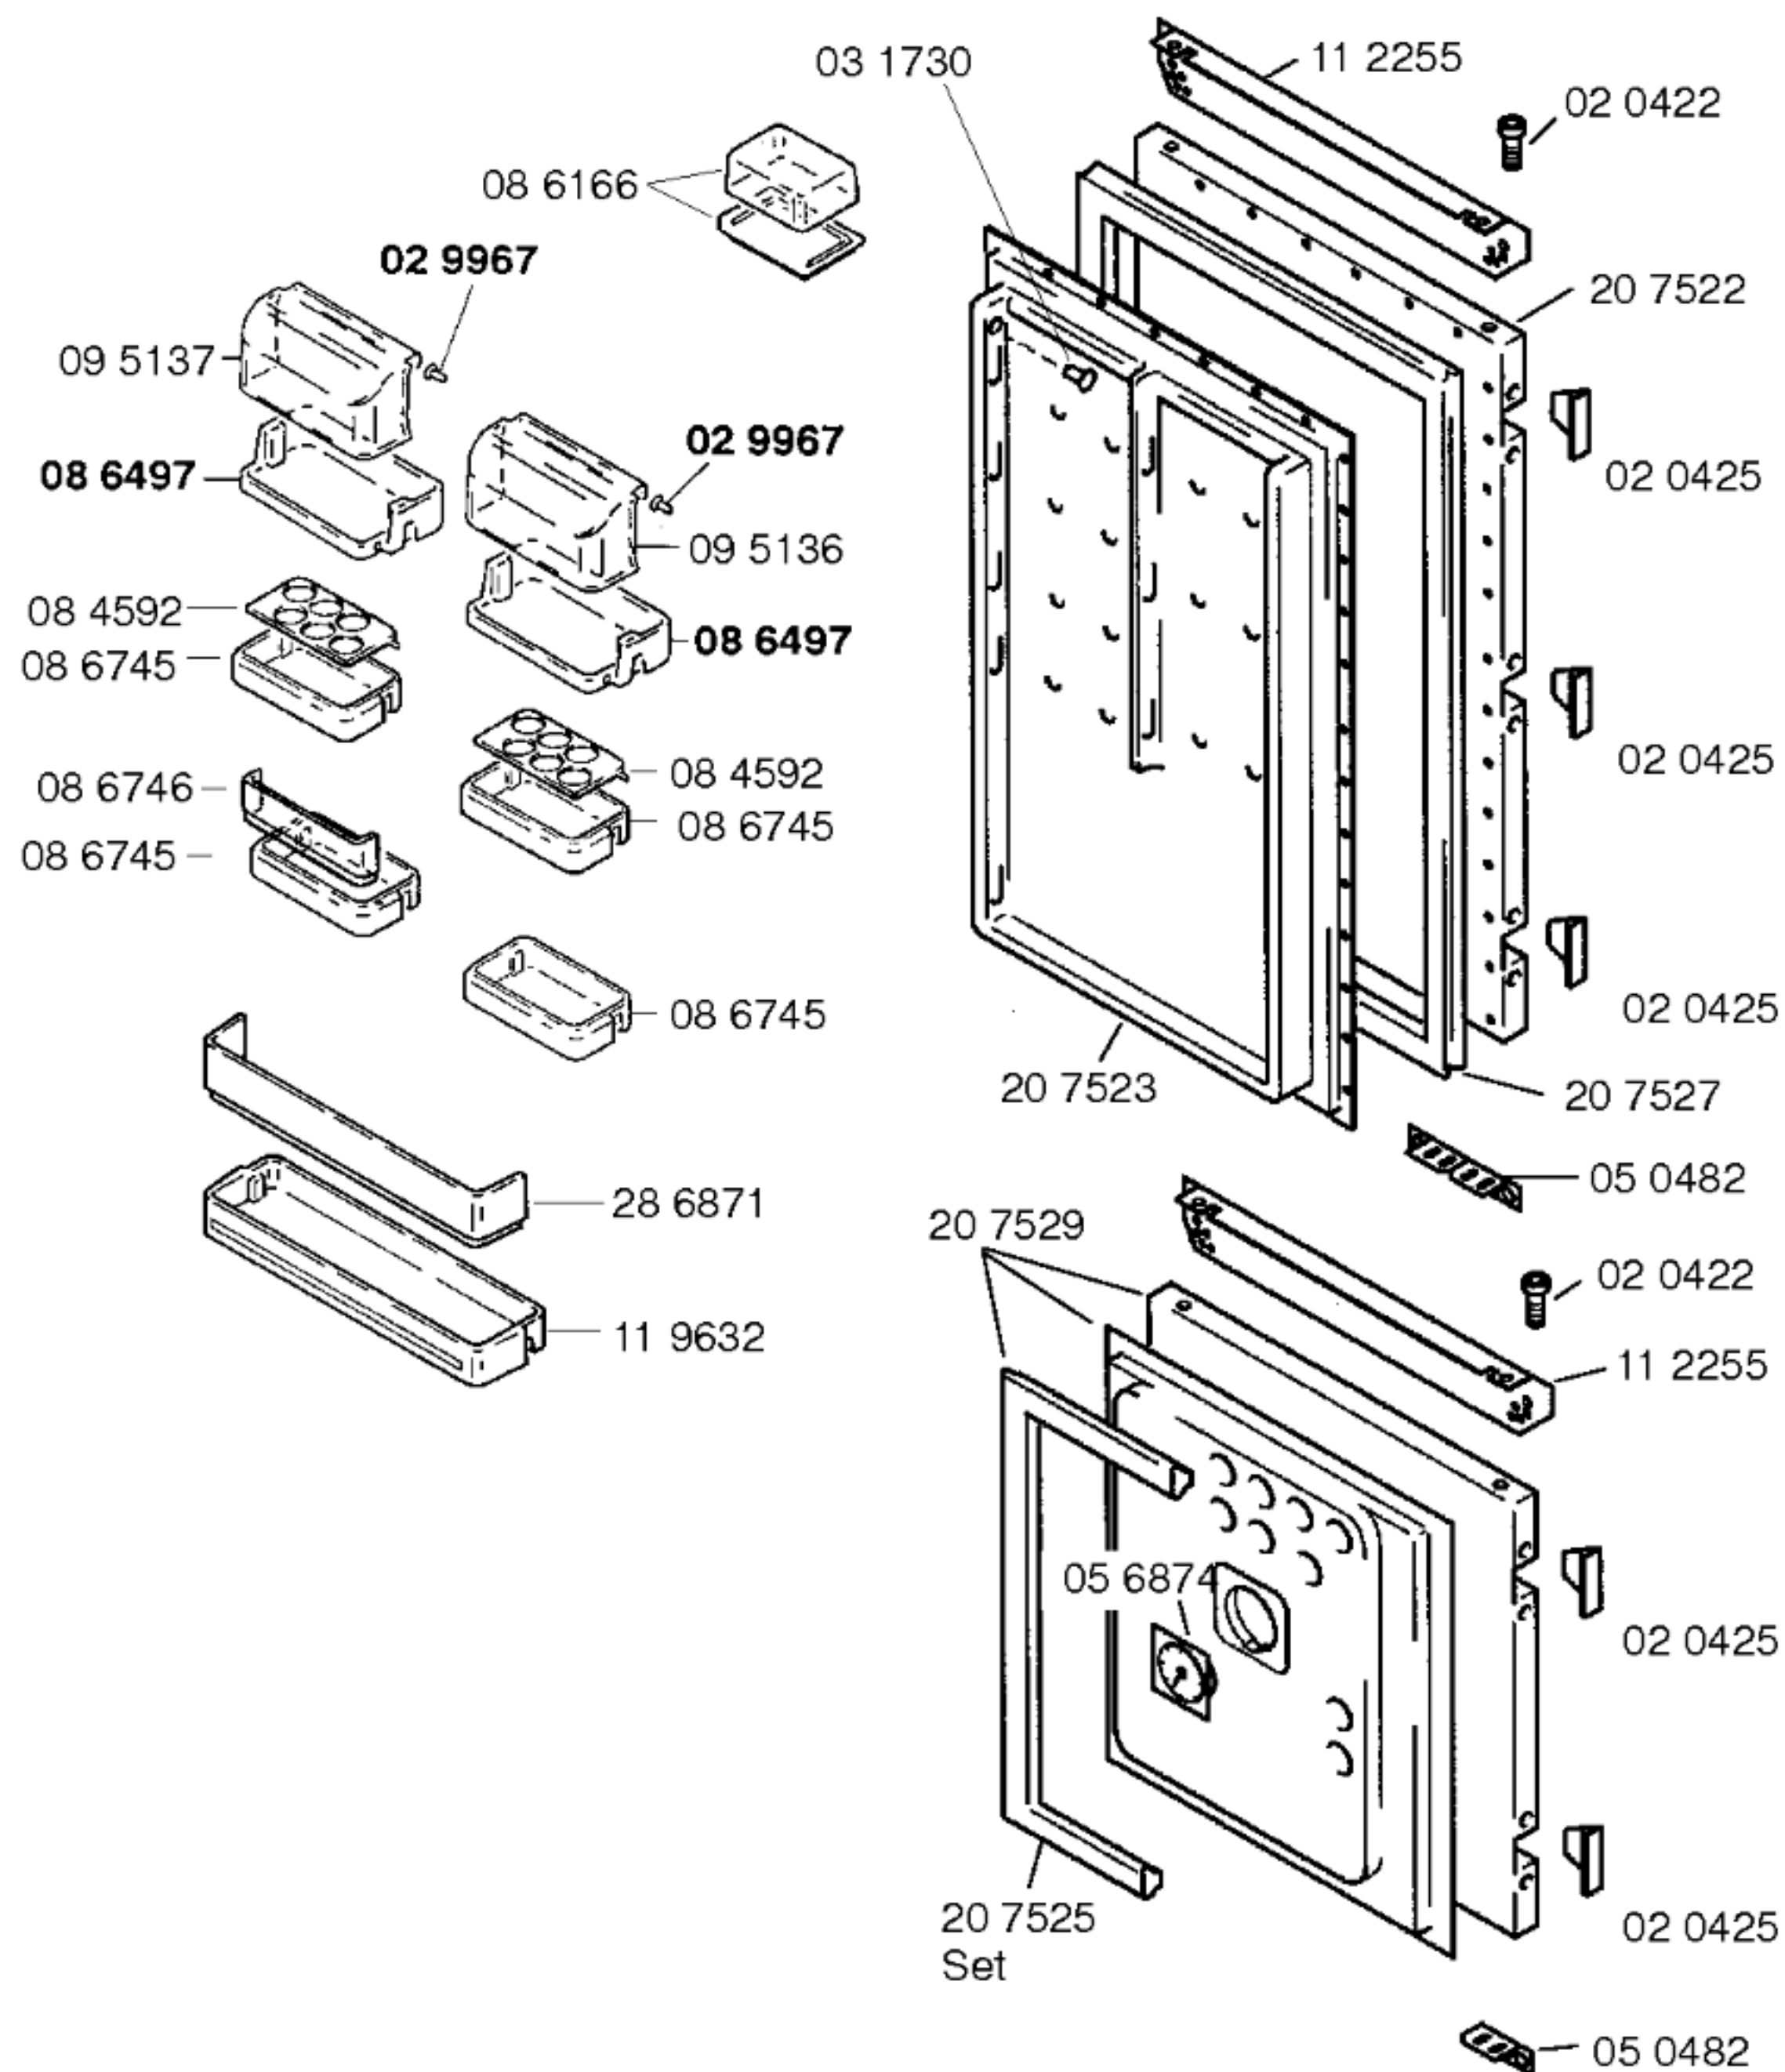


Gebrauchsanweisung
51 5681
(D,GB,F,I,NL,S,E,DK,N,,SF)

Montageanleitung
51 5546
(D,GB,F,I,NL,S,E,DK,N,,SF)

08 4137
Befestigungssatz
08 4136
Schraubensatz

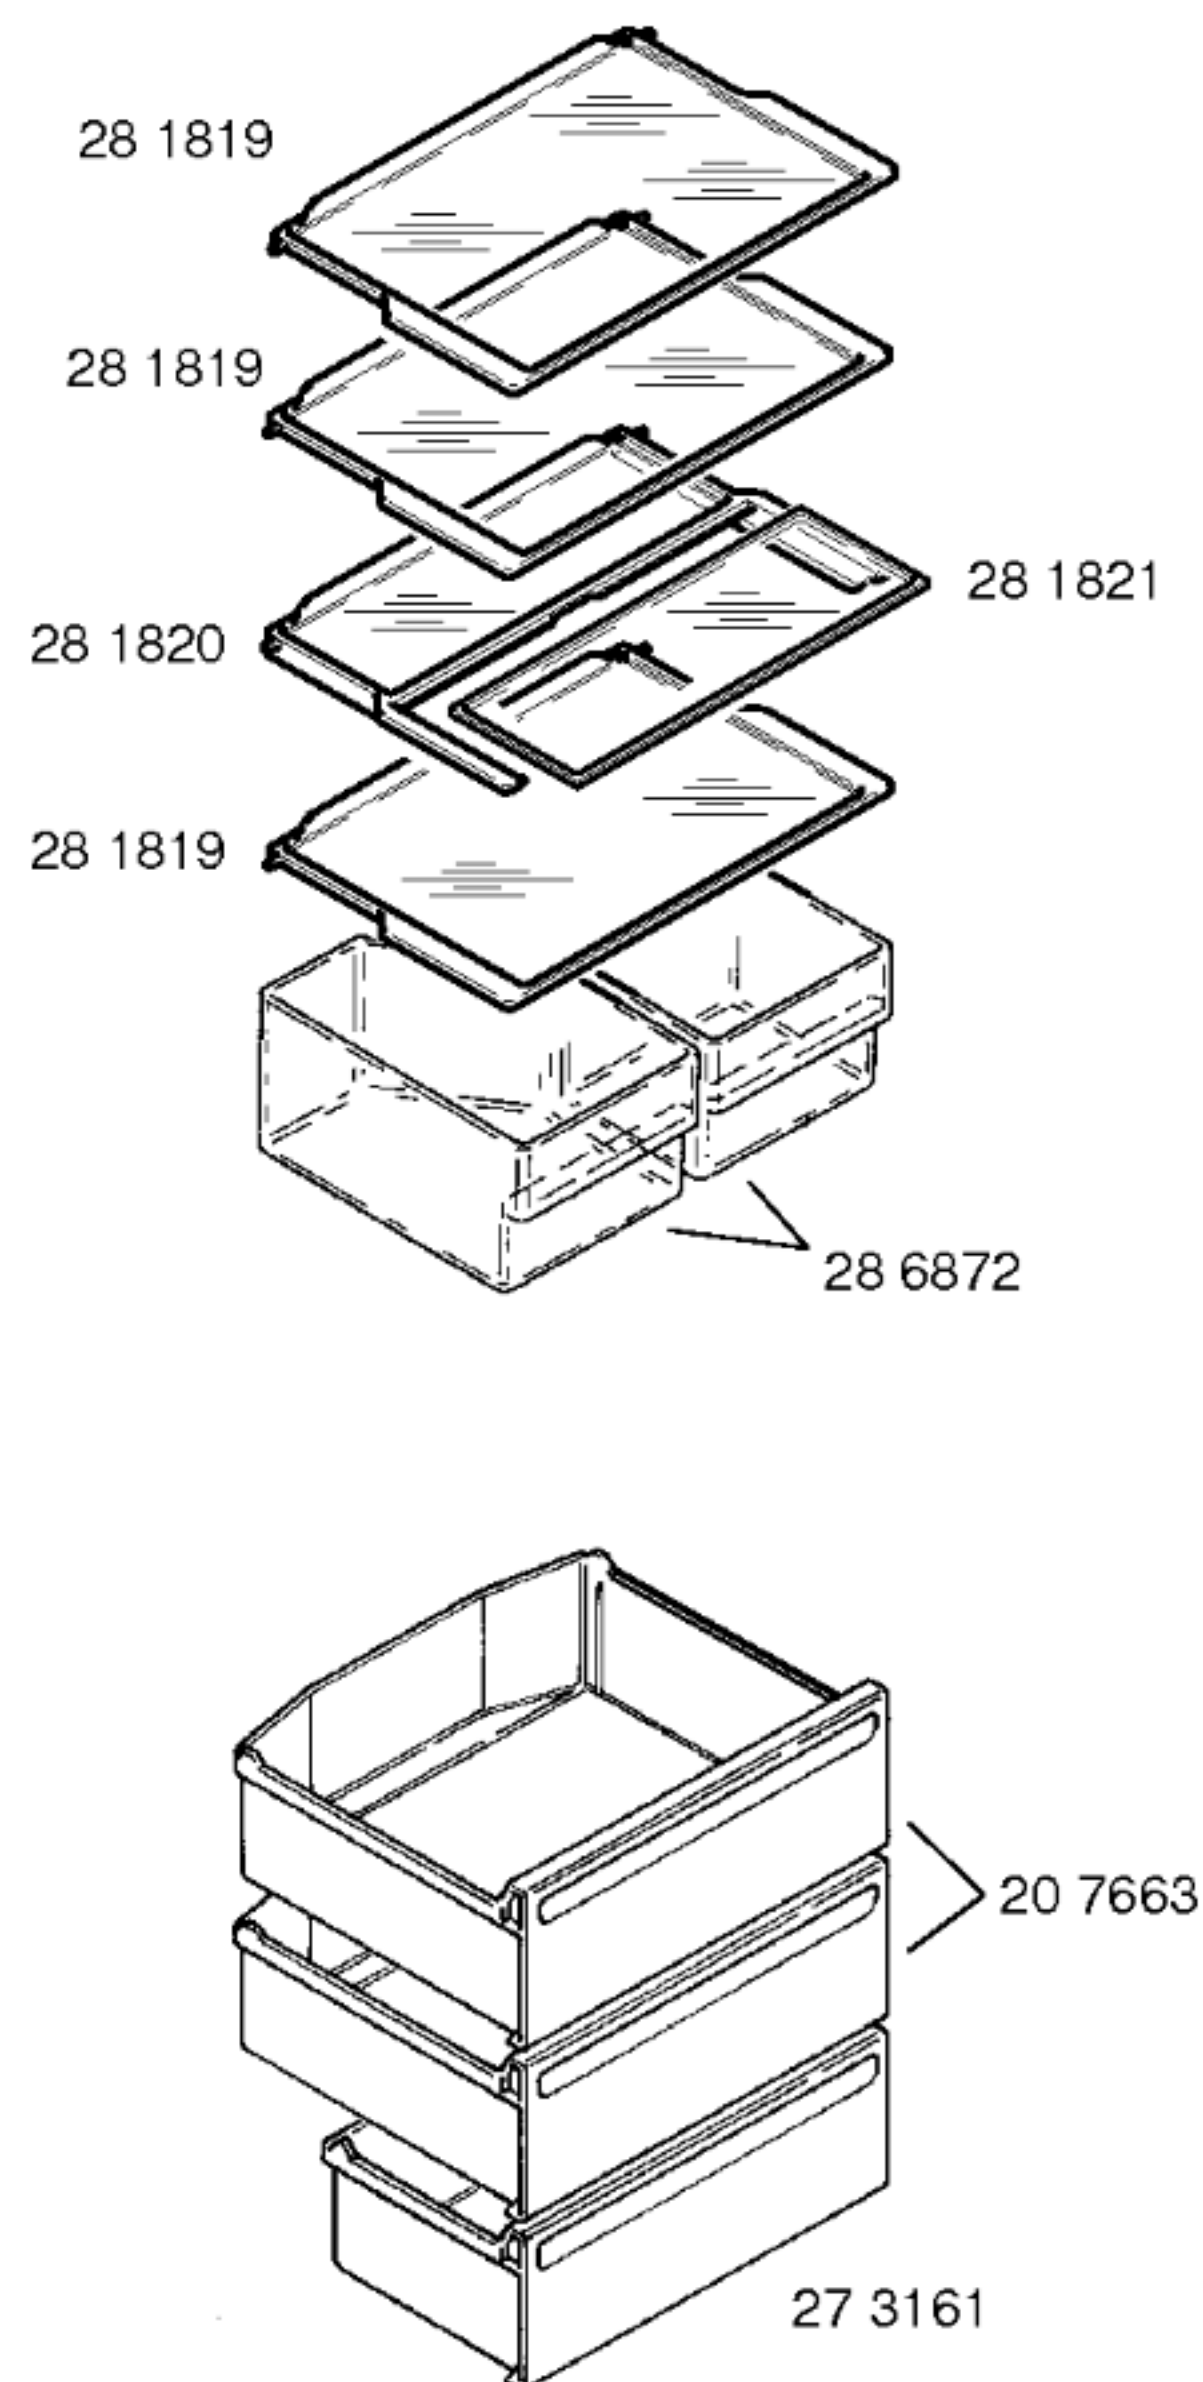

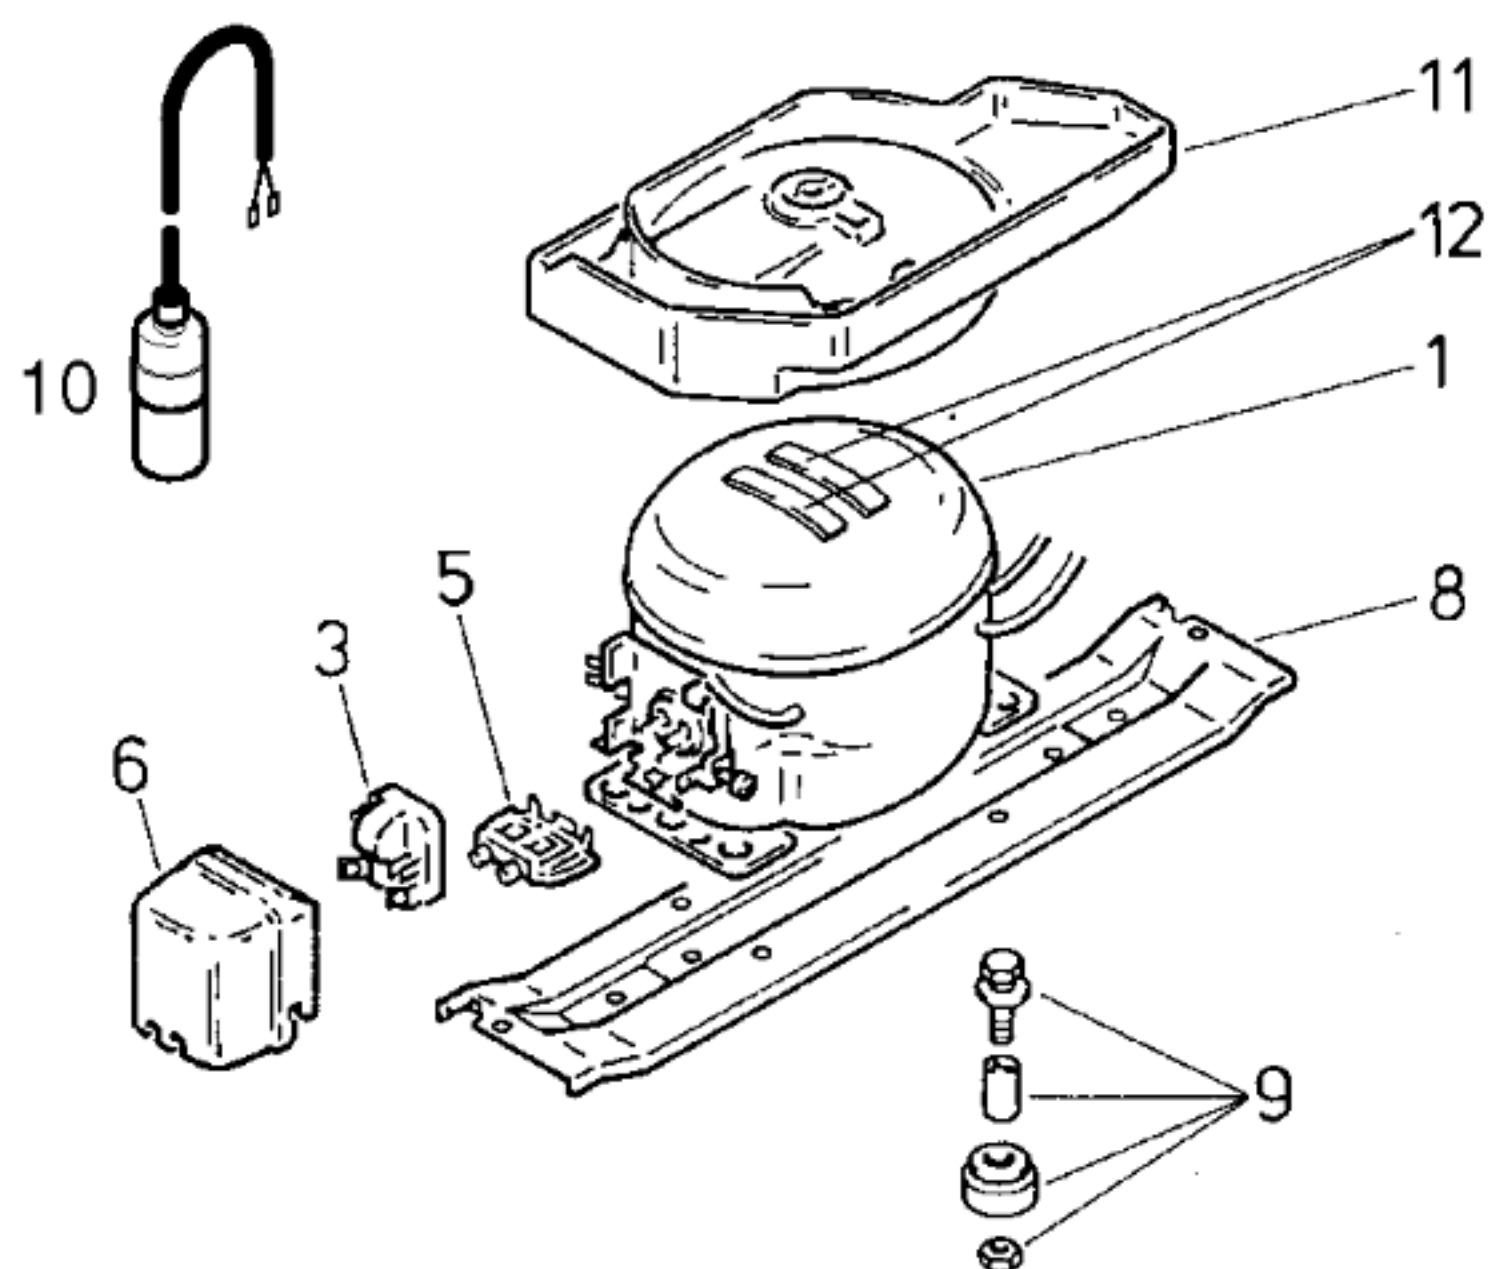

Pos.			
	Danfoss		
	NLE 15 K		
1	14 1311		
2			
3	15 1055		
4			
5	15 0760		
6	15 1072		
7			
8	28 1825		
9	05 0166		
10	05 9467		
11	28 6924		
12	05 6008		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Danfoss		
Typ/Type		NLE 15 K		
Förderleistung/Delivery/Débit	l/h	2637		
Anlaufstrom/Starting current/Cour. de démarrage	A			
Widerstand/Resistance/Résistance	Ha/main/prin. Ω			
	Hi/aux Ω			
Temp.-Regler/Thermostat		WHF/TPC		
Typ/Type		TF57F1K		
Reglerstellung/Position		kalt warm		
Schaltwerte/Switching values/	„ein“ $^{\circ}\text{C}$	+ 5 + 5		
Valeurs de commutation	„aus“	-31 -20		
	(„abtauen“ od.) „alarm“			
Füllmenge/Fill.quantity/Charge	R600a g	720		
Anschlußwert/Conn.load/Puiss. connectée	W	150		
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance	Ω			
Leistung/Power/Puissance	W			
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance	Ω			
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance	Ω			
Spannung/Voltage/Tension	V			