


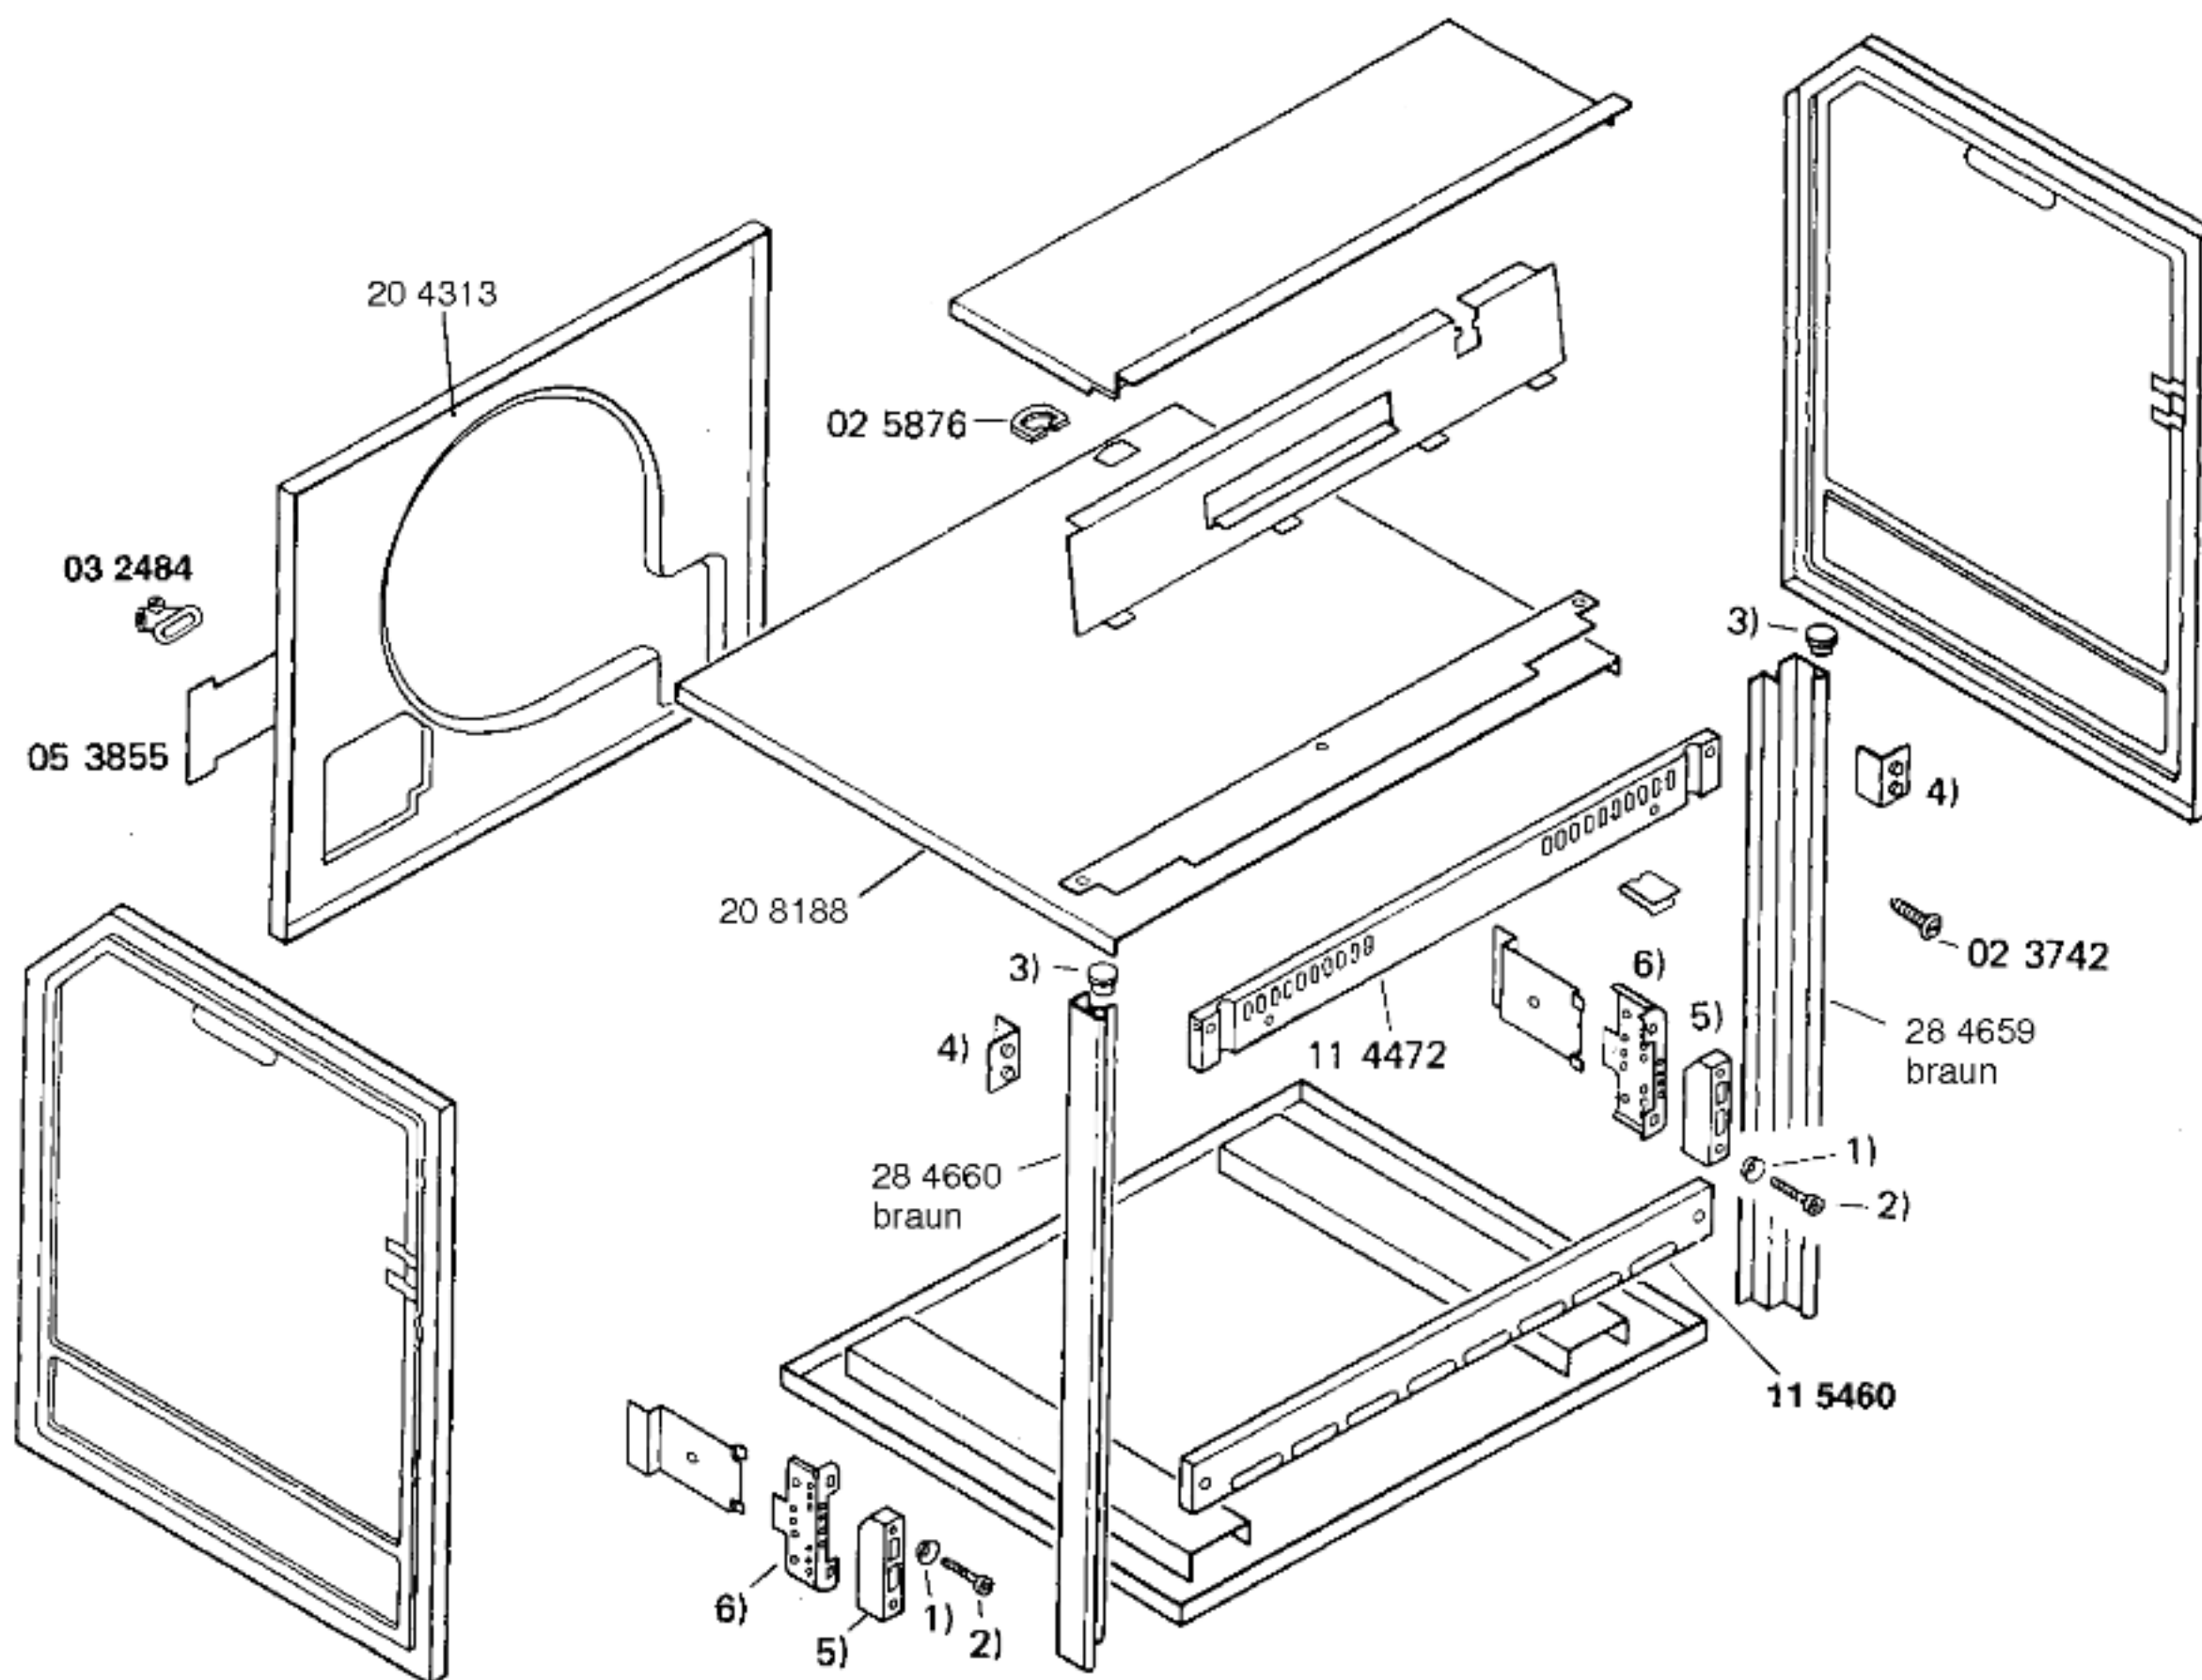


Gebrauchsanweisung
51 7063
(D,GB,F,NL,I,E)


Tips und Rezepte
51 2001
(D)


- 1) 05 3176
- 2) 02 1947
- 3) 02 5991
- 4) 02 4343
- 5) 06 8511
- 6) 08 3566




Zubehör:

Back- und
Bratrost normal
Z1400X1
11 2990
Back- und
Bratrost eng
Z1410X1
11 3018
Grillpfanne
Z1200X1
23 0488
Email-Backblech
Z1310X1
11 3903
Alu-Backblech
Z1300X1
11 2989
Bratenblech
Z1510X0
11 5816
Brotbackstein
Z1910X0

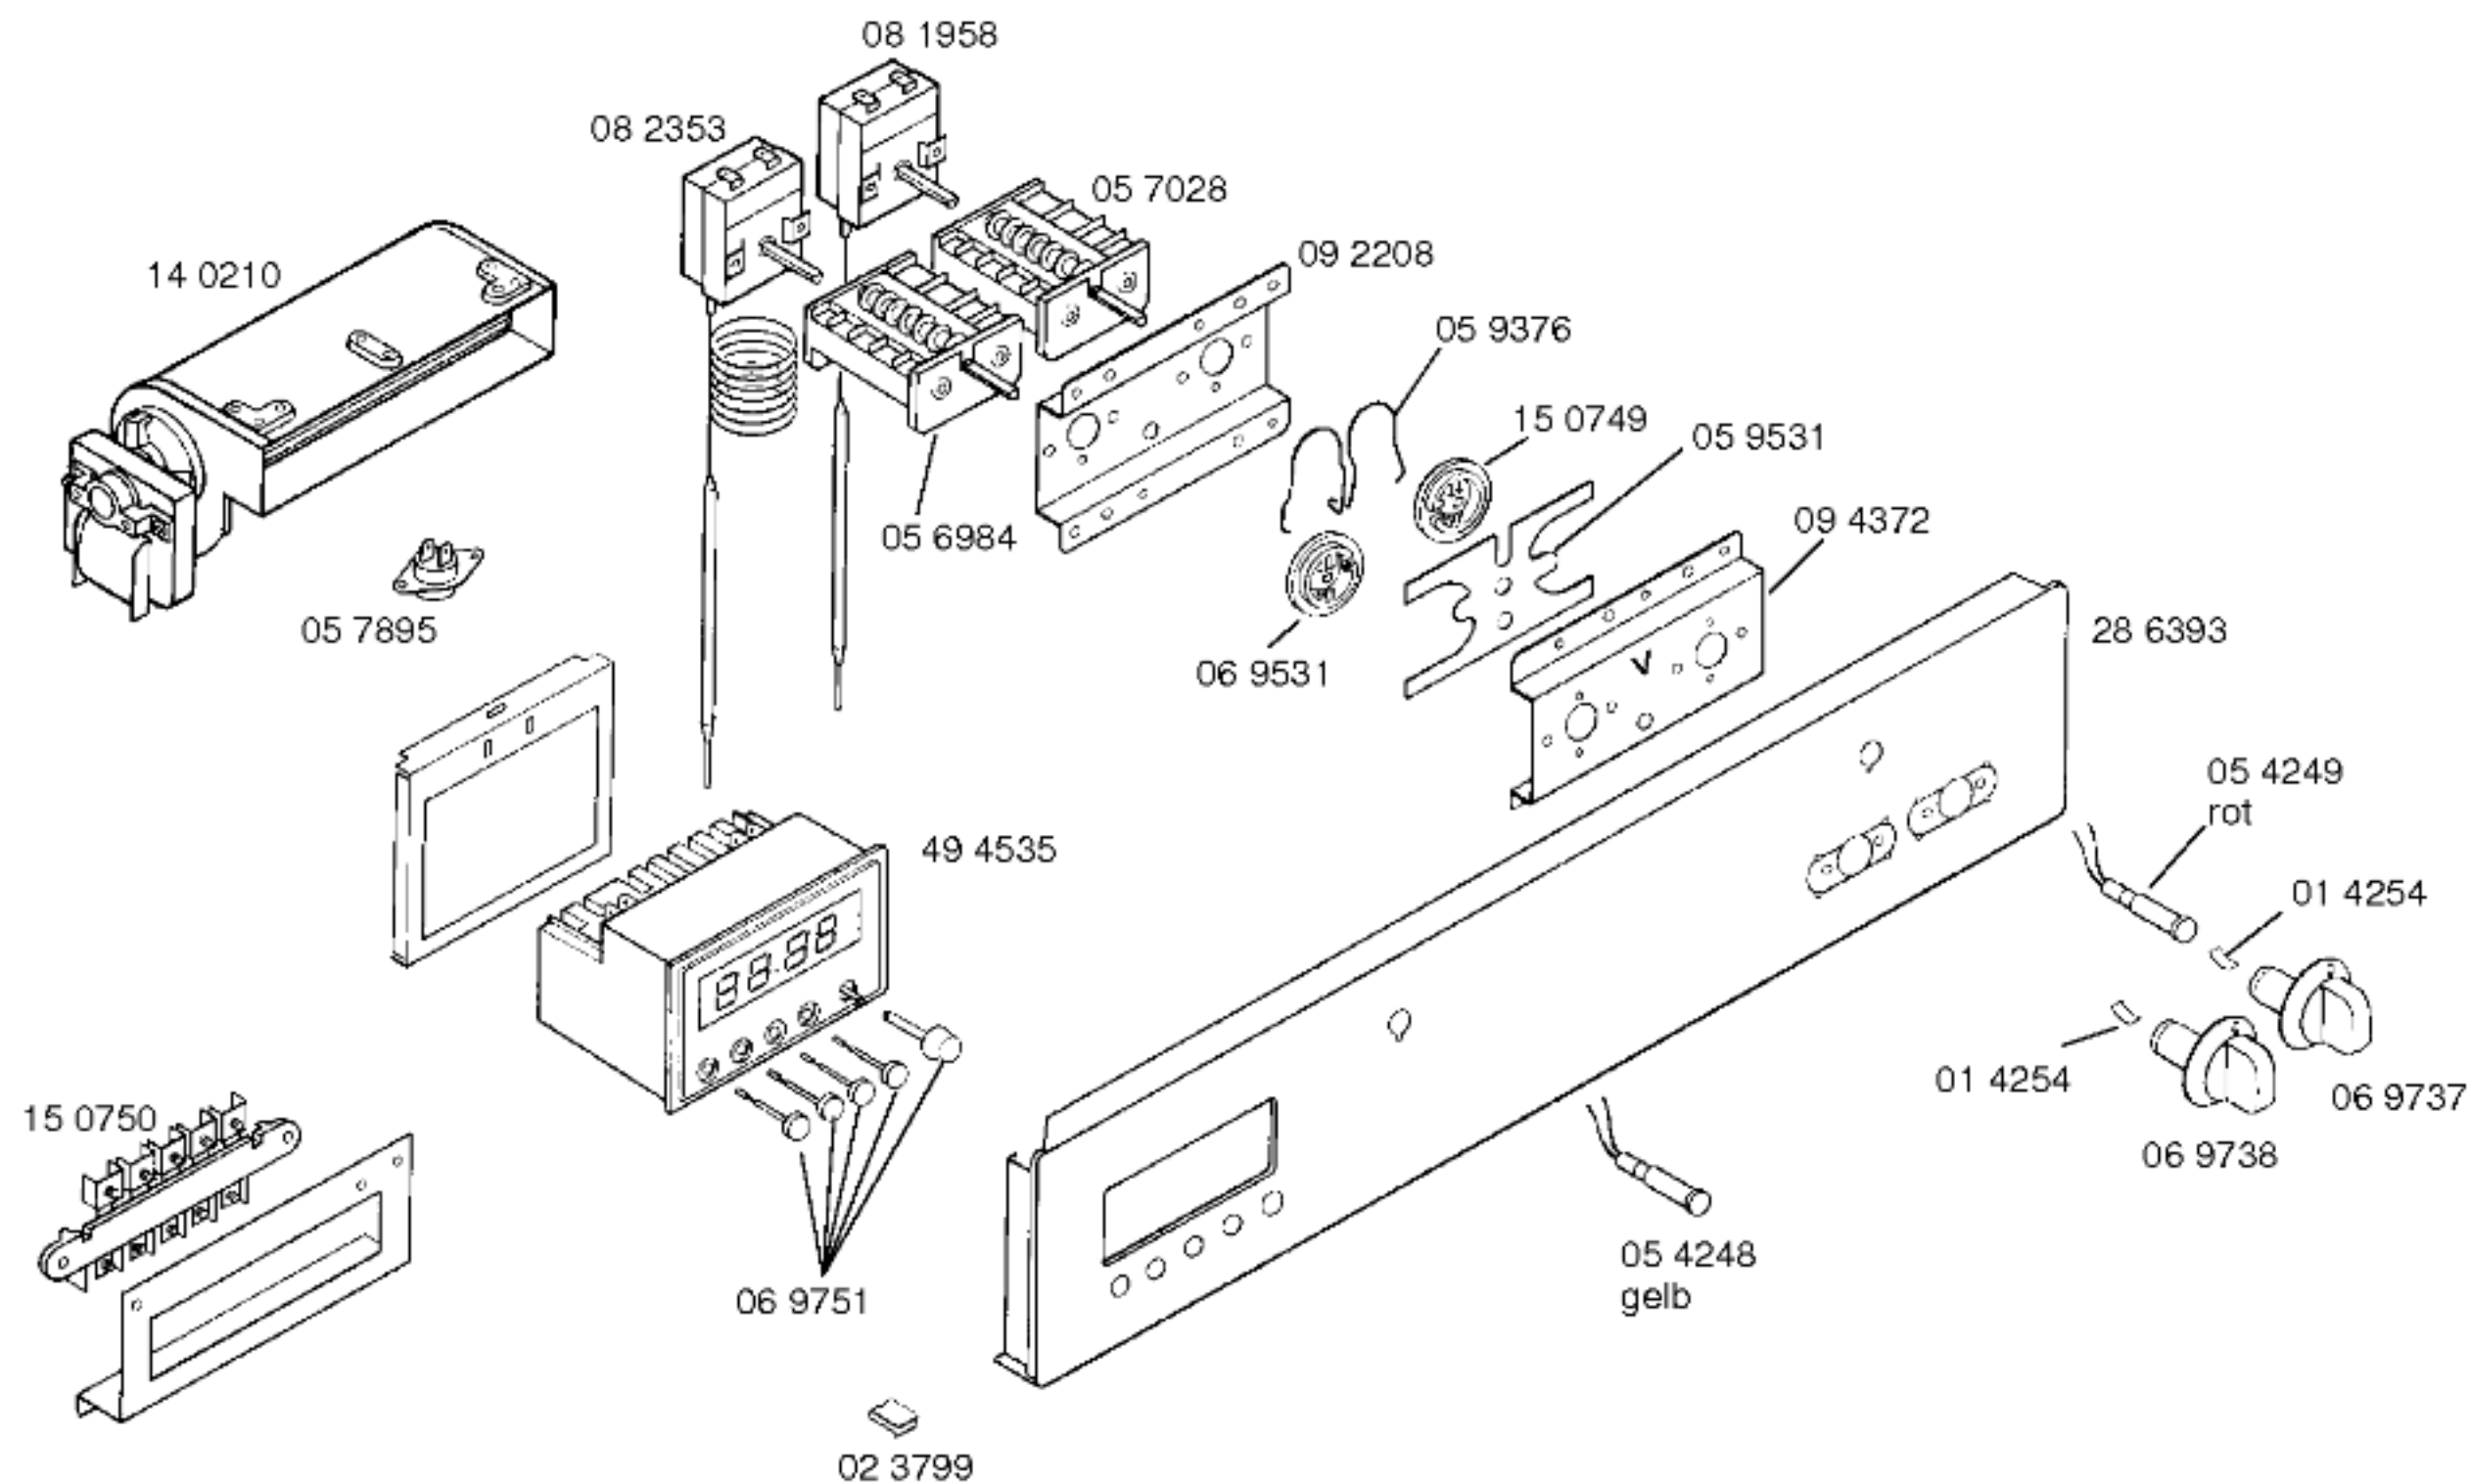

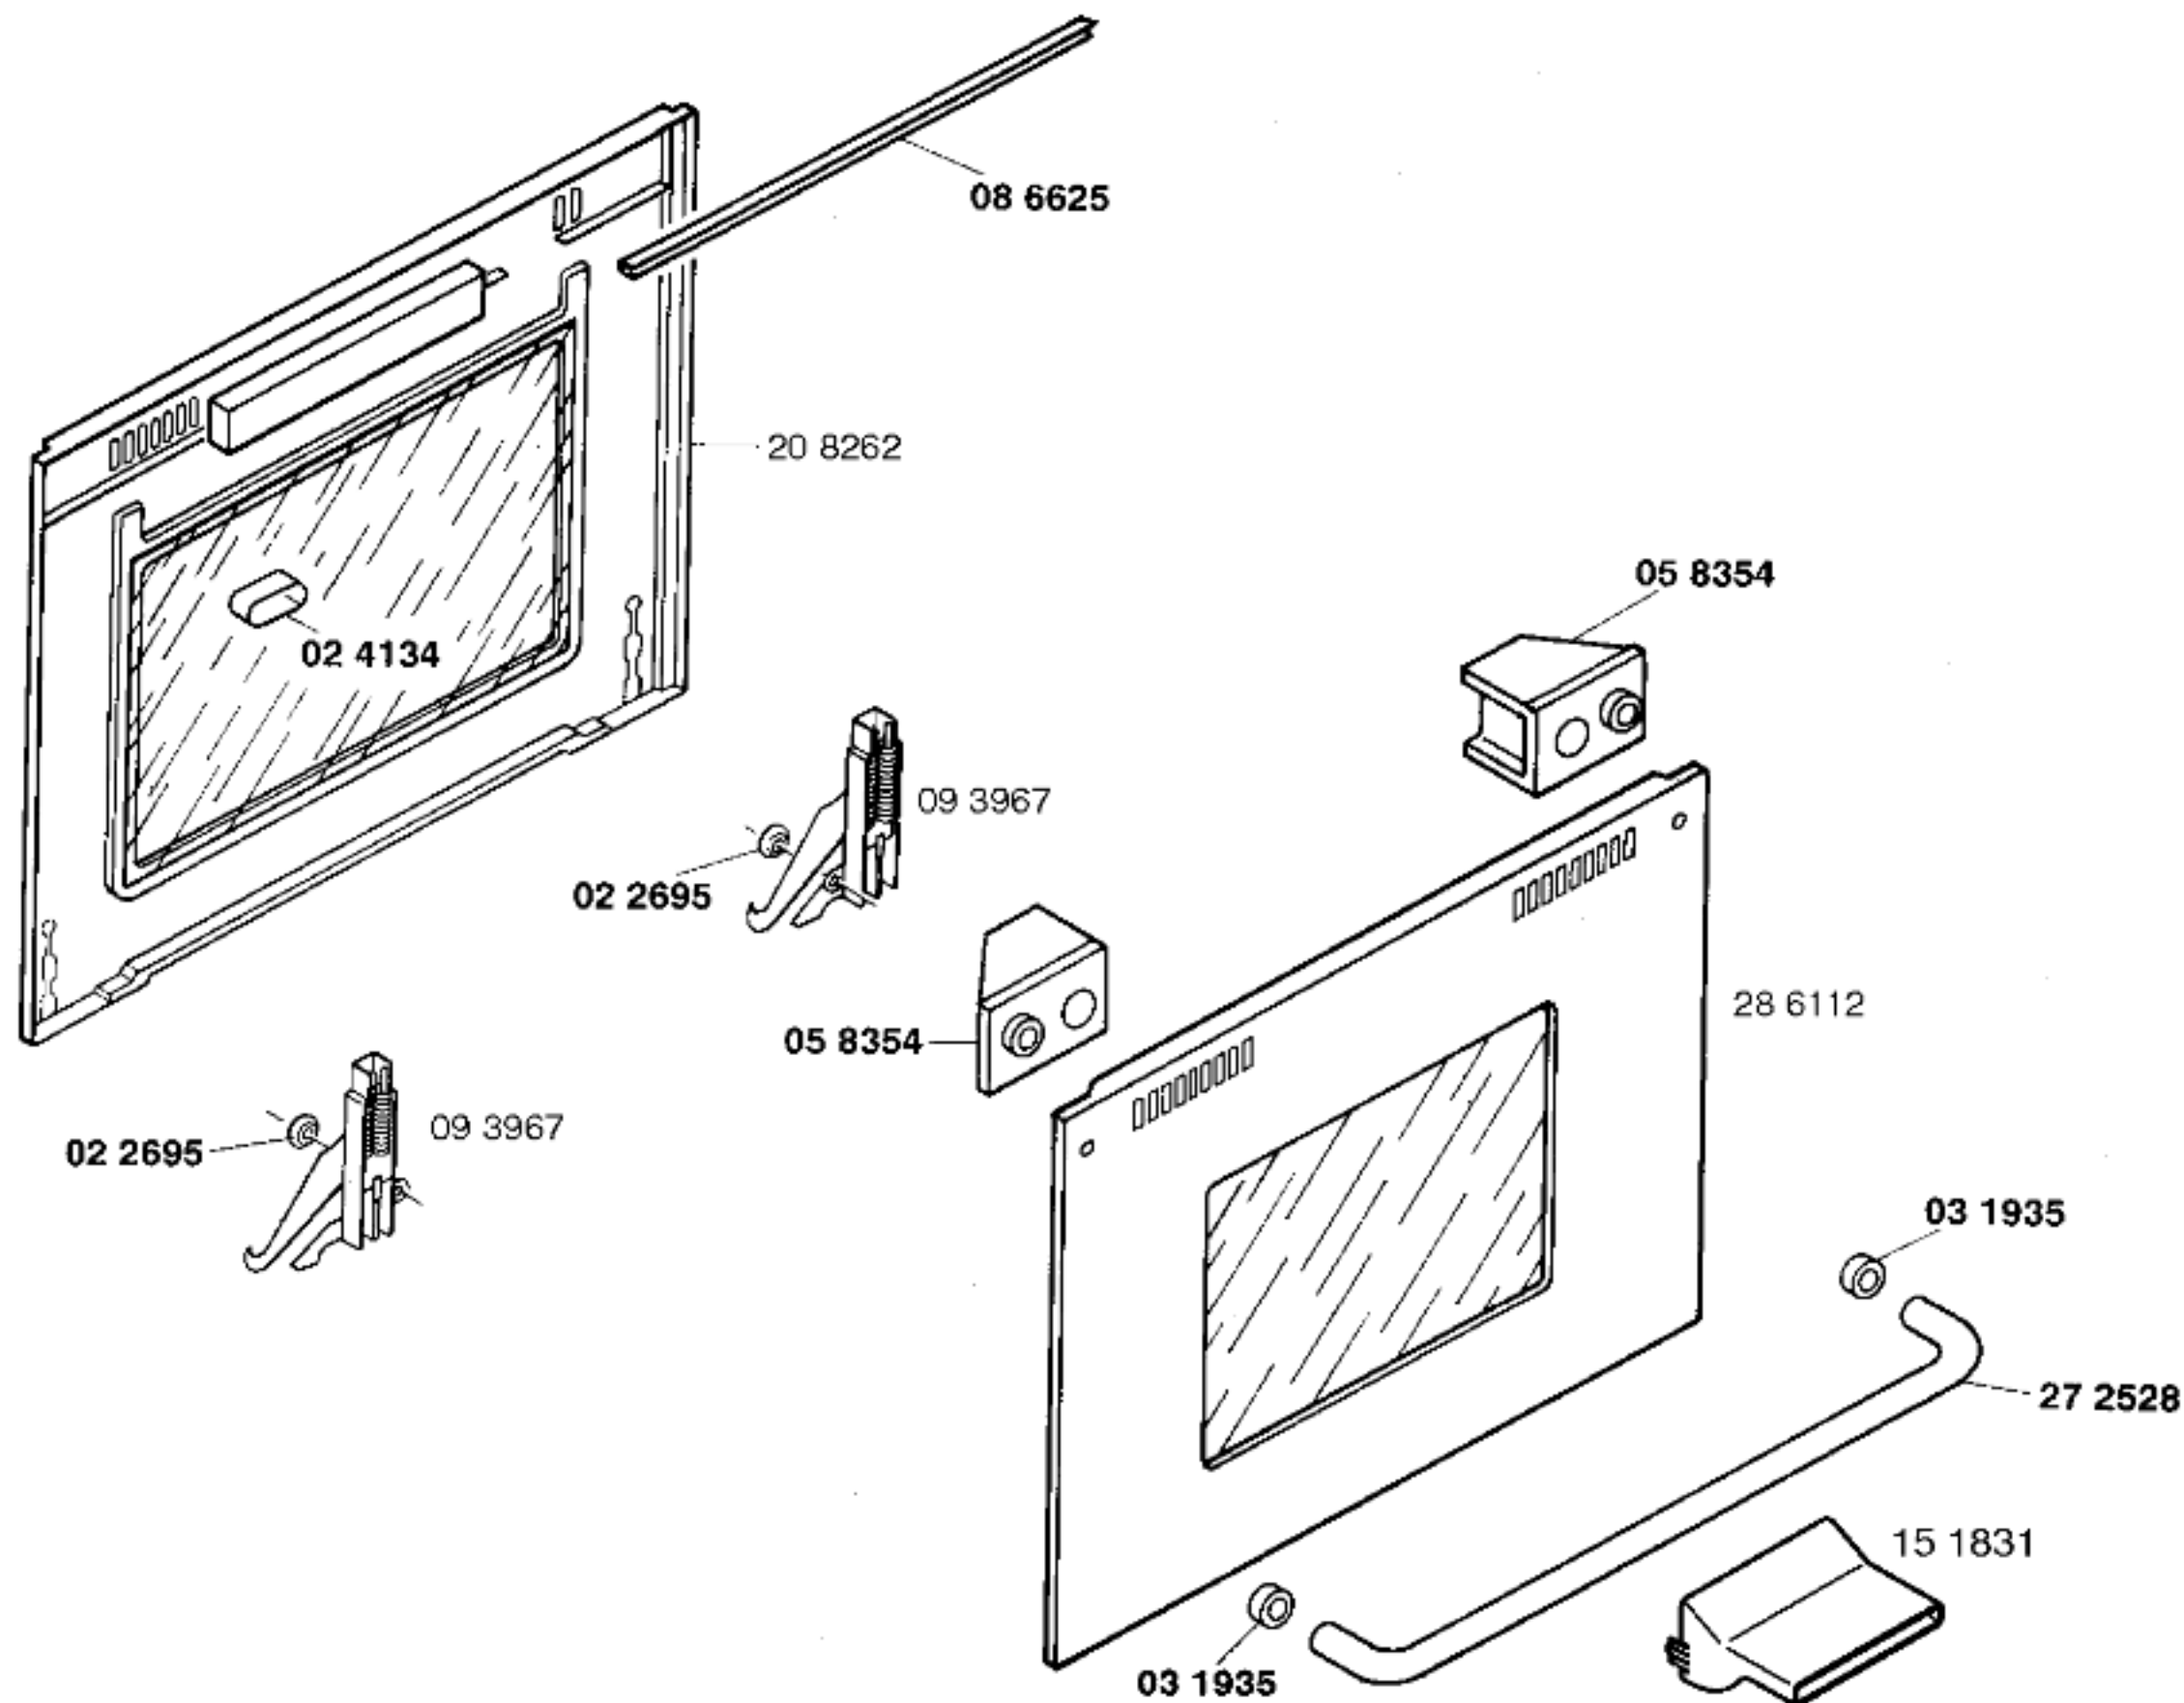

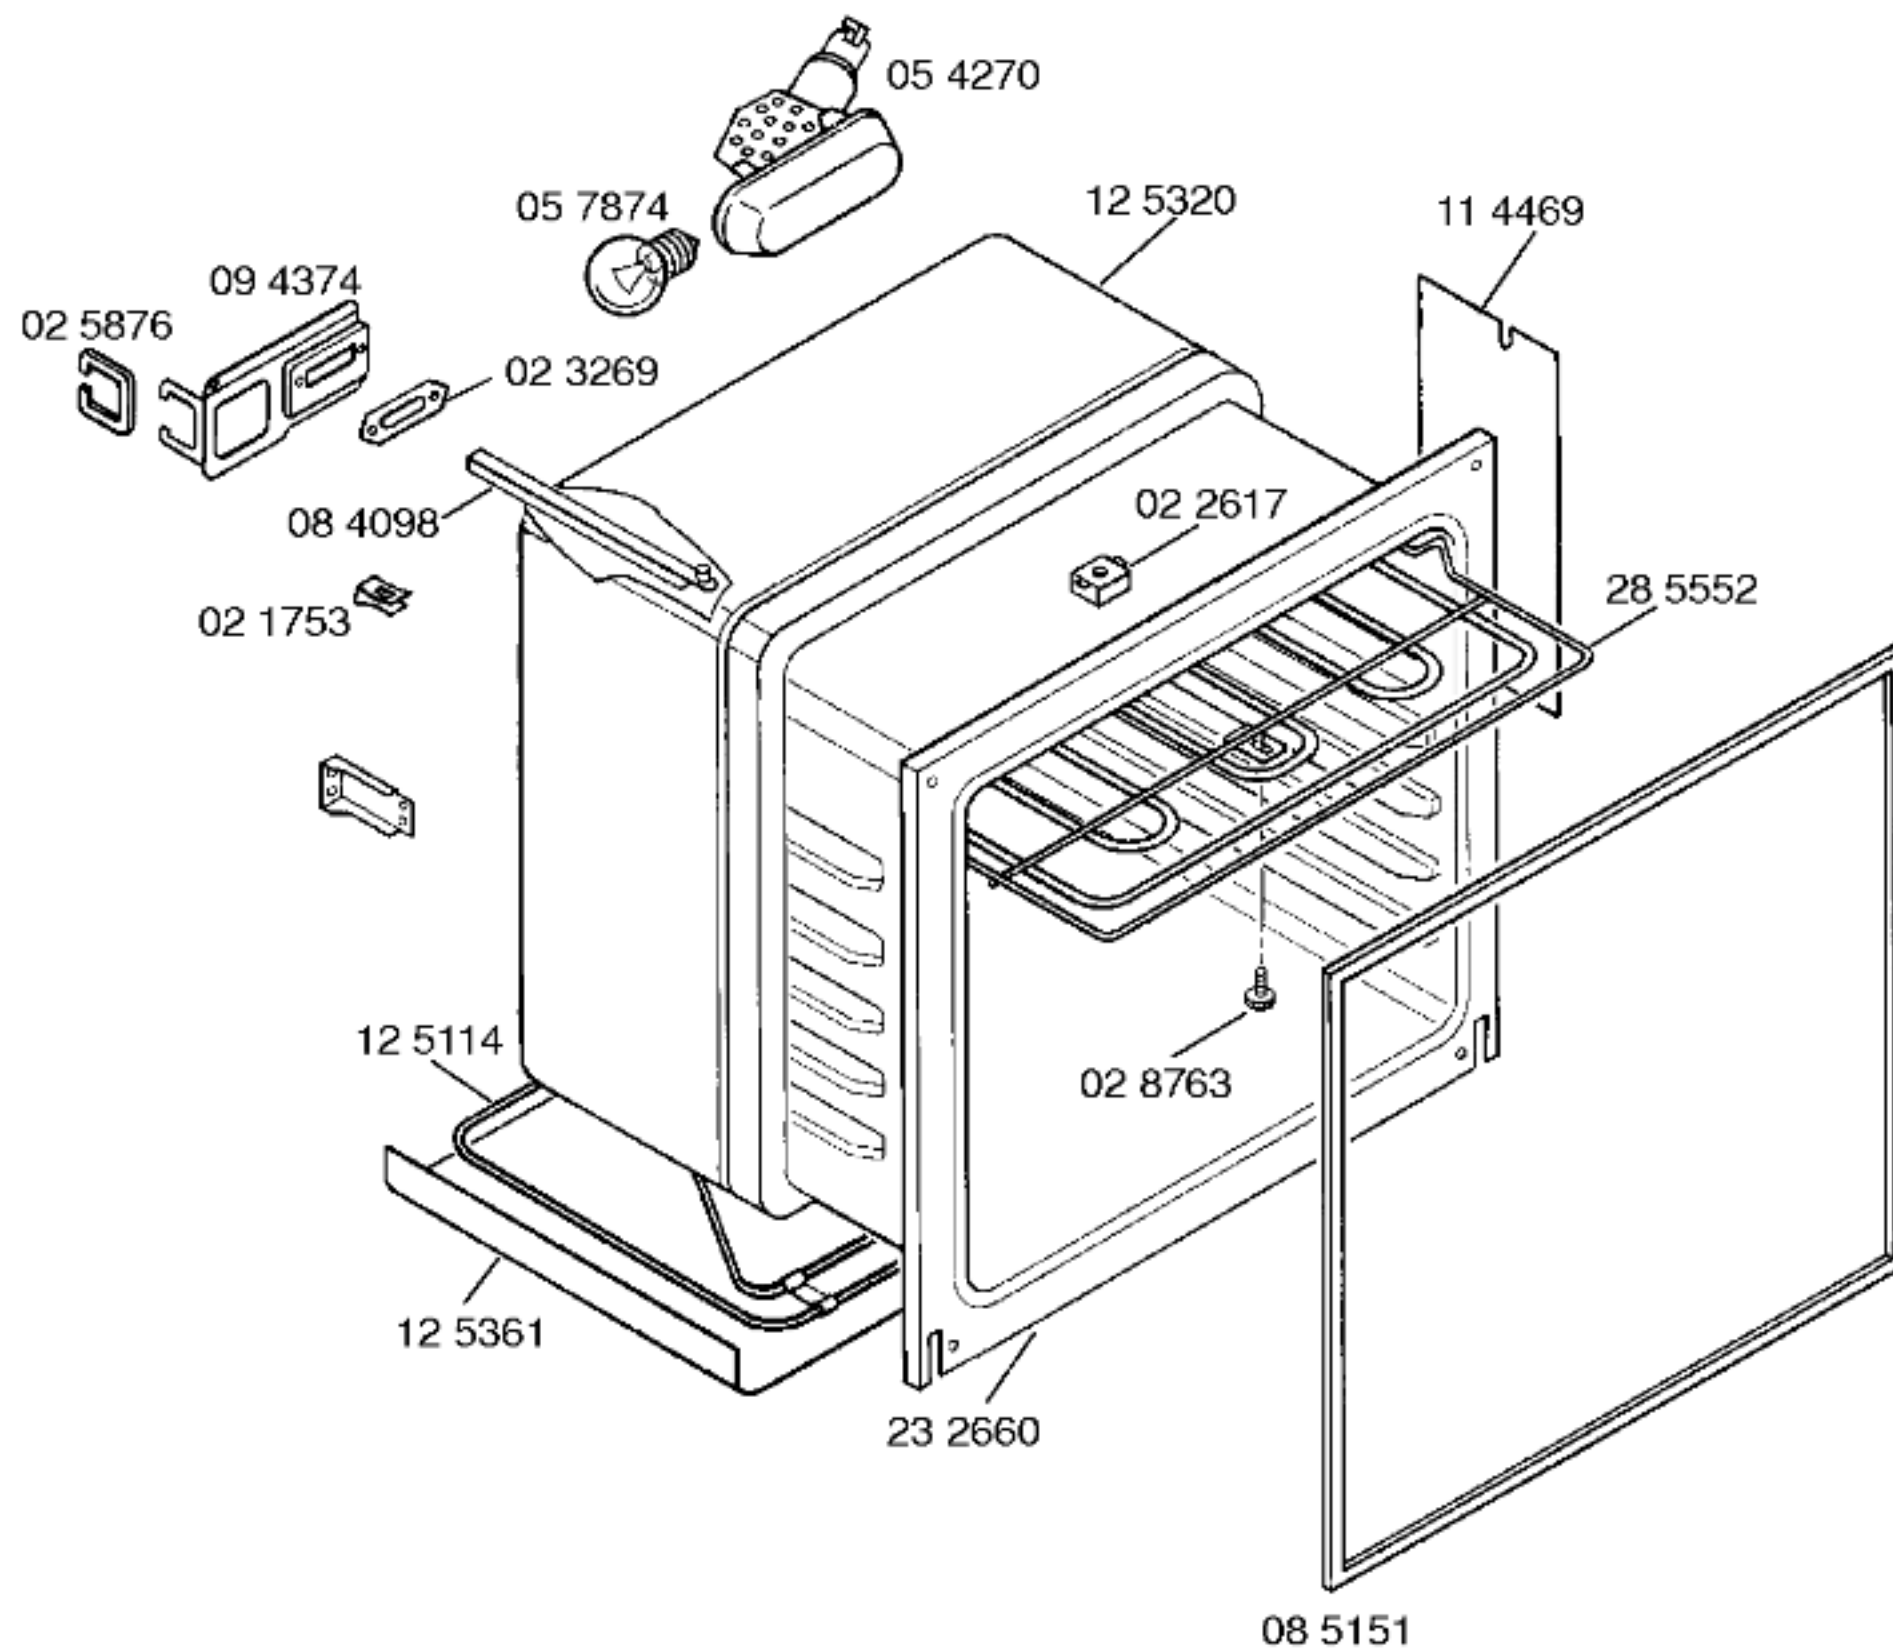

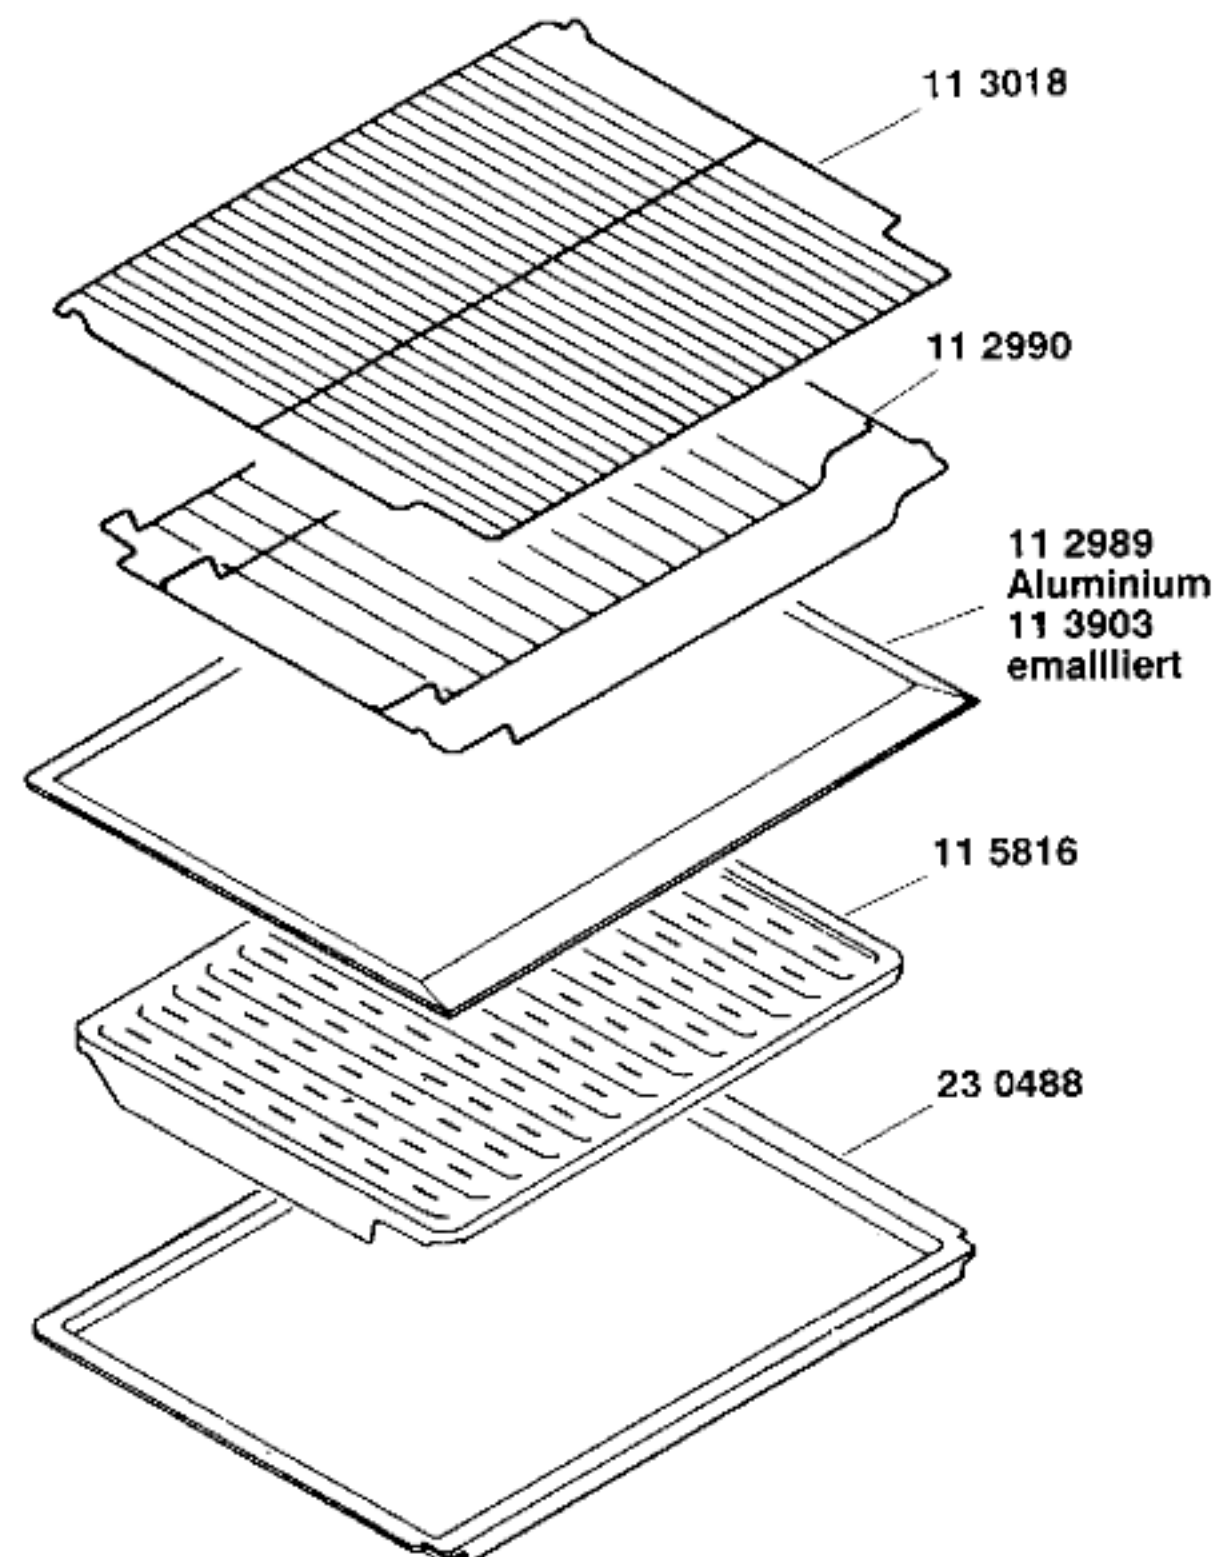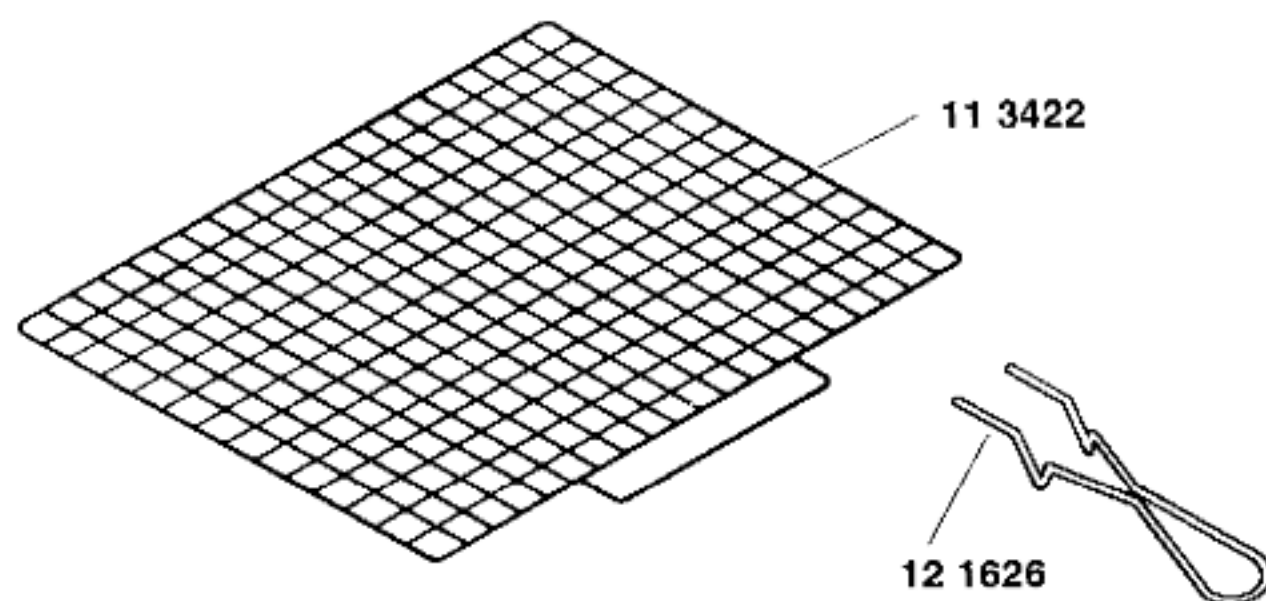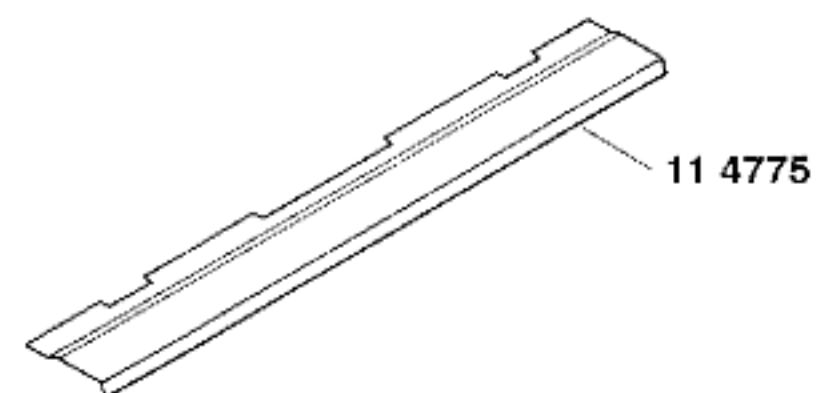

1) 08 4701
kompl.

