



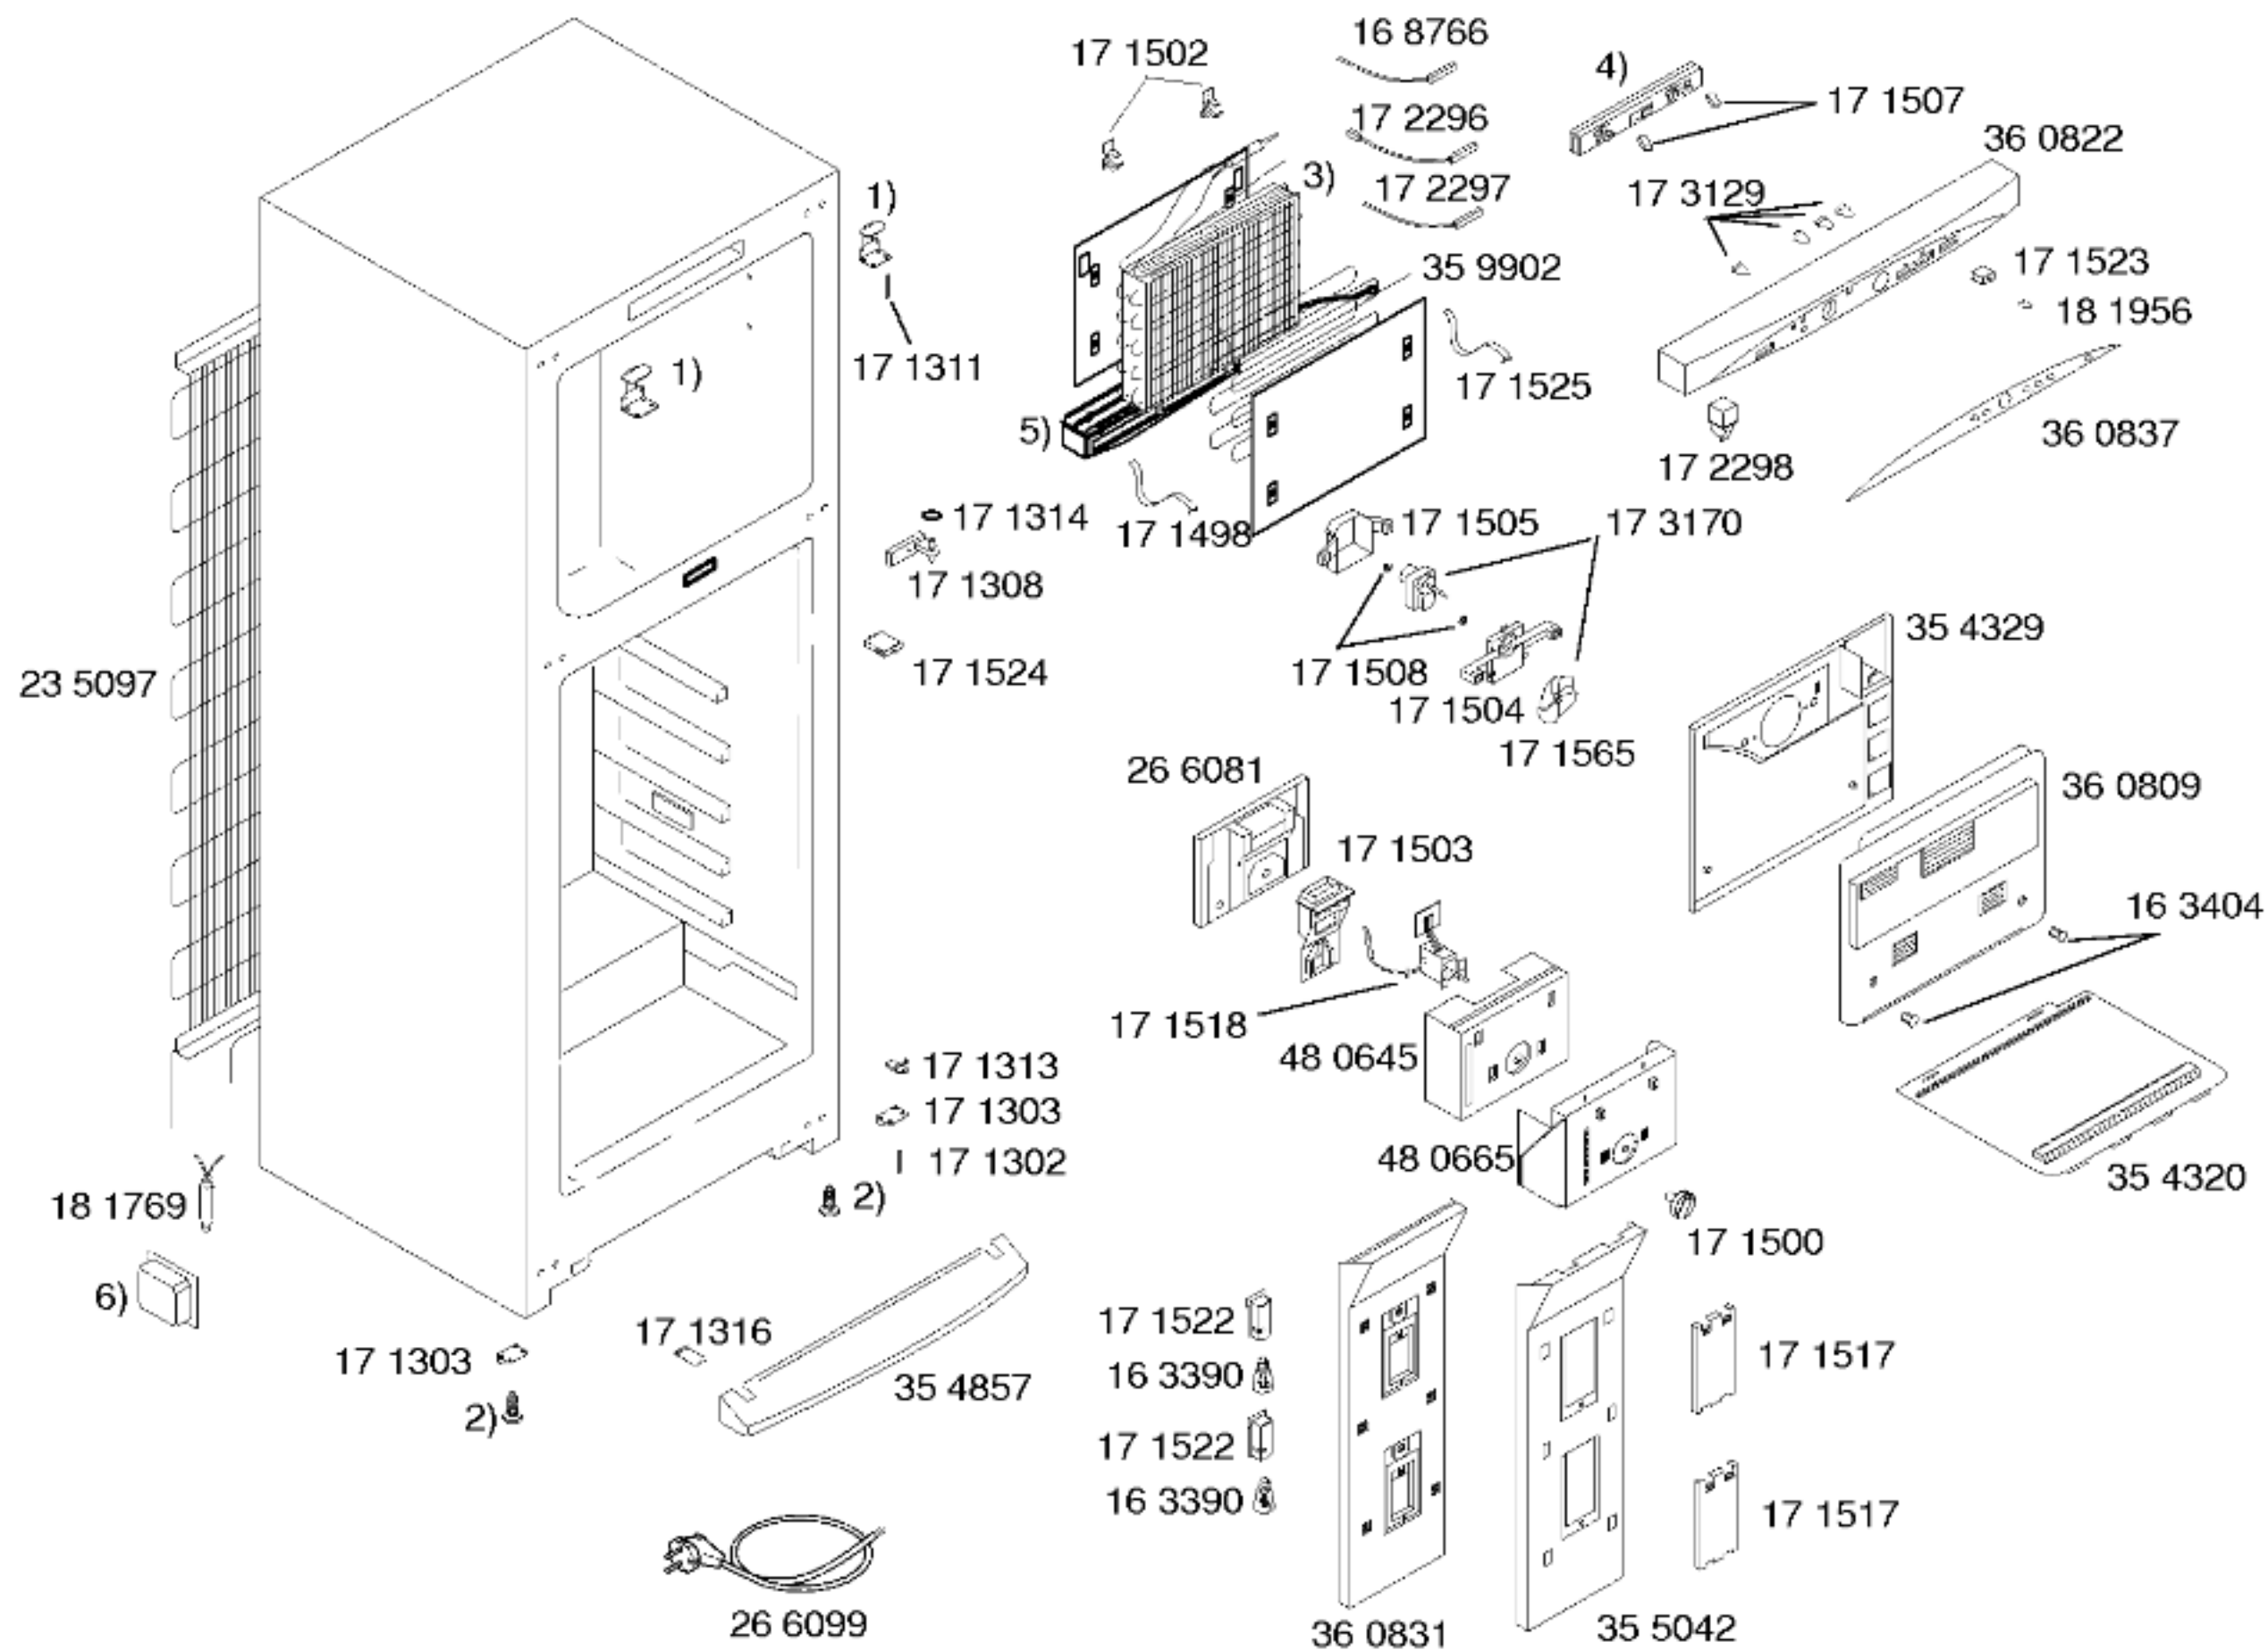


Gebrauchsanweisung
52 7802
(DE,GB,FR,ES,PT)

- 1) 17 1312
2) 17 1304
3) 36 0818
4) 48 0495
V01
48 1585
V02
5) 36 0848
6) 17 8140
V01
17 6128
V02

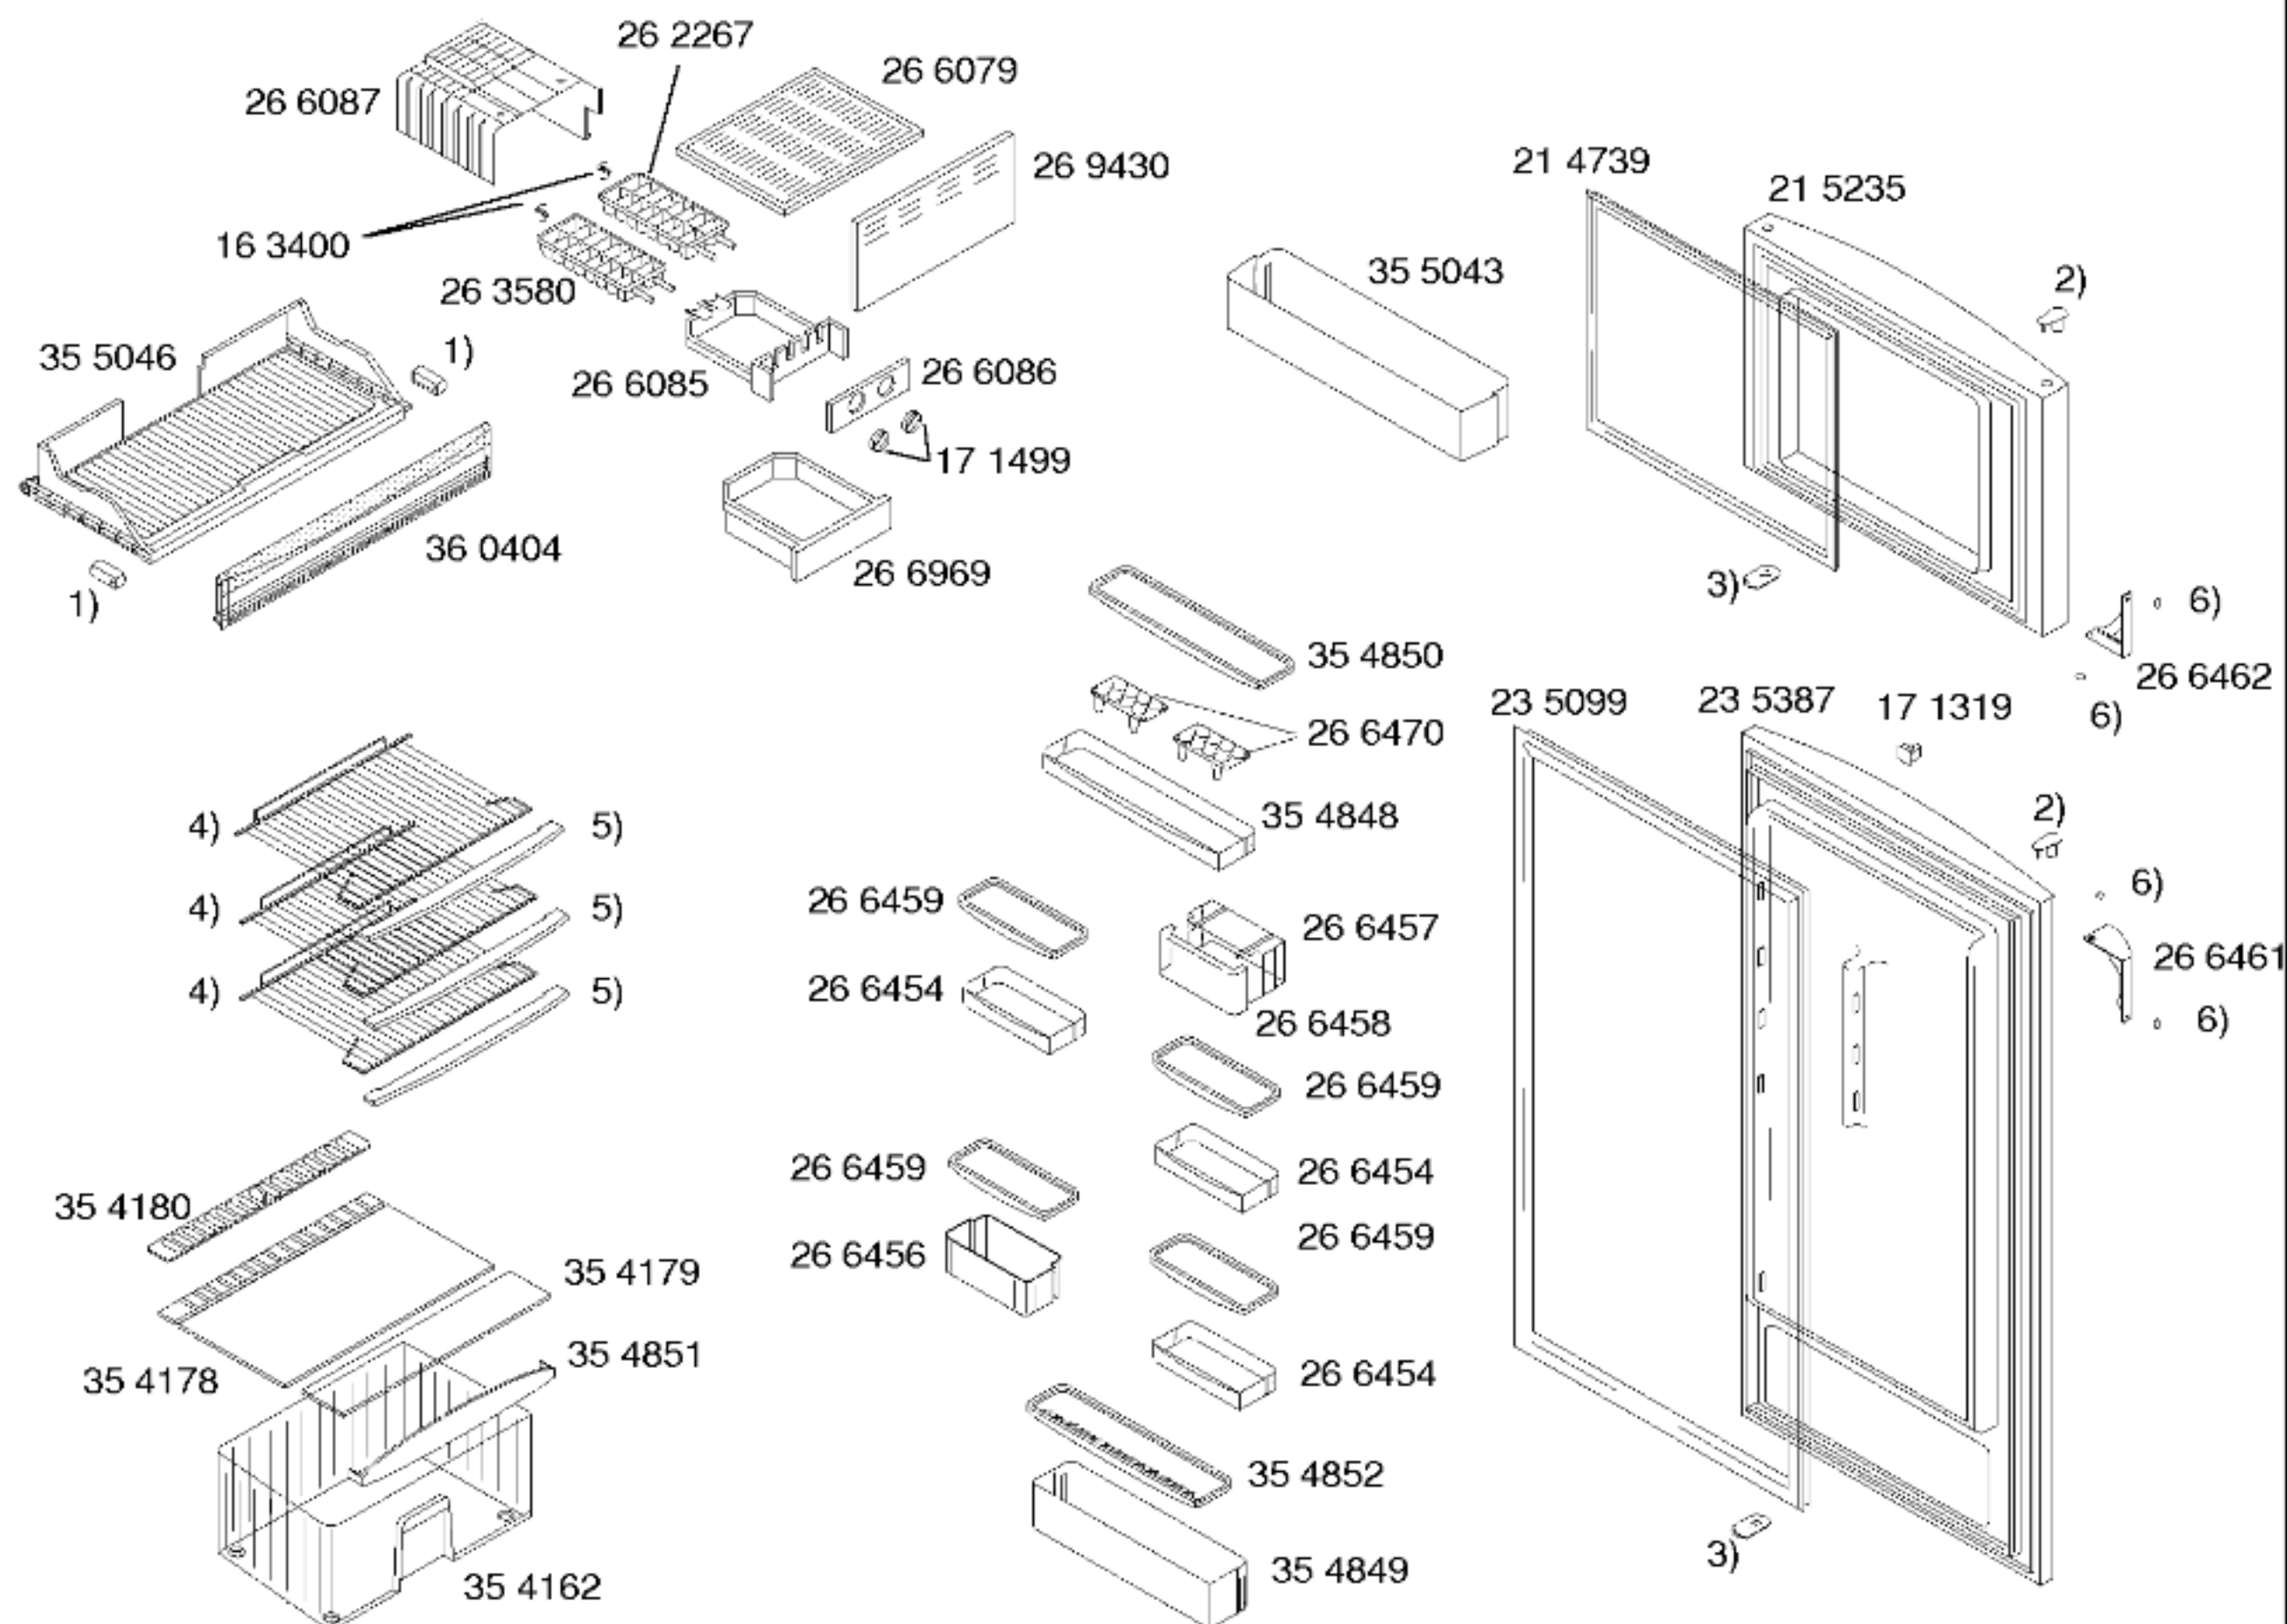

- 1) 17 1501
- 2) 17 1321
- 3) 17 1506
- 4) 35 4314
- 5) 35 4855
- 6) 16 5557

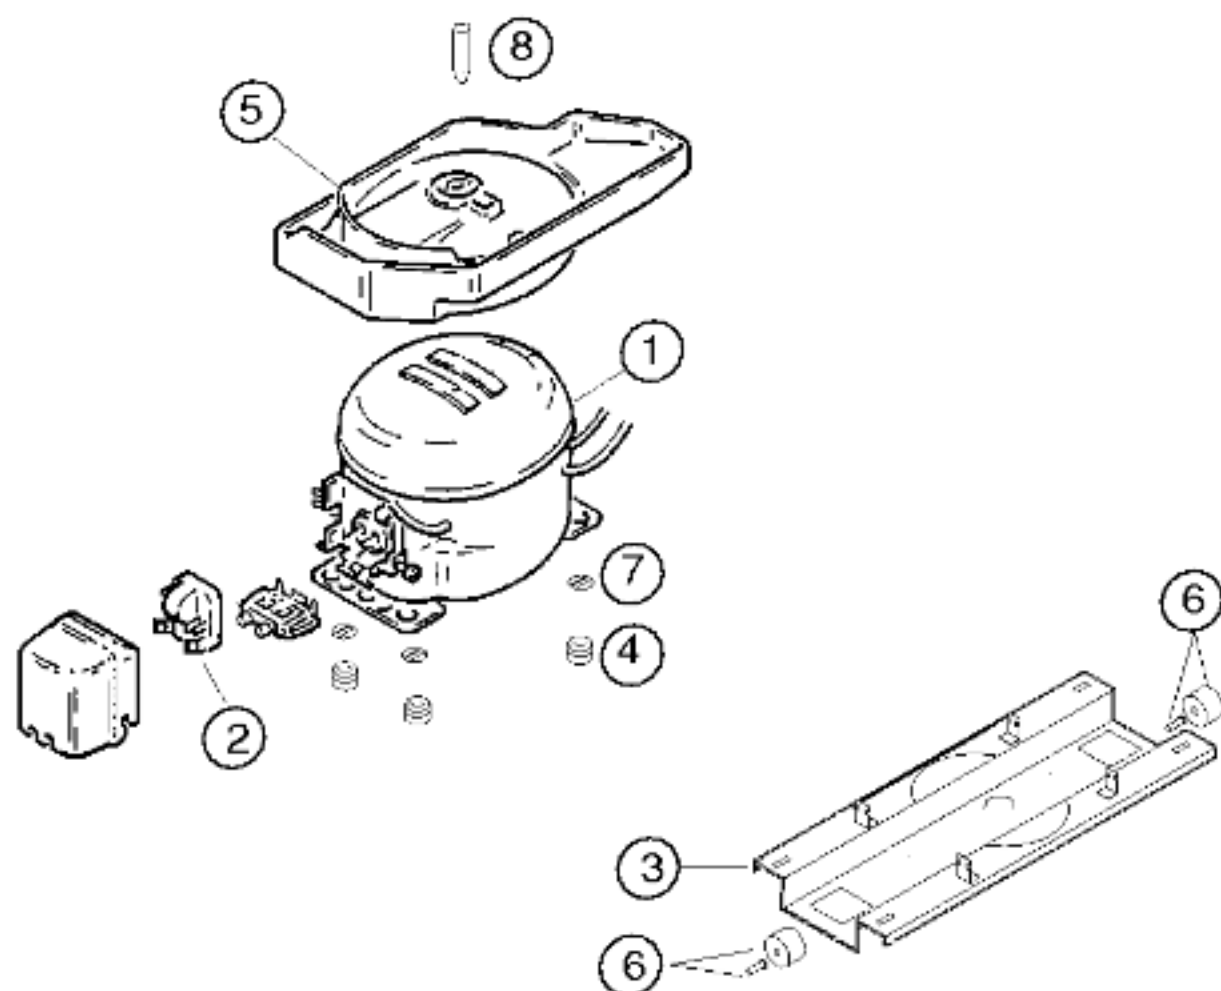

Pos.	Danfoss		
	NLE9F		
1	14 1932		
2	16 5570		
3	35 4158		
4	16 3427		
5	26 5327		
6	17 1318		
7	17 1519		
8	17 2776		
9			
10			
11			
12			

TECHNISCHE DATEN/TECHNICAL DATA/TEKNIK BİLGİLER			
Verdichter/Compressor/Kompresör	Danfoss		
Typ/Type/Tip	NLE9F		
Förderleistung/Delivery/Verim/h			
Anlaufstrom/Starting current/Giris akimi	A	10.7	
Widerstand/Resistance/Rezistans Ha/		12.9	
Hi/aux.		18	
Temp.Reyler/Thermostat/Termostat	Elektronisch		
Typ/Type/Tip			
Reglerstellung/Position/Termostat pozisyonu			
Schaltwerte/Acma kapama degerleri	..ein/acma °C		
Valeurs de commutation/Termostat degeri	..aus"/kapama		
(..abtaven' od)	..alarm'		
Füllmenge/Fill. quantity/ Dolum miktarı	R600a	g	*
Anschlusswert/Comm. load/Giris gucu	W	*	
Heizung/Heater/Rezistans	Verdampfer	Ablaufrinne	
Widerstand/Resistance/Direnc			
Leistung/Power/Guc	W	120	53
Ventilador/Blower/Vantilatör	Verdampfer		
Widerstand/Resistance/Rezistans			
Magnetventil/Magnetic valve/Manyetik valf			
Widerstand/Resistance/Rezistans			
Spannung/Voltage/Garilim	V		
Temp.Reyler/Thermostat/Termostat			

* Siehe Typenschild/Mamul etiketine bakınız