 
 
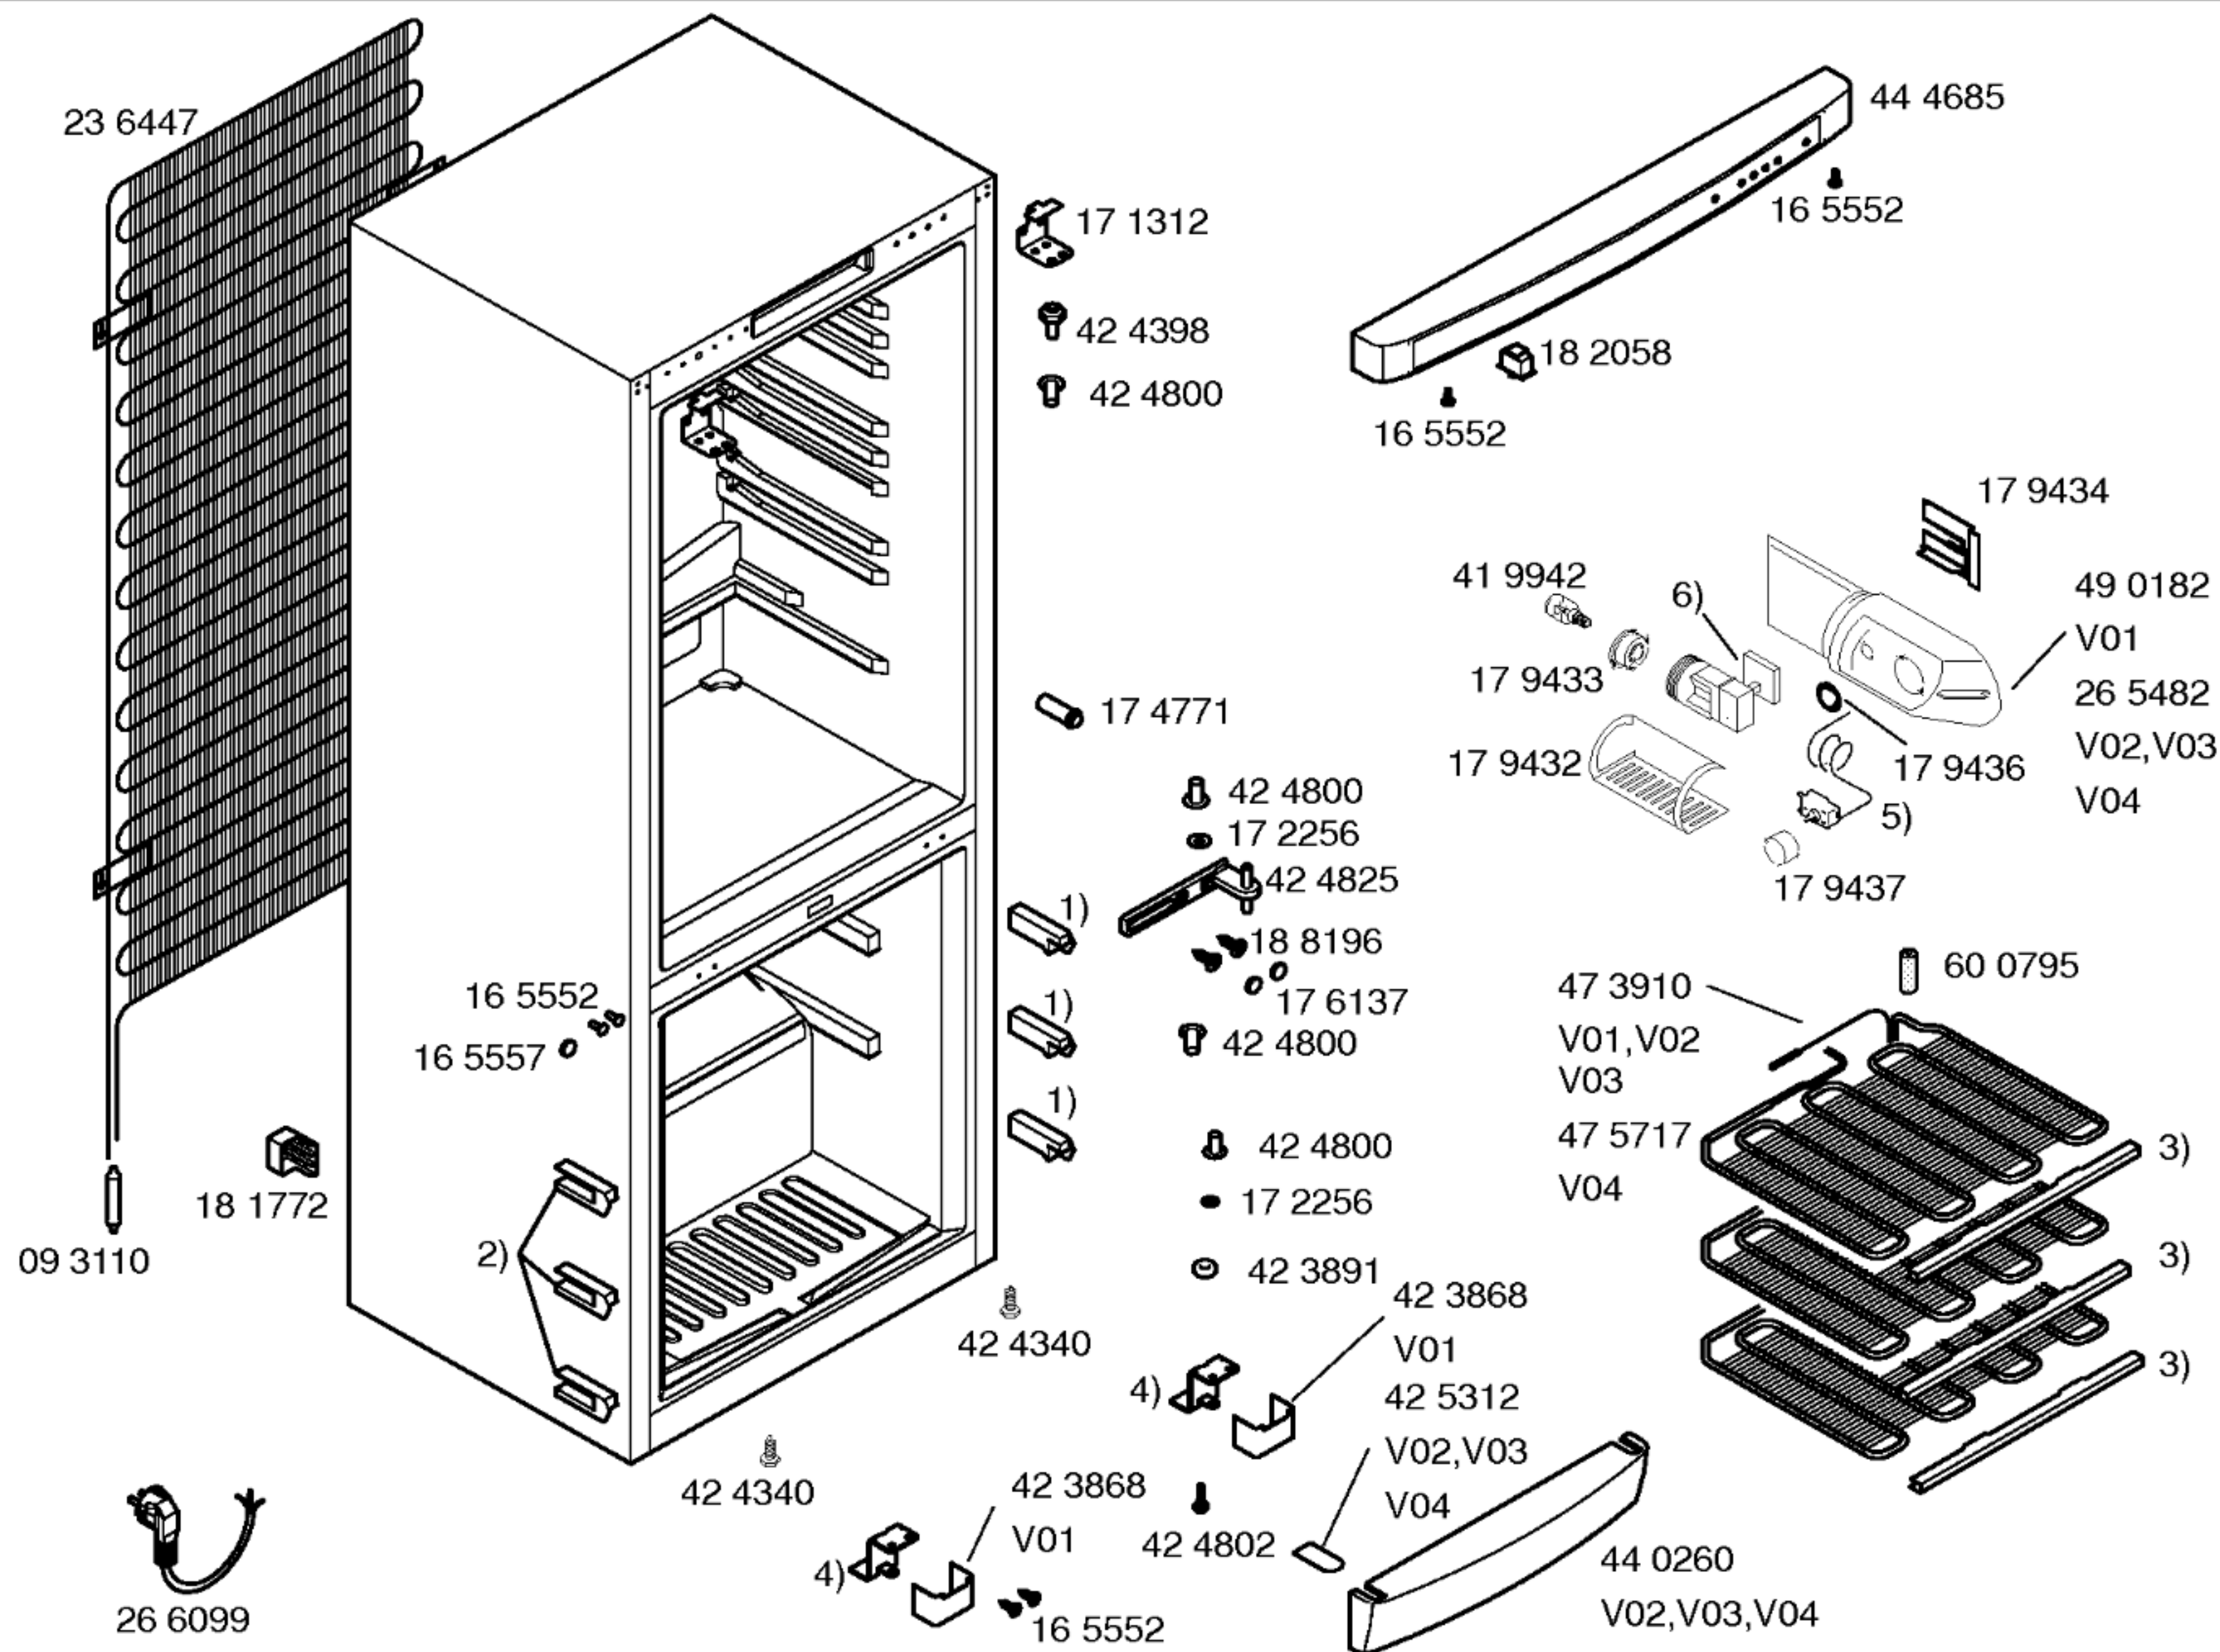 


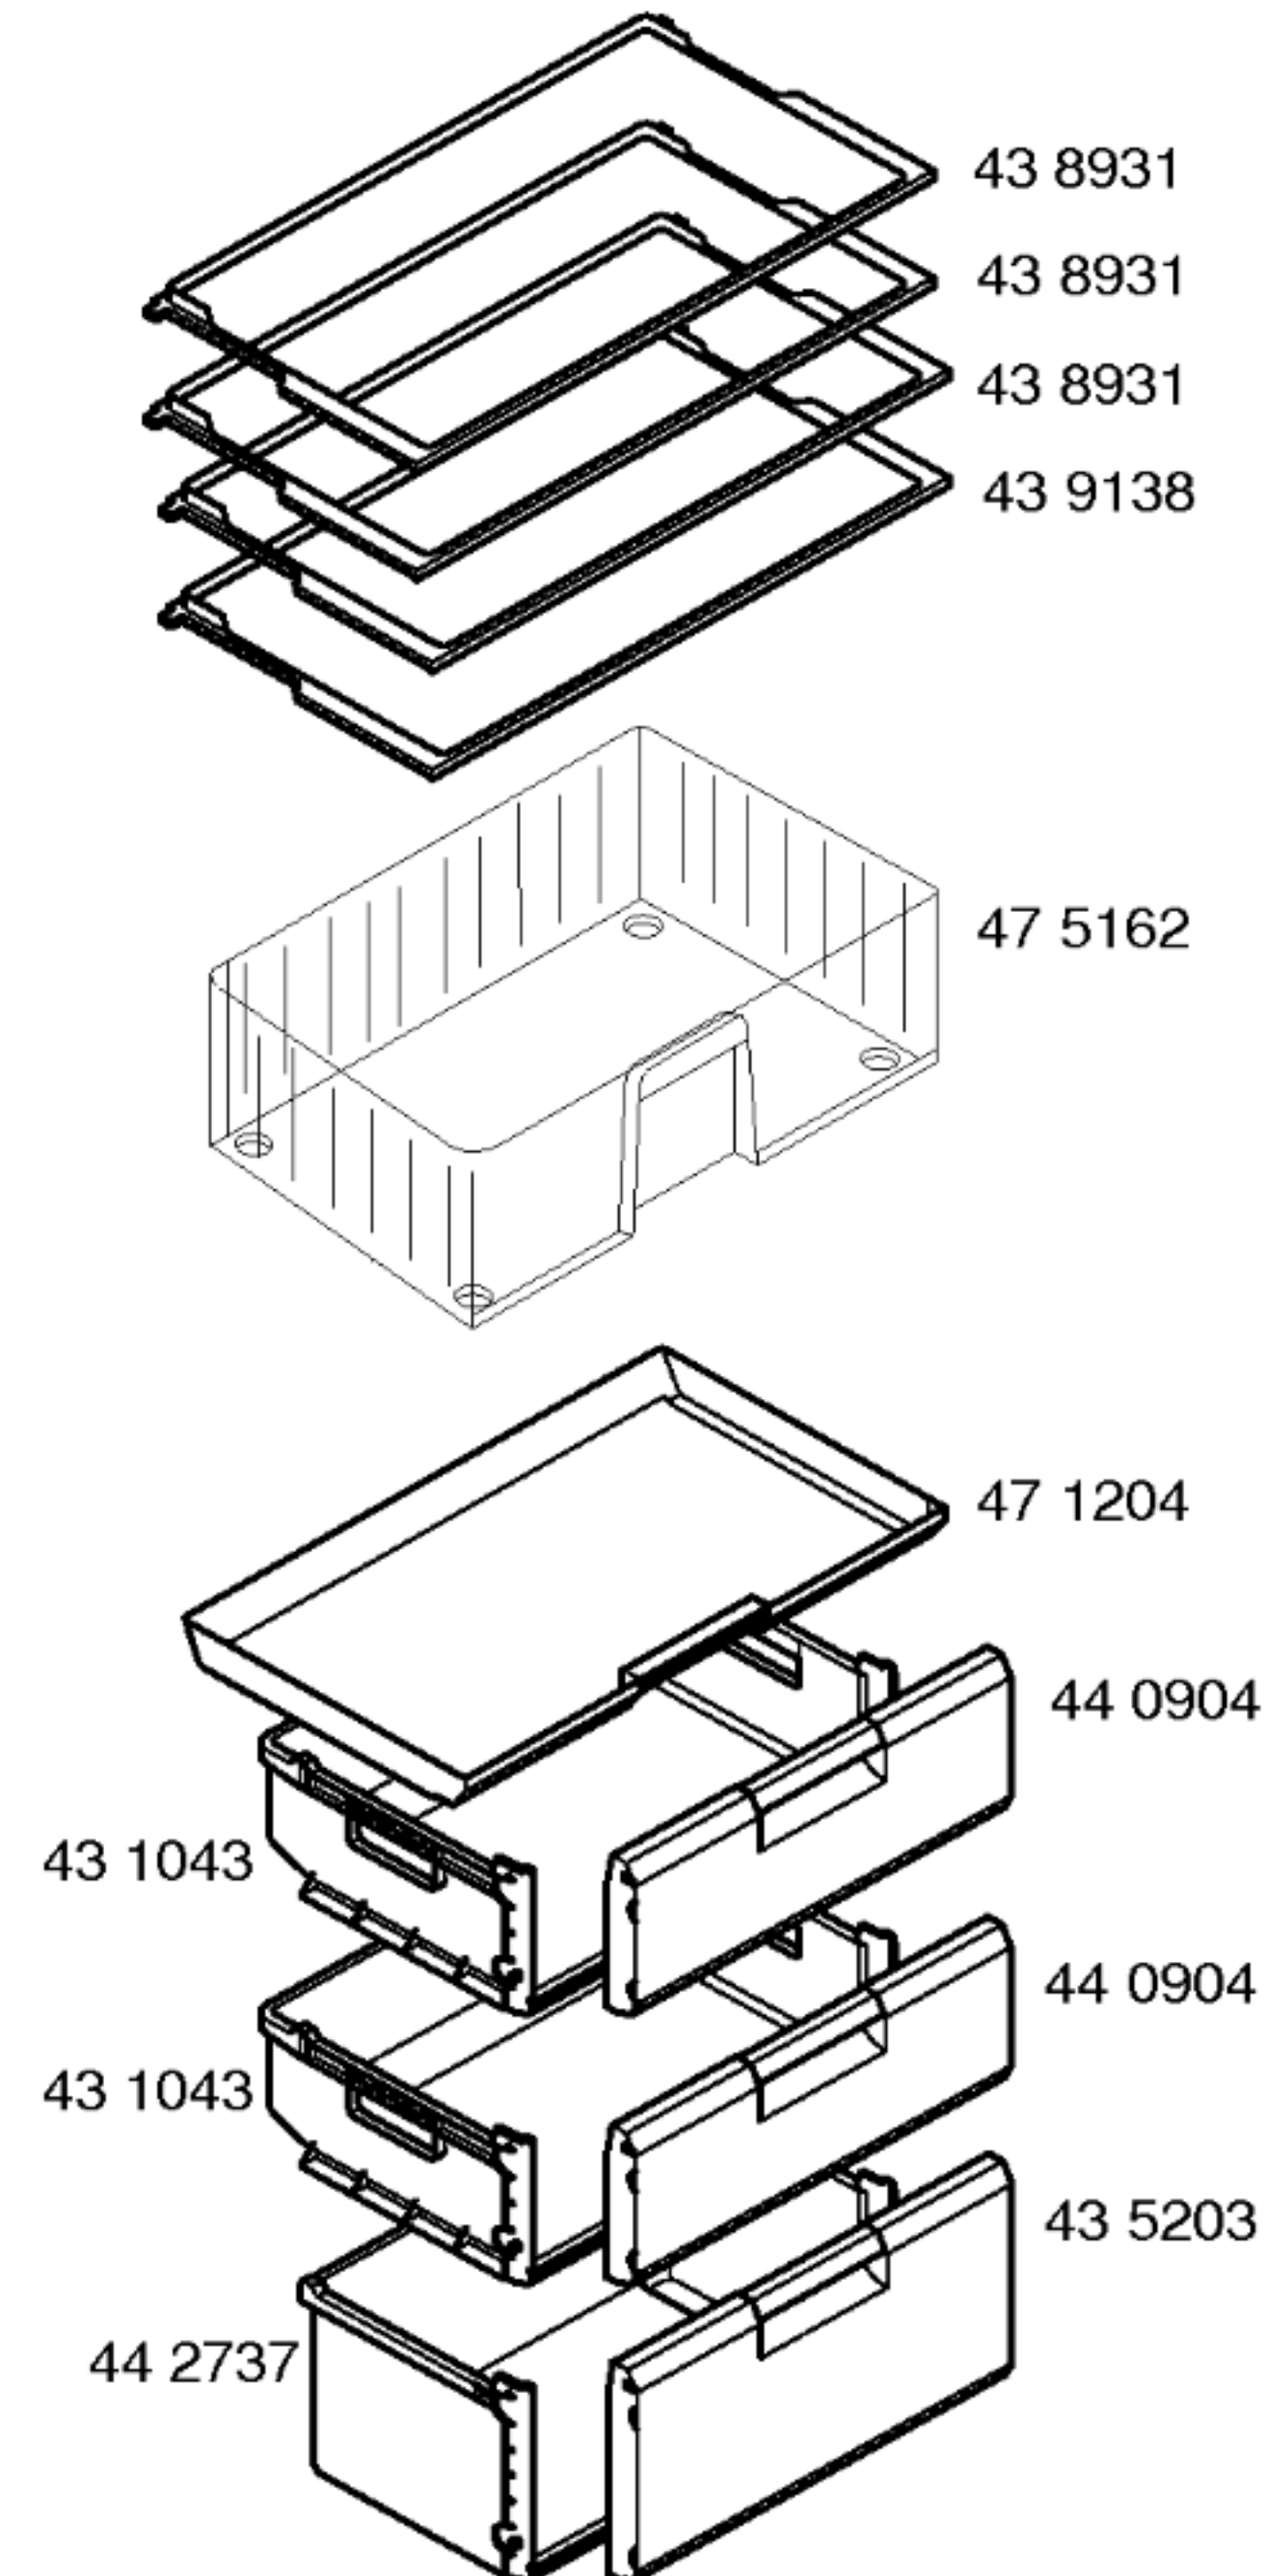 


Mat. - Nr. - Konstante
 3740

Gebrauchsanweisung
 59 7134
 (CZ,HU,PL,RU,SLNL
 FR,DE)

- 1) 18 3821
- 2) 18 3822
- 3) 36 2472
- 4) 42 8184
- 5) 42 8569
- 6) 42 8568

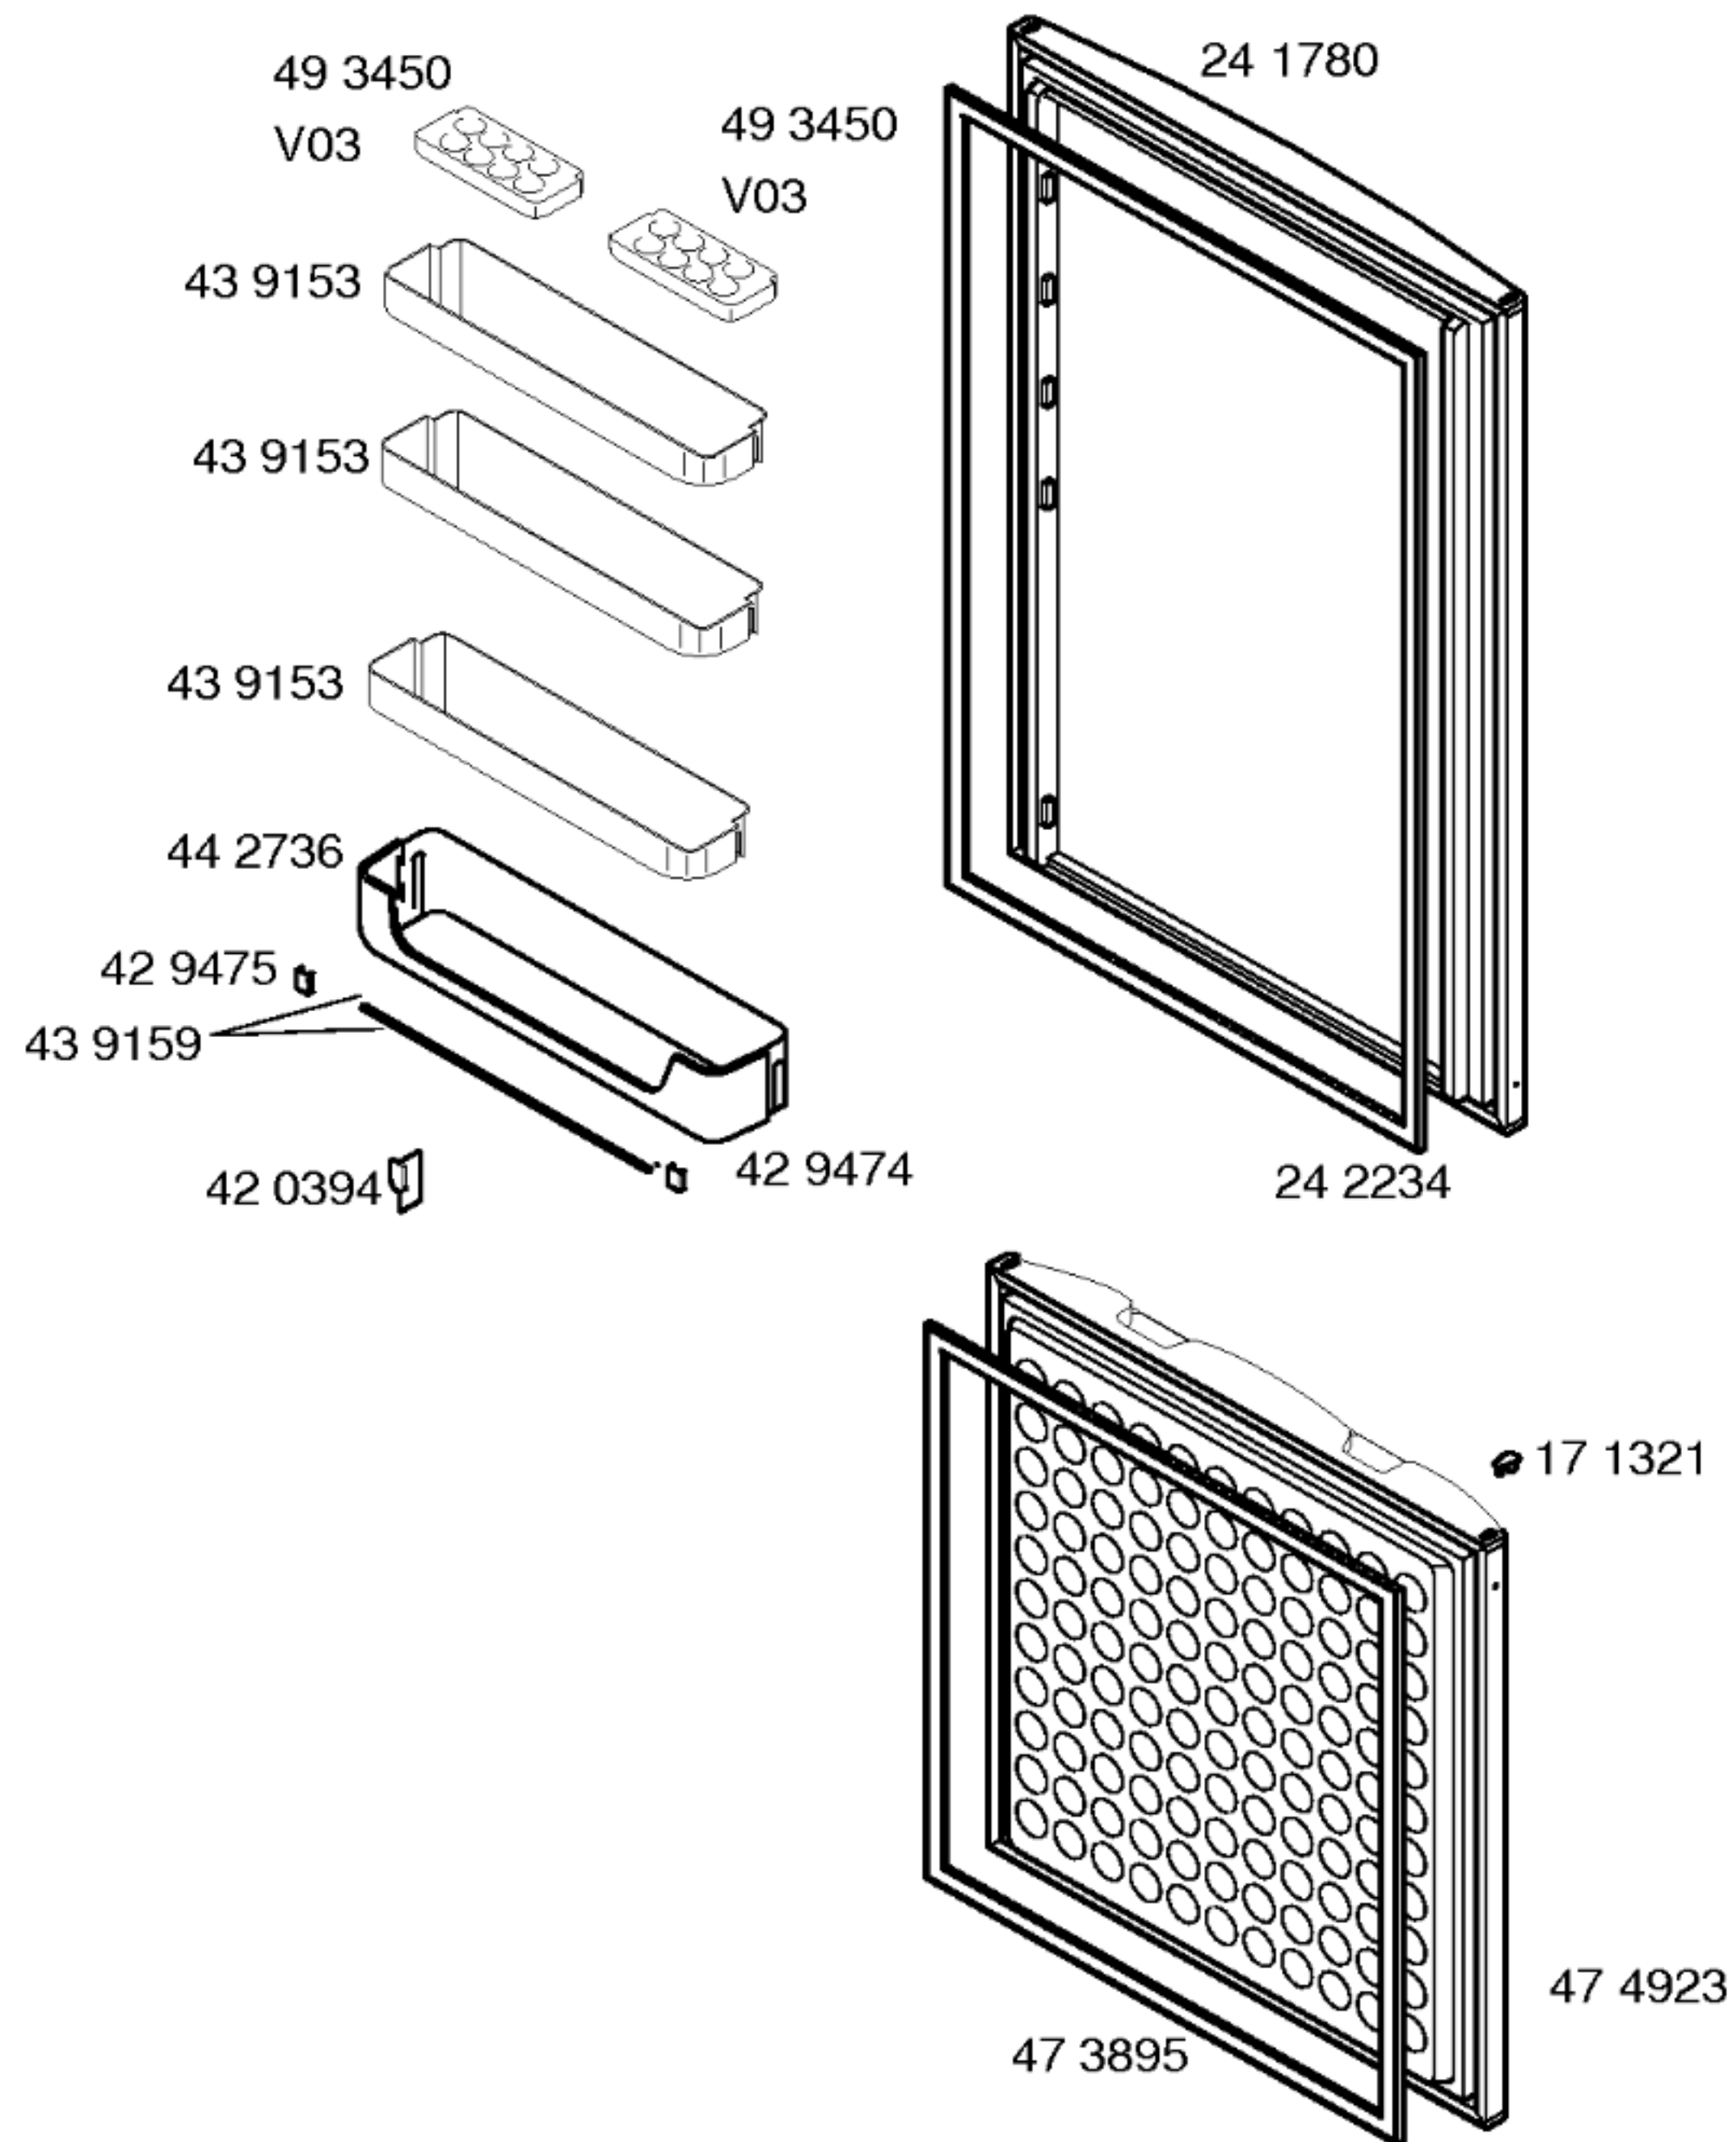

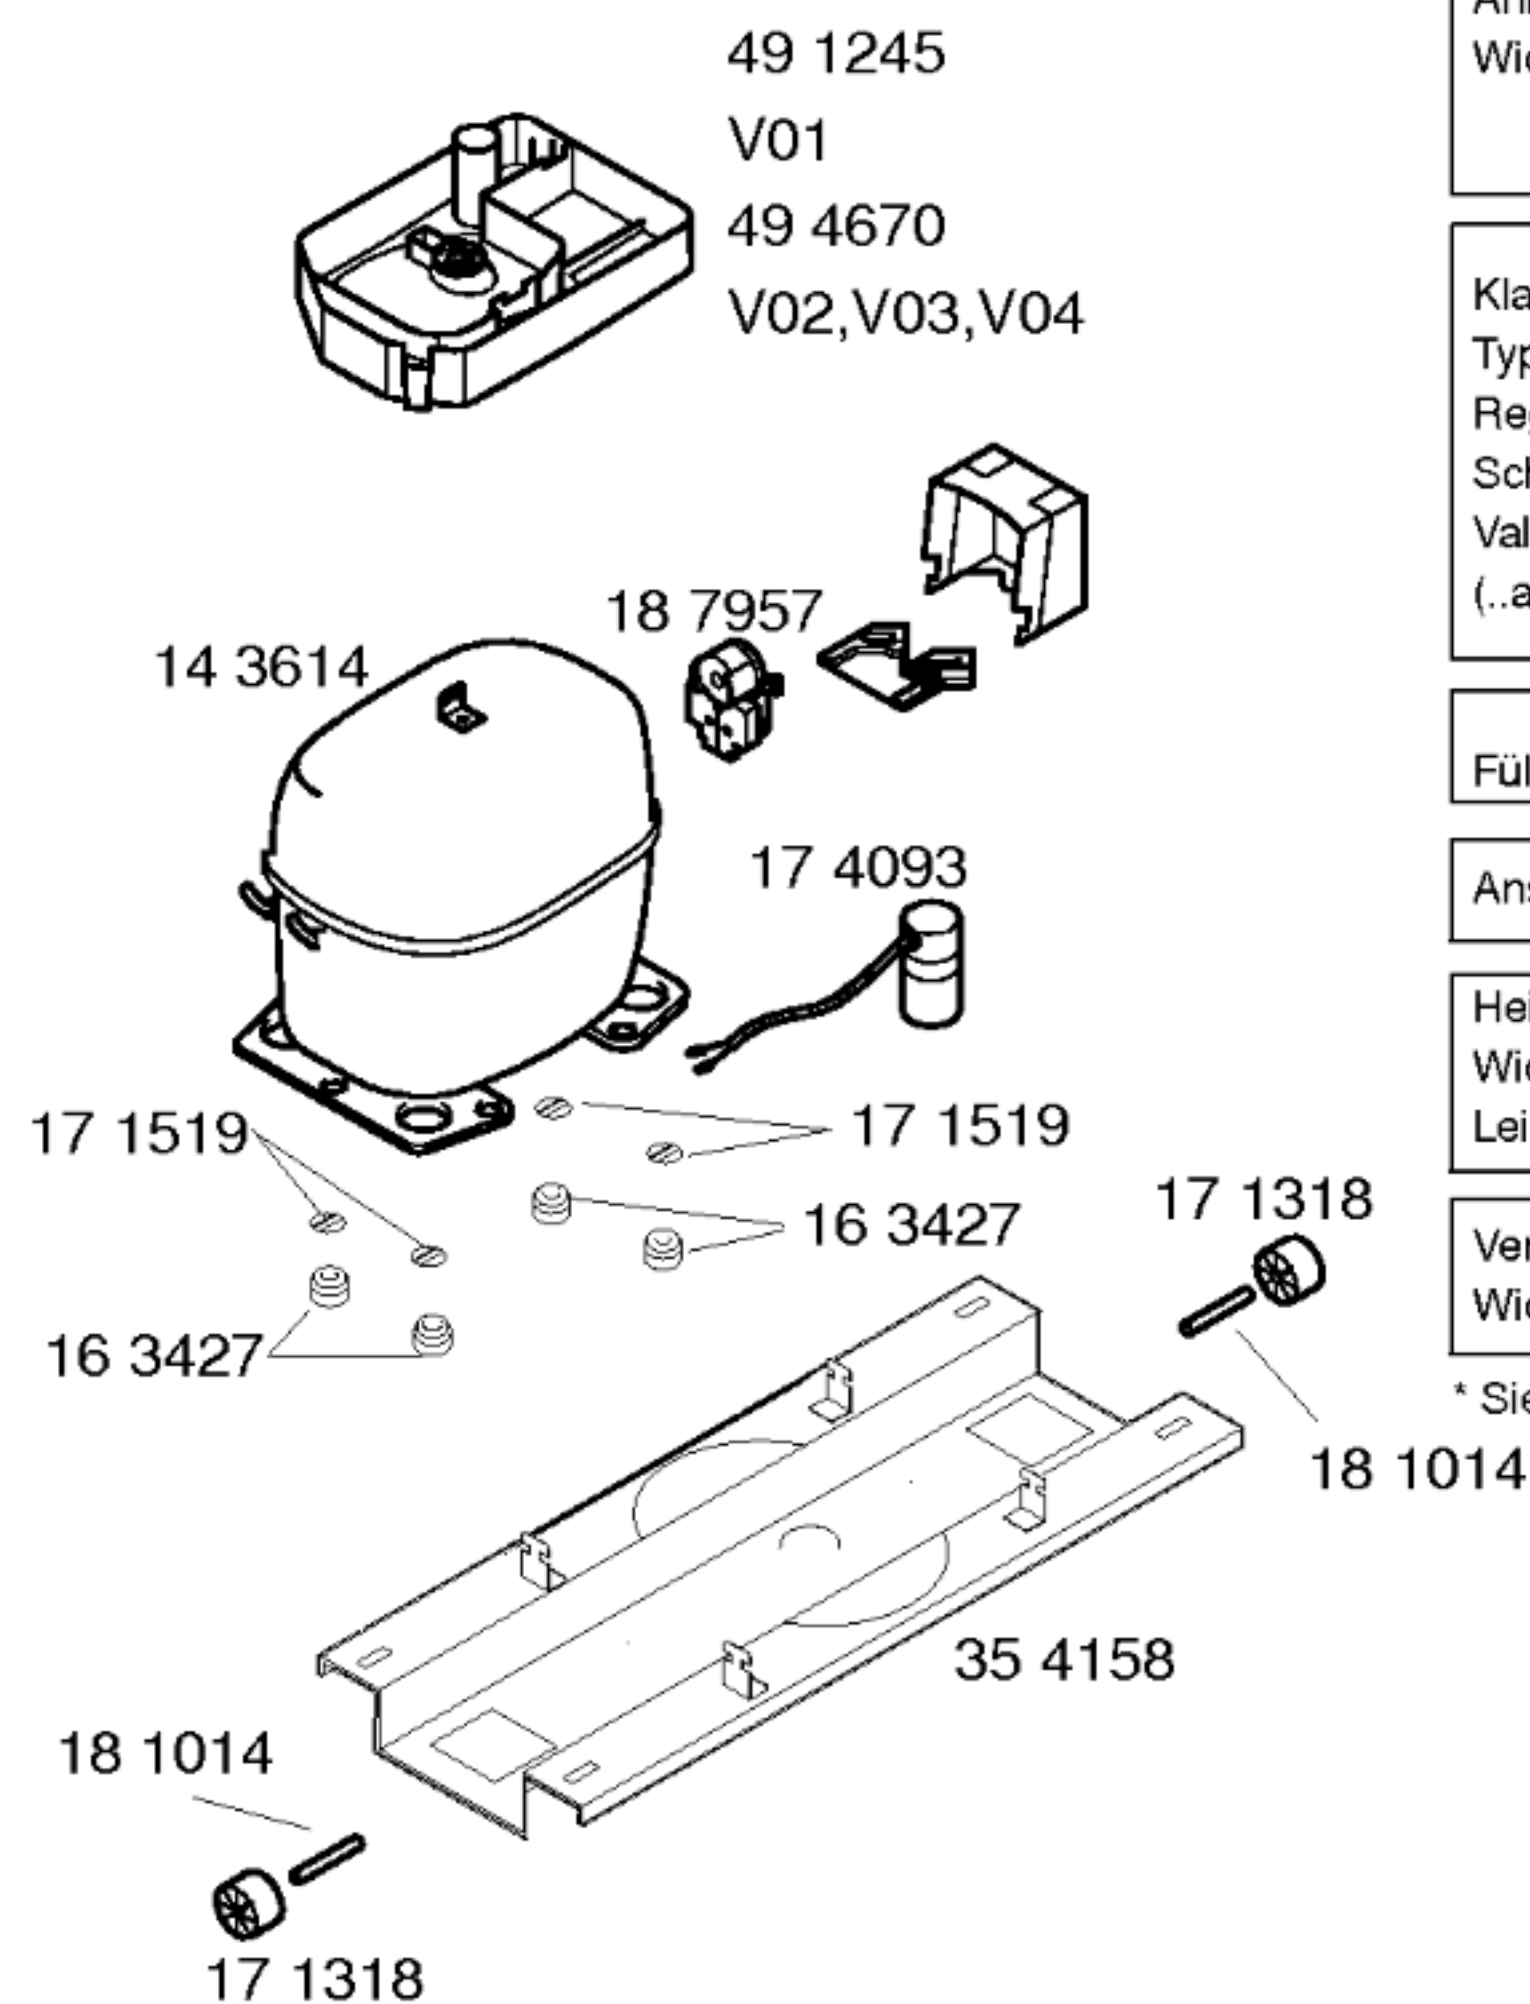

TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECHNIQUES/DATOS TECNICOS			
Verdichter/Compressor/Compresseur/Compresor Typ/Type/Tipo Förderleistung/Delivery/Debit/Aspiración l/h Anlaufstrom/Starting current/Cour.démarrage/Int.arranque A Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm Hi/aux.	Matsushita DG125E		
Klappe Therm./Thermostat/Termostat Typ/Type/Tipo Reglerstellung/Position/Conexión Schaltwerte/Switching values/ ..ein/conex.°C Valeurs de commutation/Desconex. ..aus"/descon. (..abtaven' od) ..alarm'	3.5 3.5 -31 , -20		
Füllmenge/Fill. quantity/Charge/Carga R600 g	*		
Anschlusswert/Comm. load/Puiss. Connect./Potenc. W			
Heizung/Heater/Chauflage/Resistenc.descong. Widerstand/Resistance/Resistencia KW Leistung/Power/Puissance/Potencia W			
Ventilador/Blower/Ventilateur/Ventilador Widerstand/Resistance/Resistencia KW			

* Siehe Typenschild/Mamul etiketine bakiniz

Mat. – Nr. – Konstante
3740