
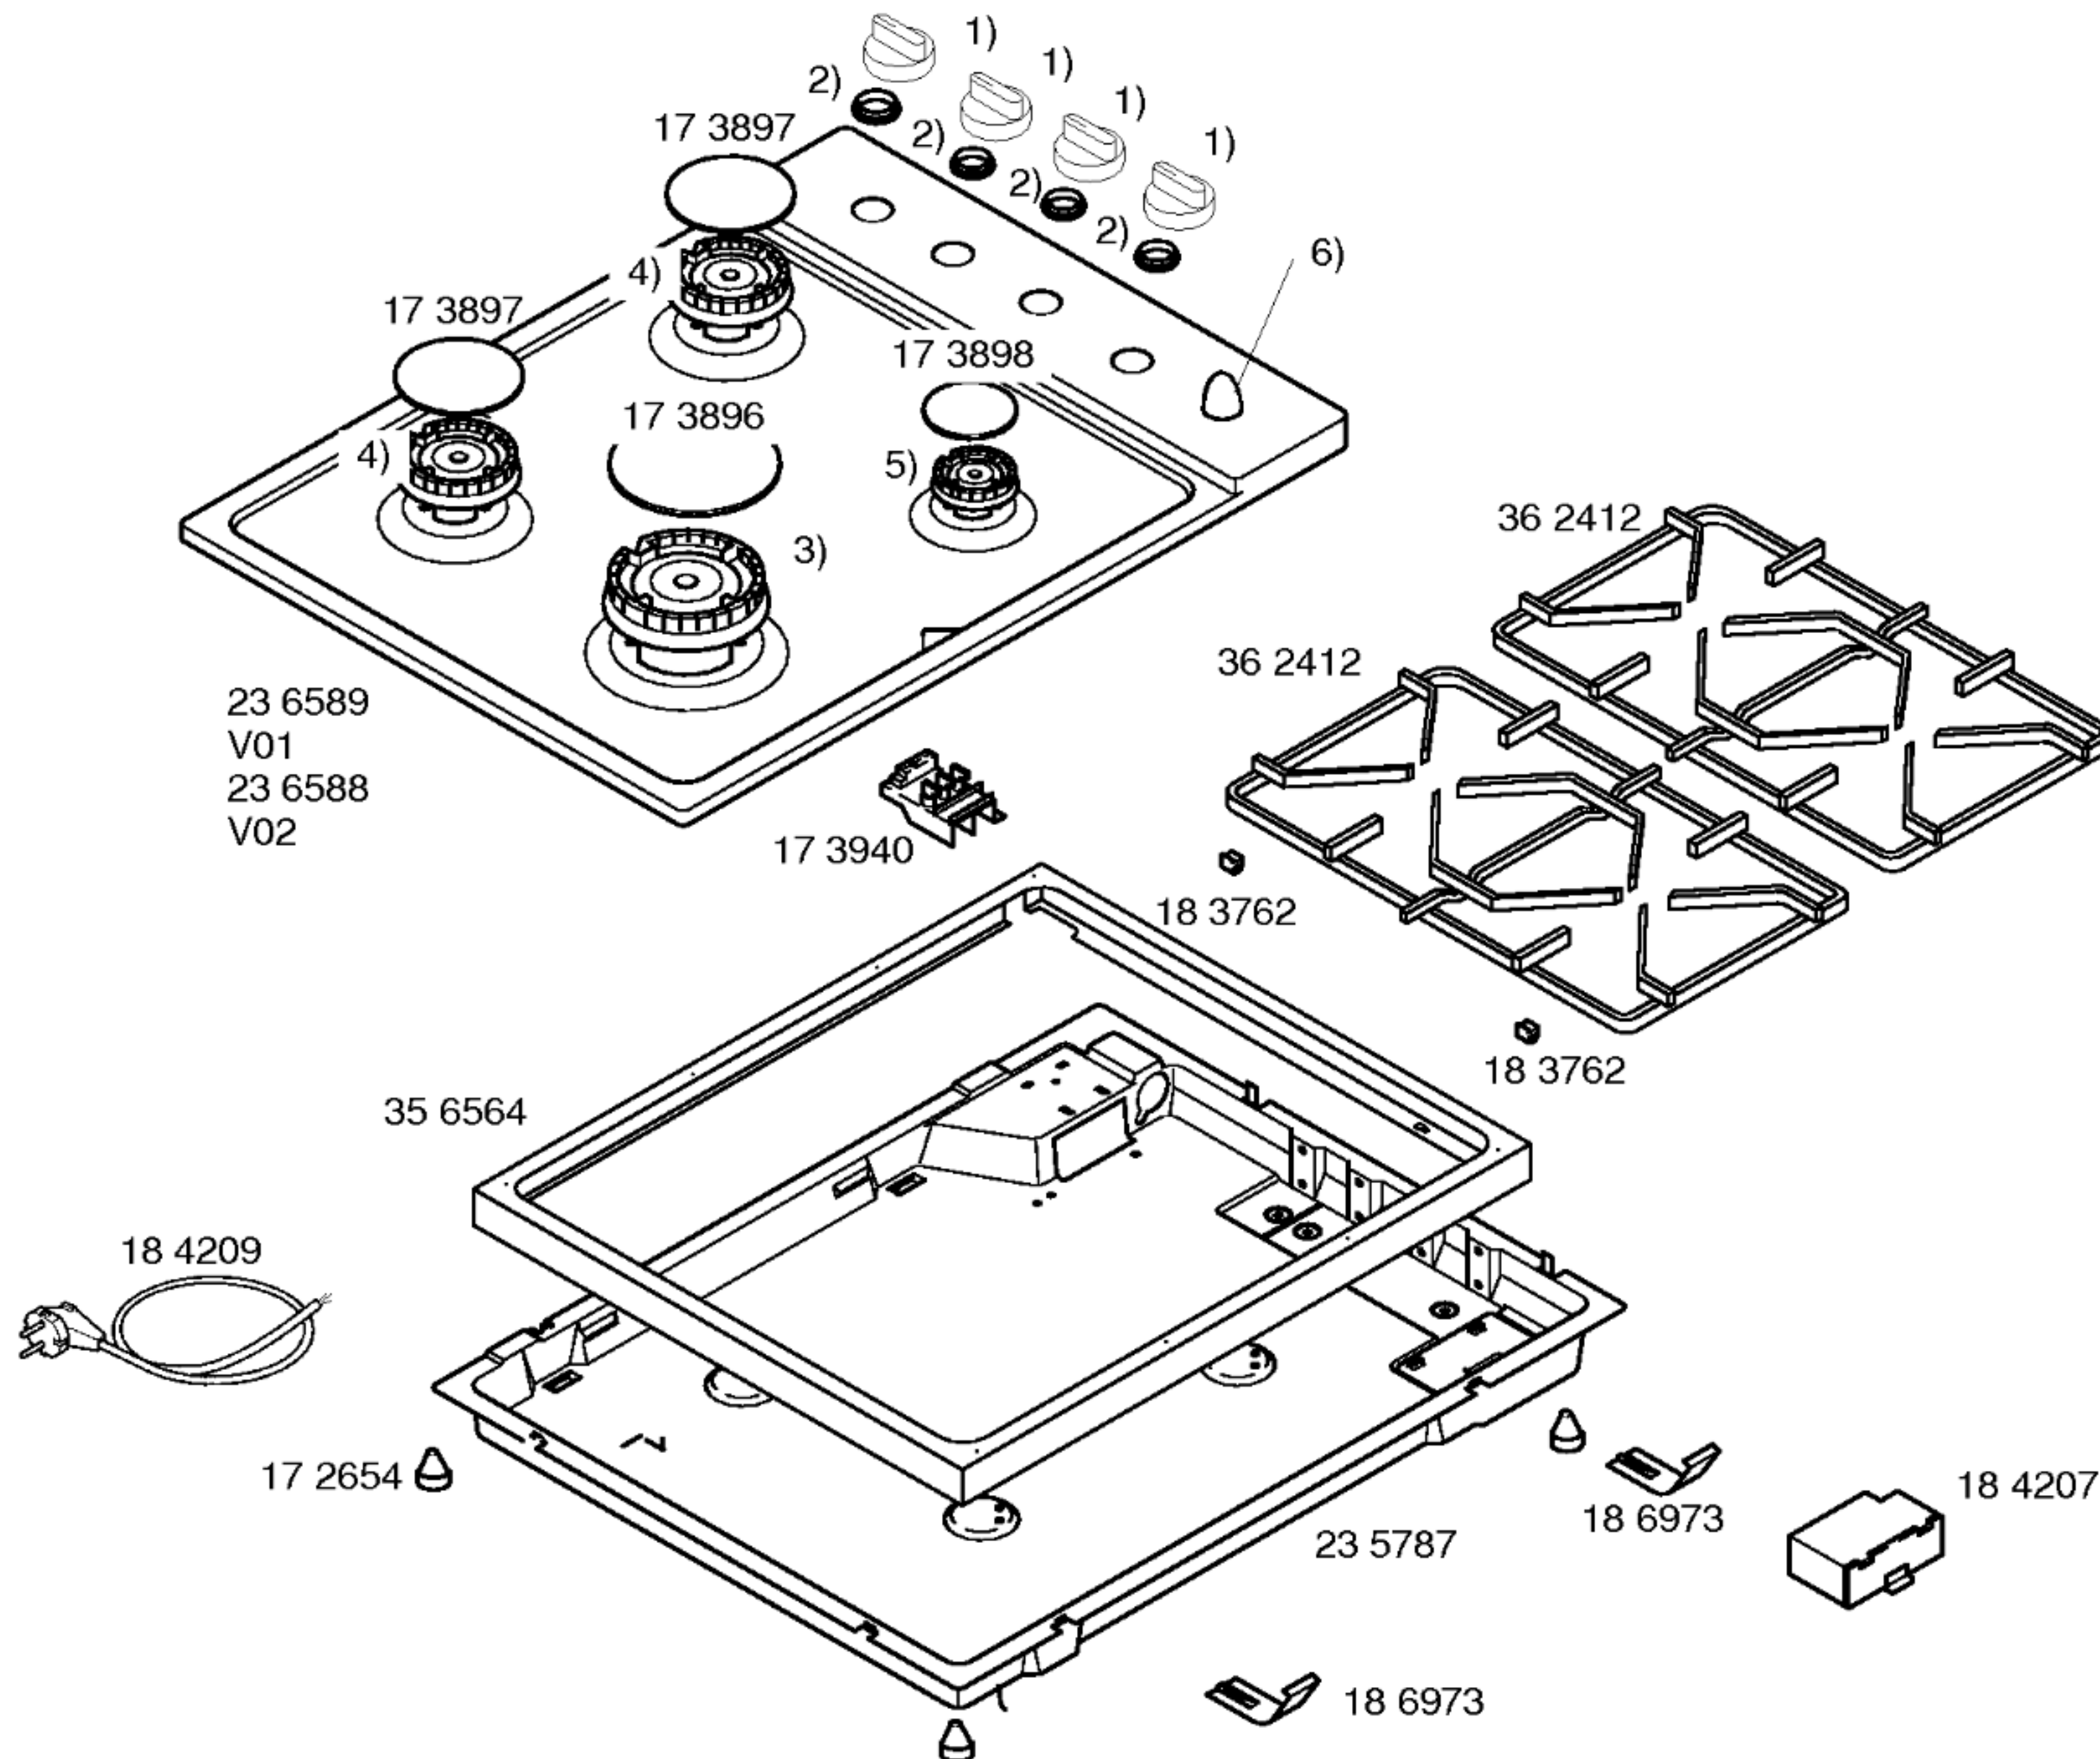



Gebrauchsanweisung
52 8745

- 1) 42 4356
V01
42 4706
V02
2) 17 3893
V01
18 8620
V02
3) 26 7356
4) 26 7357
5) 26 7359
6) 18 4312
V01
18 4208
V02

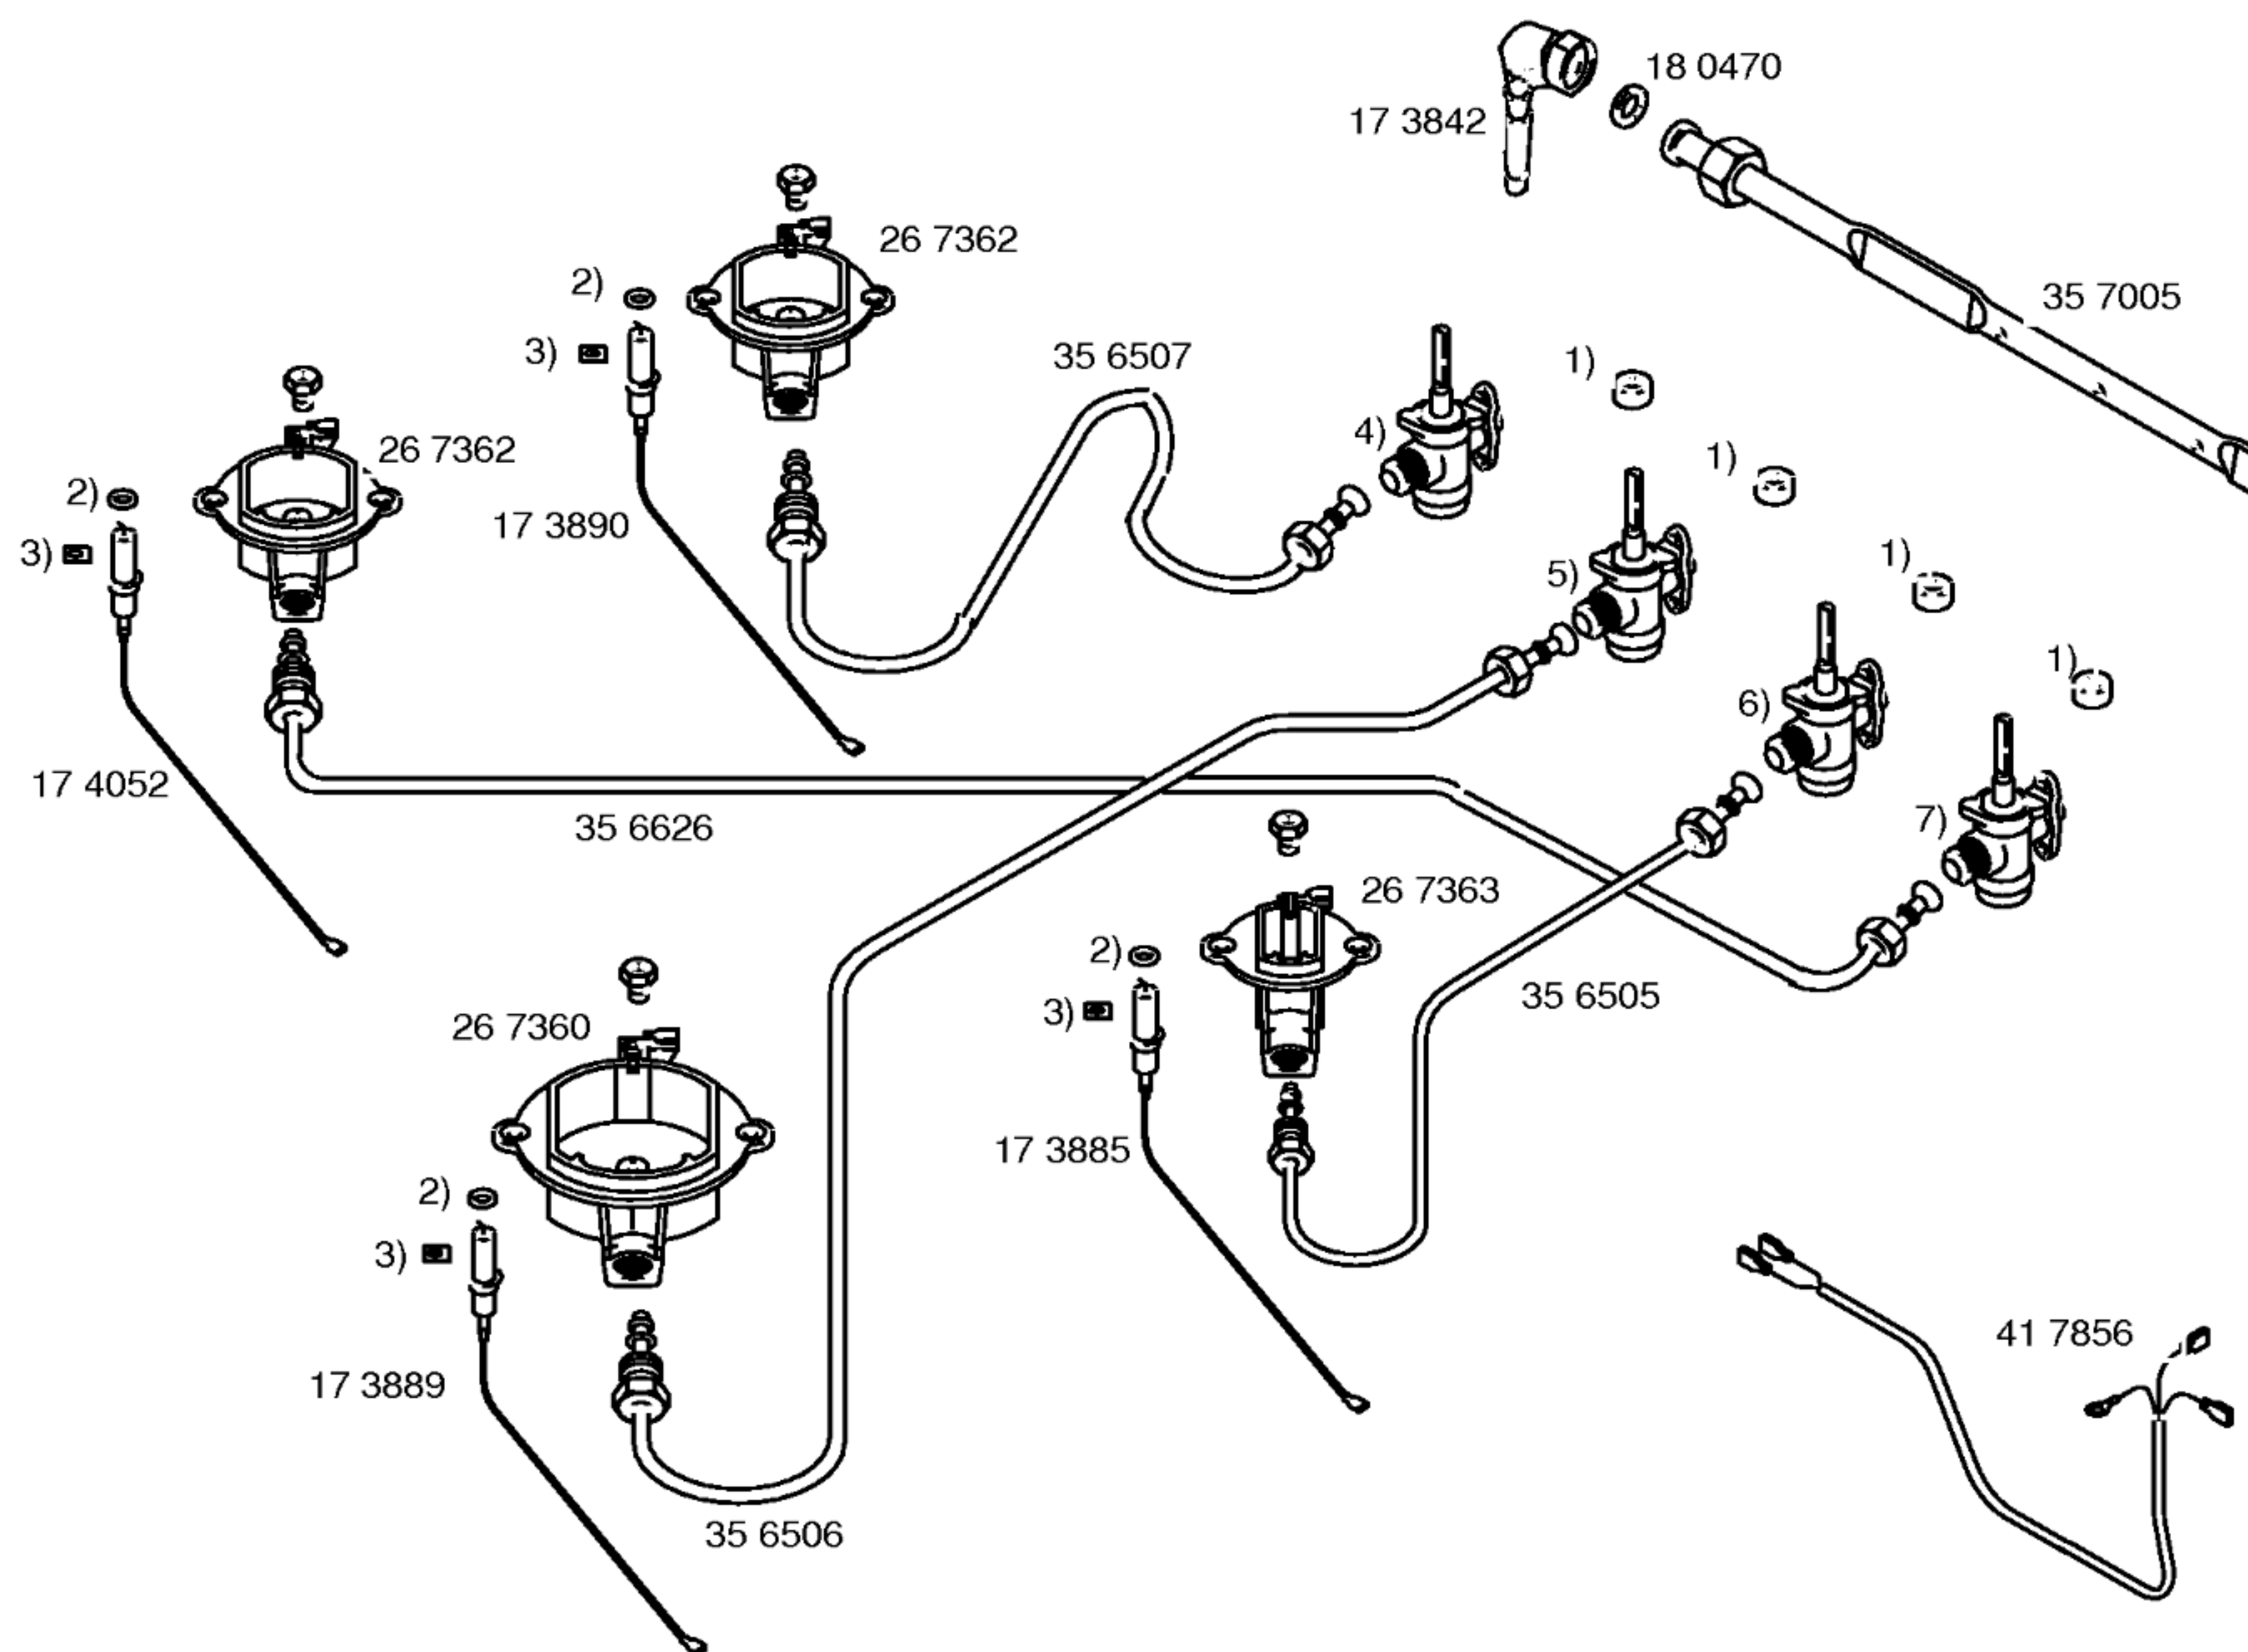

- 1) 16 9339
- 2) 17 3894
- 3) 17 3895
- 4) 48 8987
- 5) 48 8988
- 6) 48 8986
- 7) 48 8987

Duesensatz Erdgas
17 4049
Duesensatz
Fluessigas
17 4048
Duesensatz EG
(inkl.Bypass-Dusen)
41 7597
Duesensatz FG
(inkl.Bypass-Dusen)
41 7837