



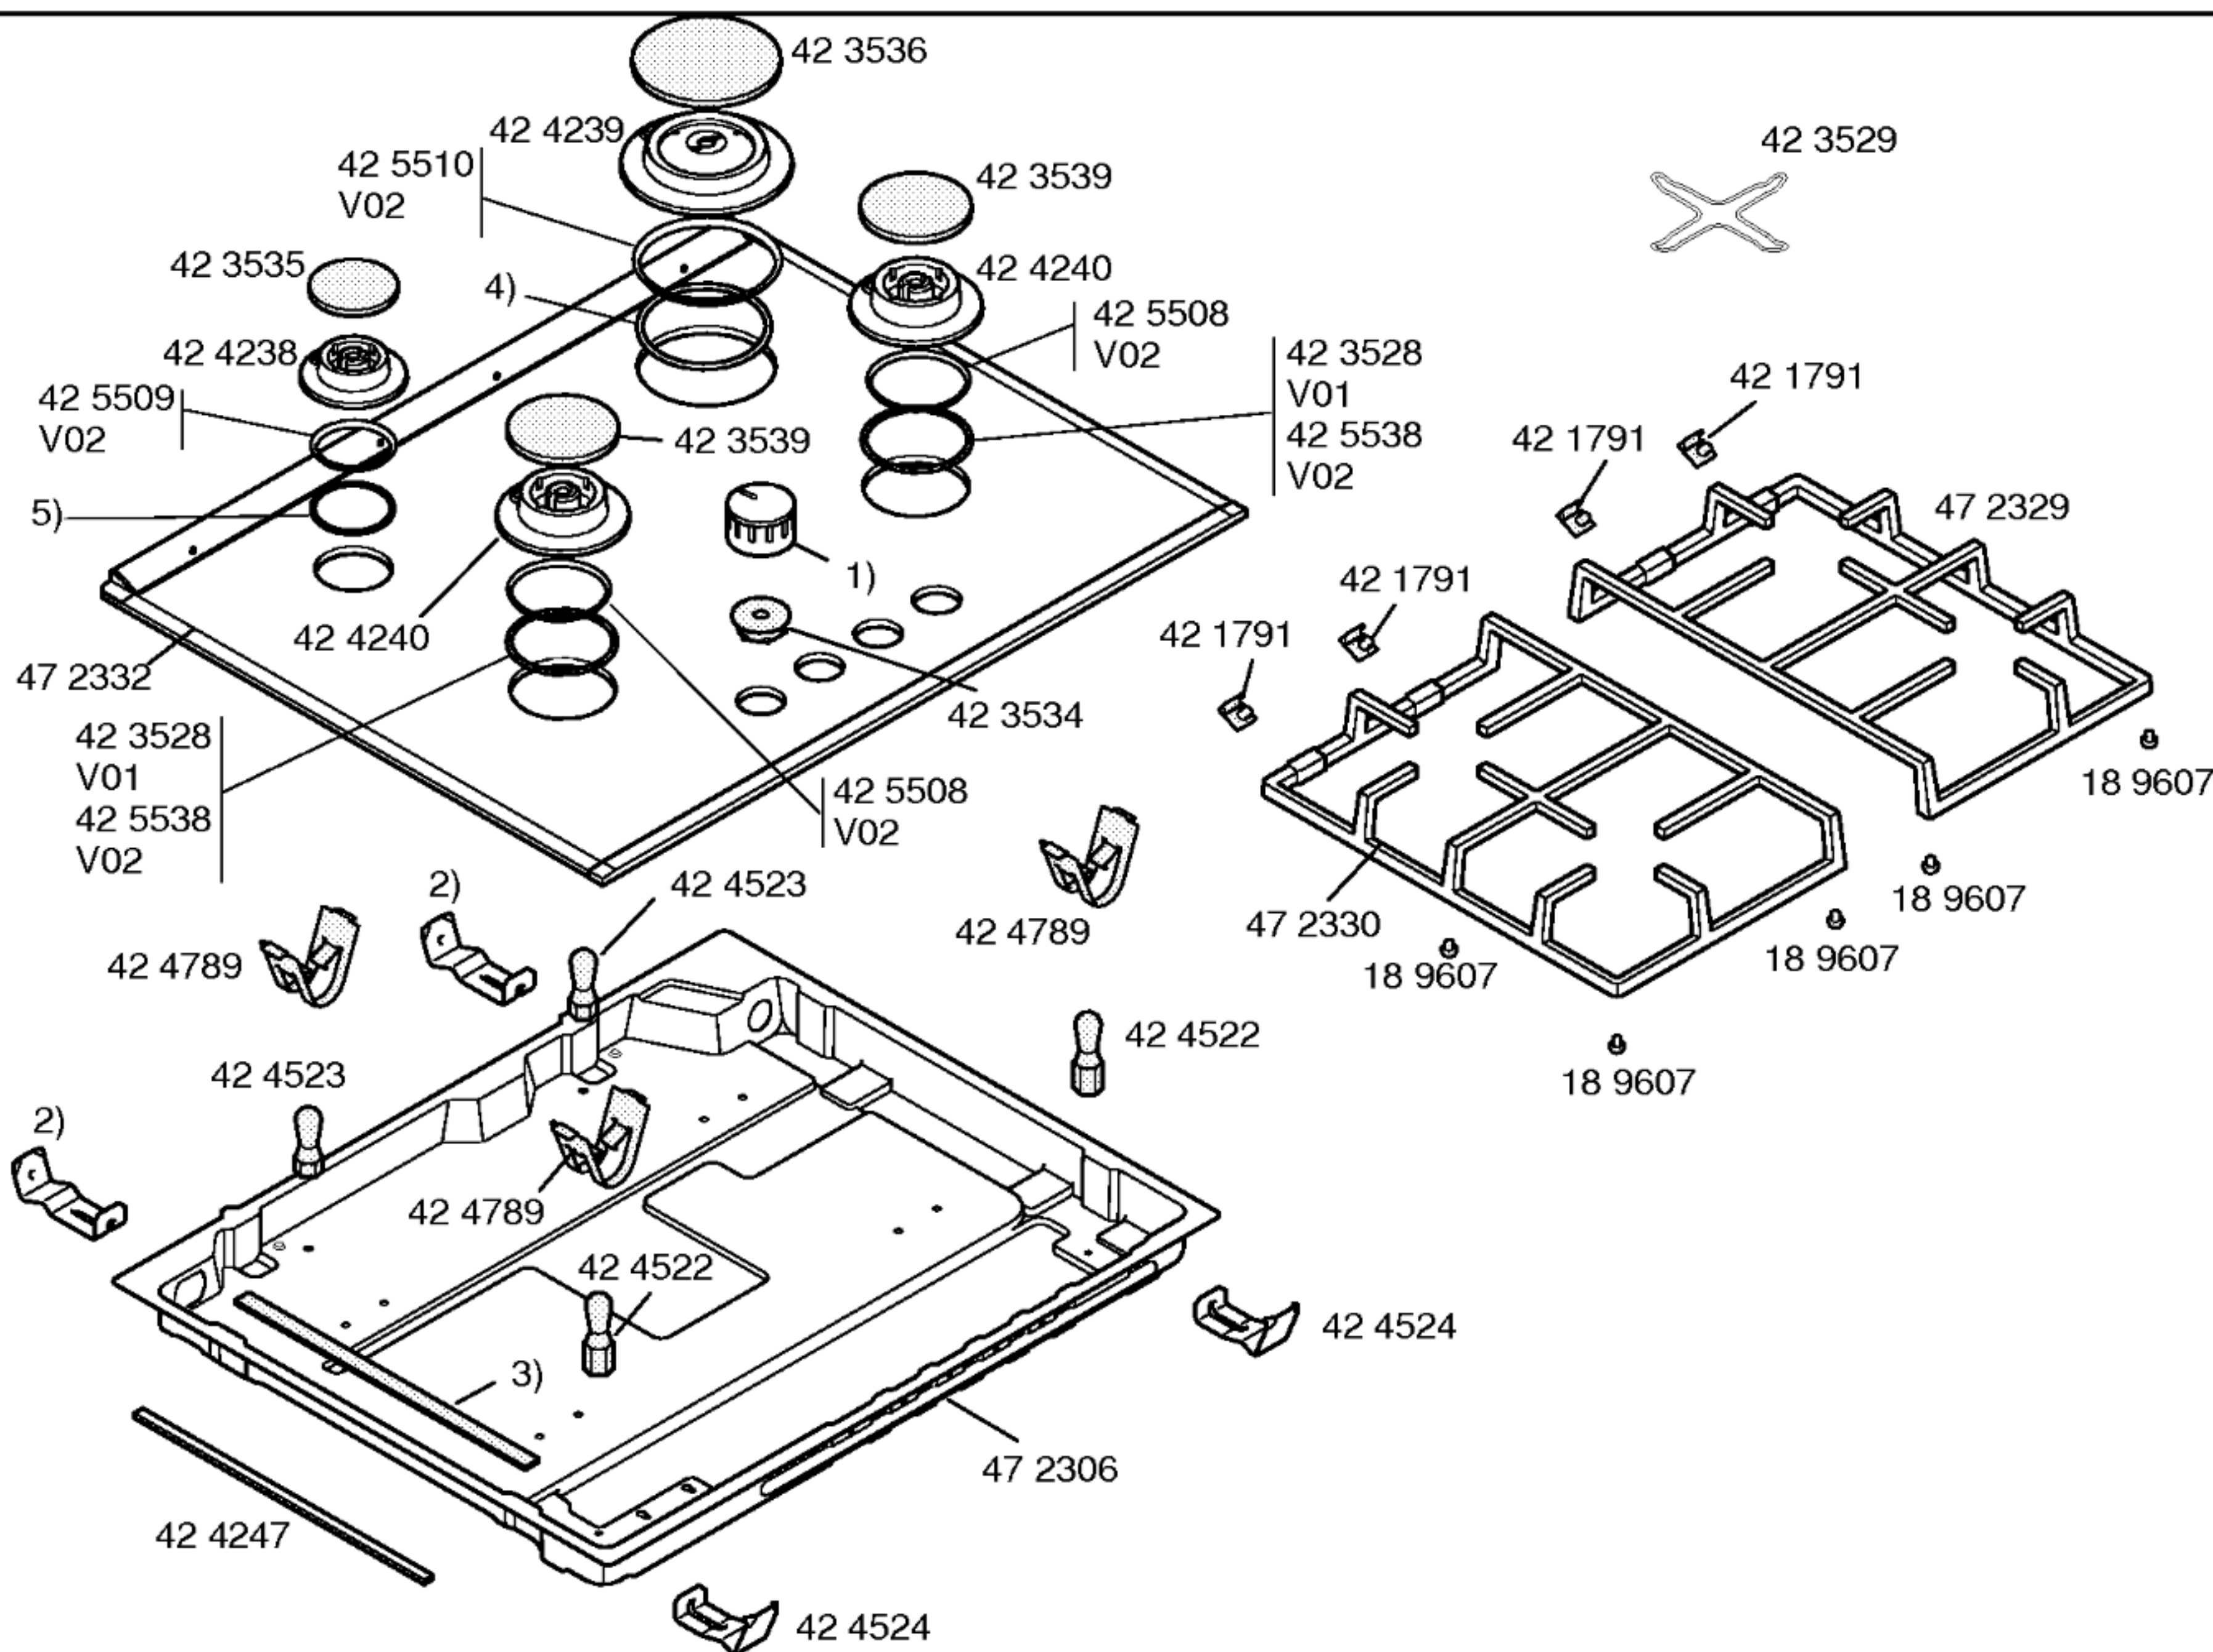

Gebrauchsanweisung
58 8654
(en,fr,it,de,es,pt,nl,sk)

- 1) 42 5219
 - 2) 42 4525
 - 3) 42 4526
 - 4) 42 3527
V01
42 5536
V02
 - 5) 42 3526
V01
42 5540
V02
- Schlüssel für
Düsenwechsel
42 4699

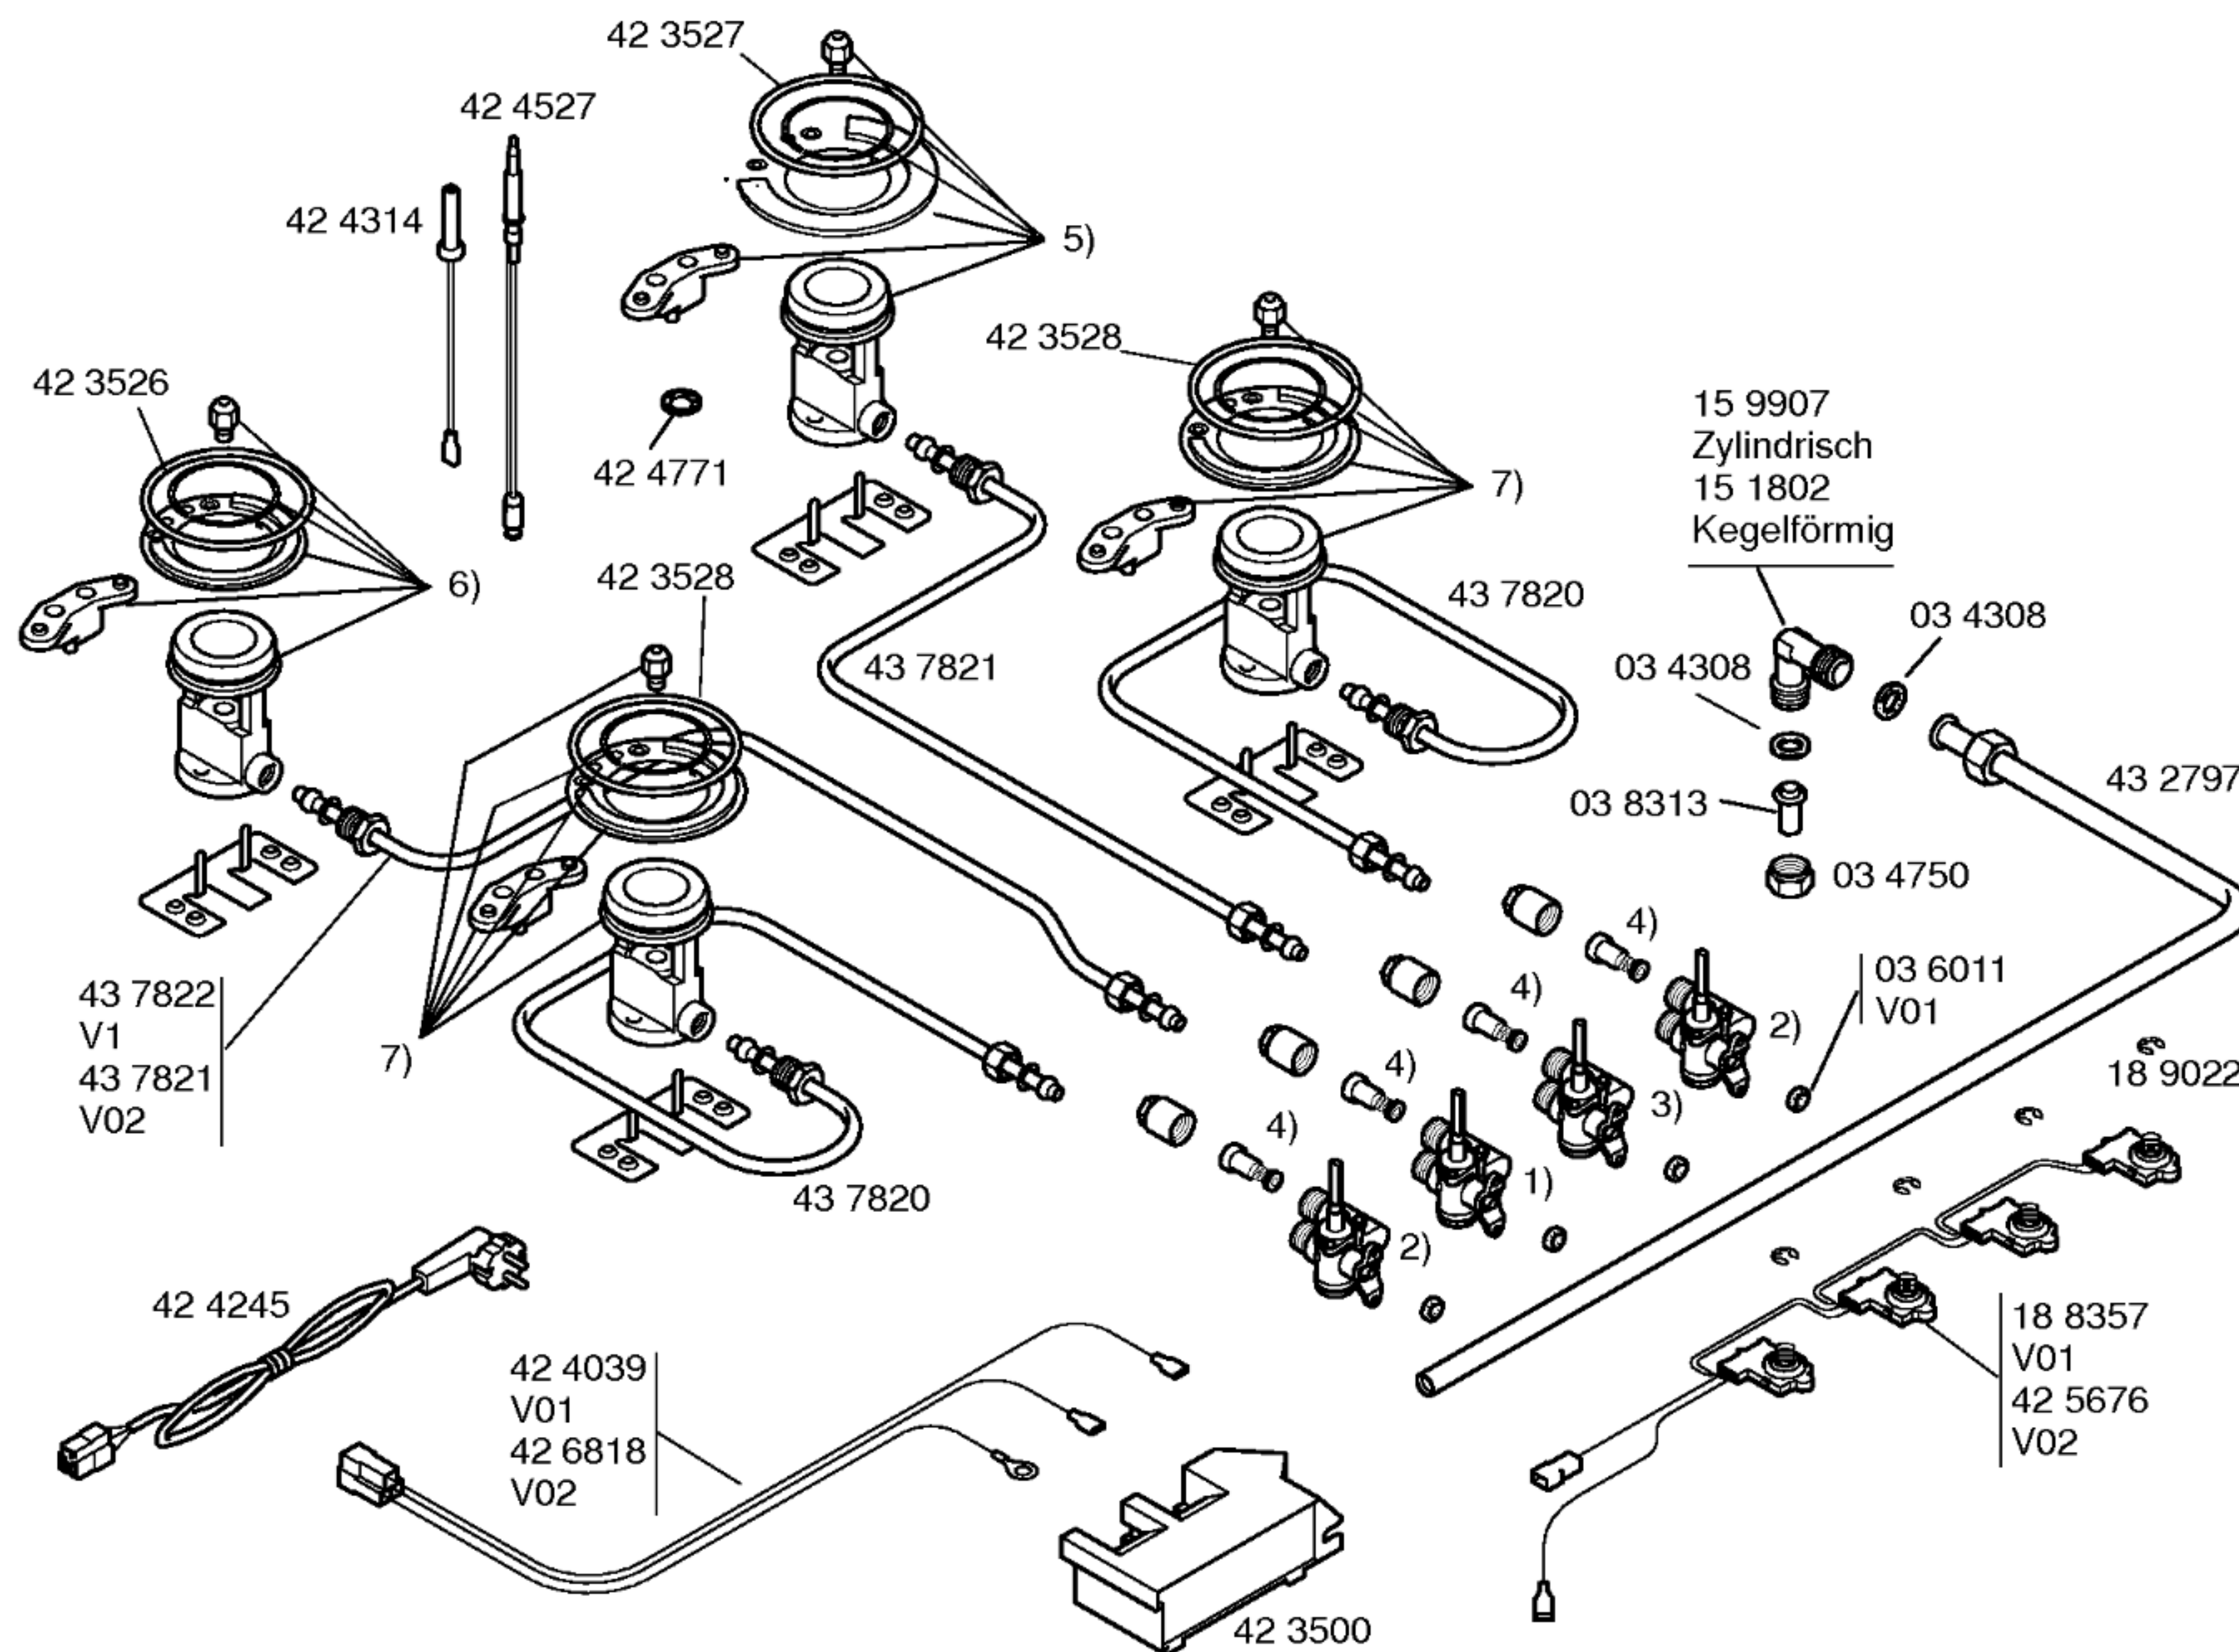

- 1) 42 3501
V01
42 5674
V02
- 2) 42 3509
V01
42 5675
V02
- 3) 42 3544
V01
42 5673
V02
- 4) 42 1964
- 5) 42 3531
V01
49 4465
V02
- 6) 42 3530
V01
49 4467
V02
- 7) 42 3533
V01
49 4466
V02

Düsensatz für:
G-30, 50 mbar
42 1473
G-30, 30 mbar
42 4220
G-20, 20 mbar
42 4221
G-25, 25 mbar
42 4225
G-25, 20 mbar
42 4223