


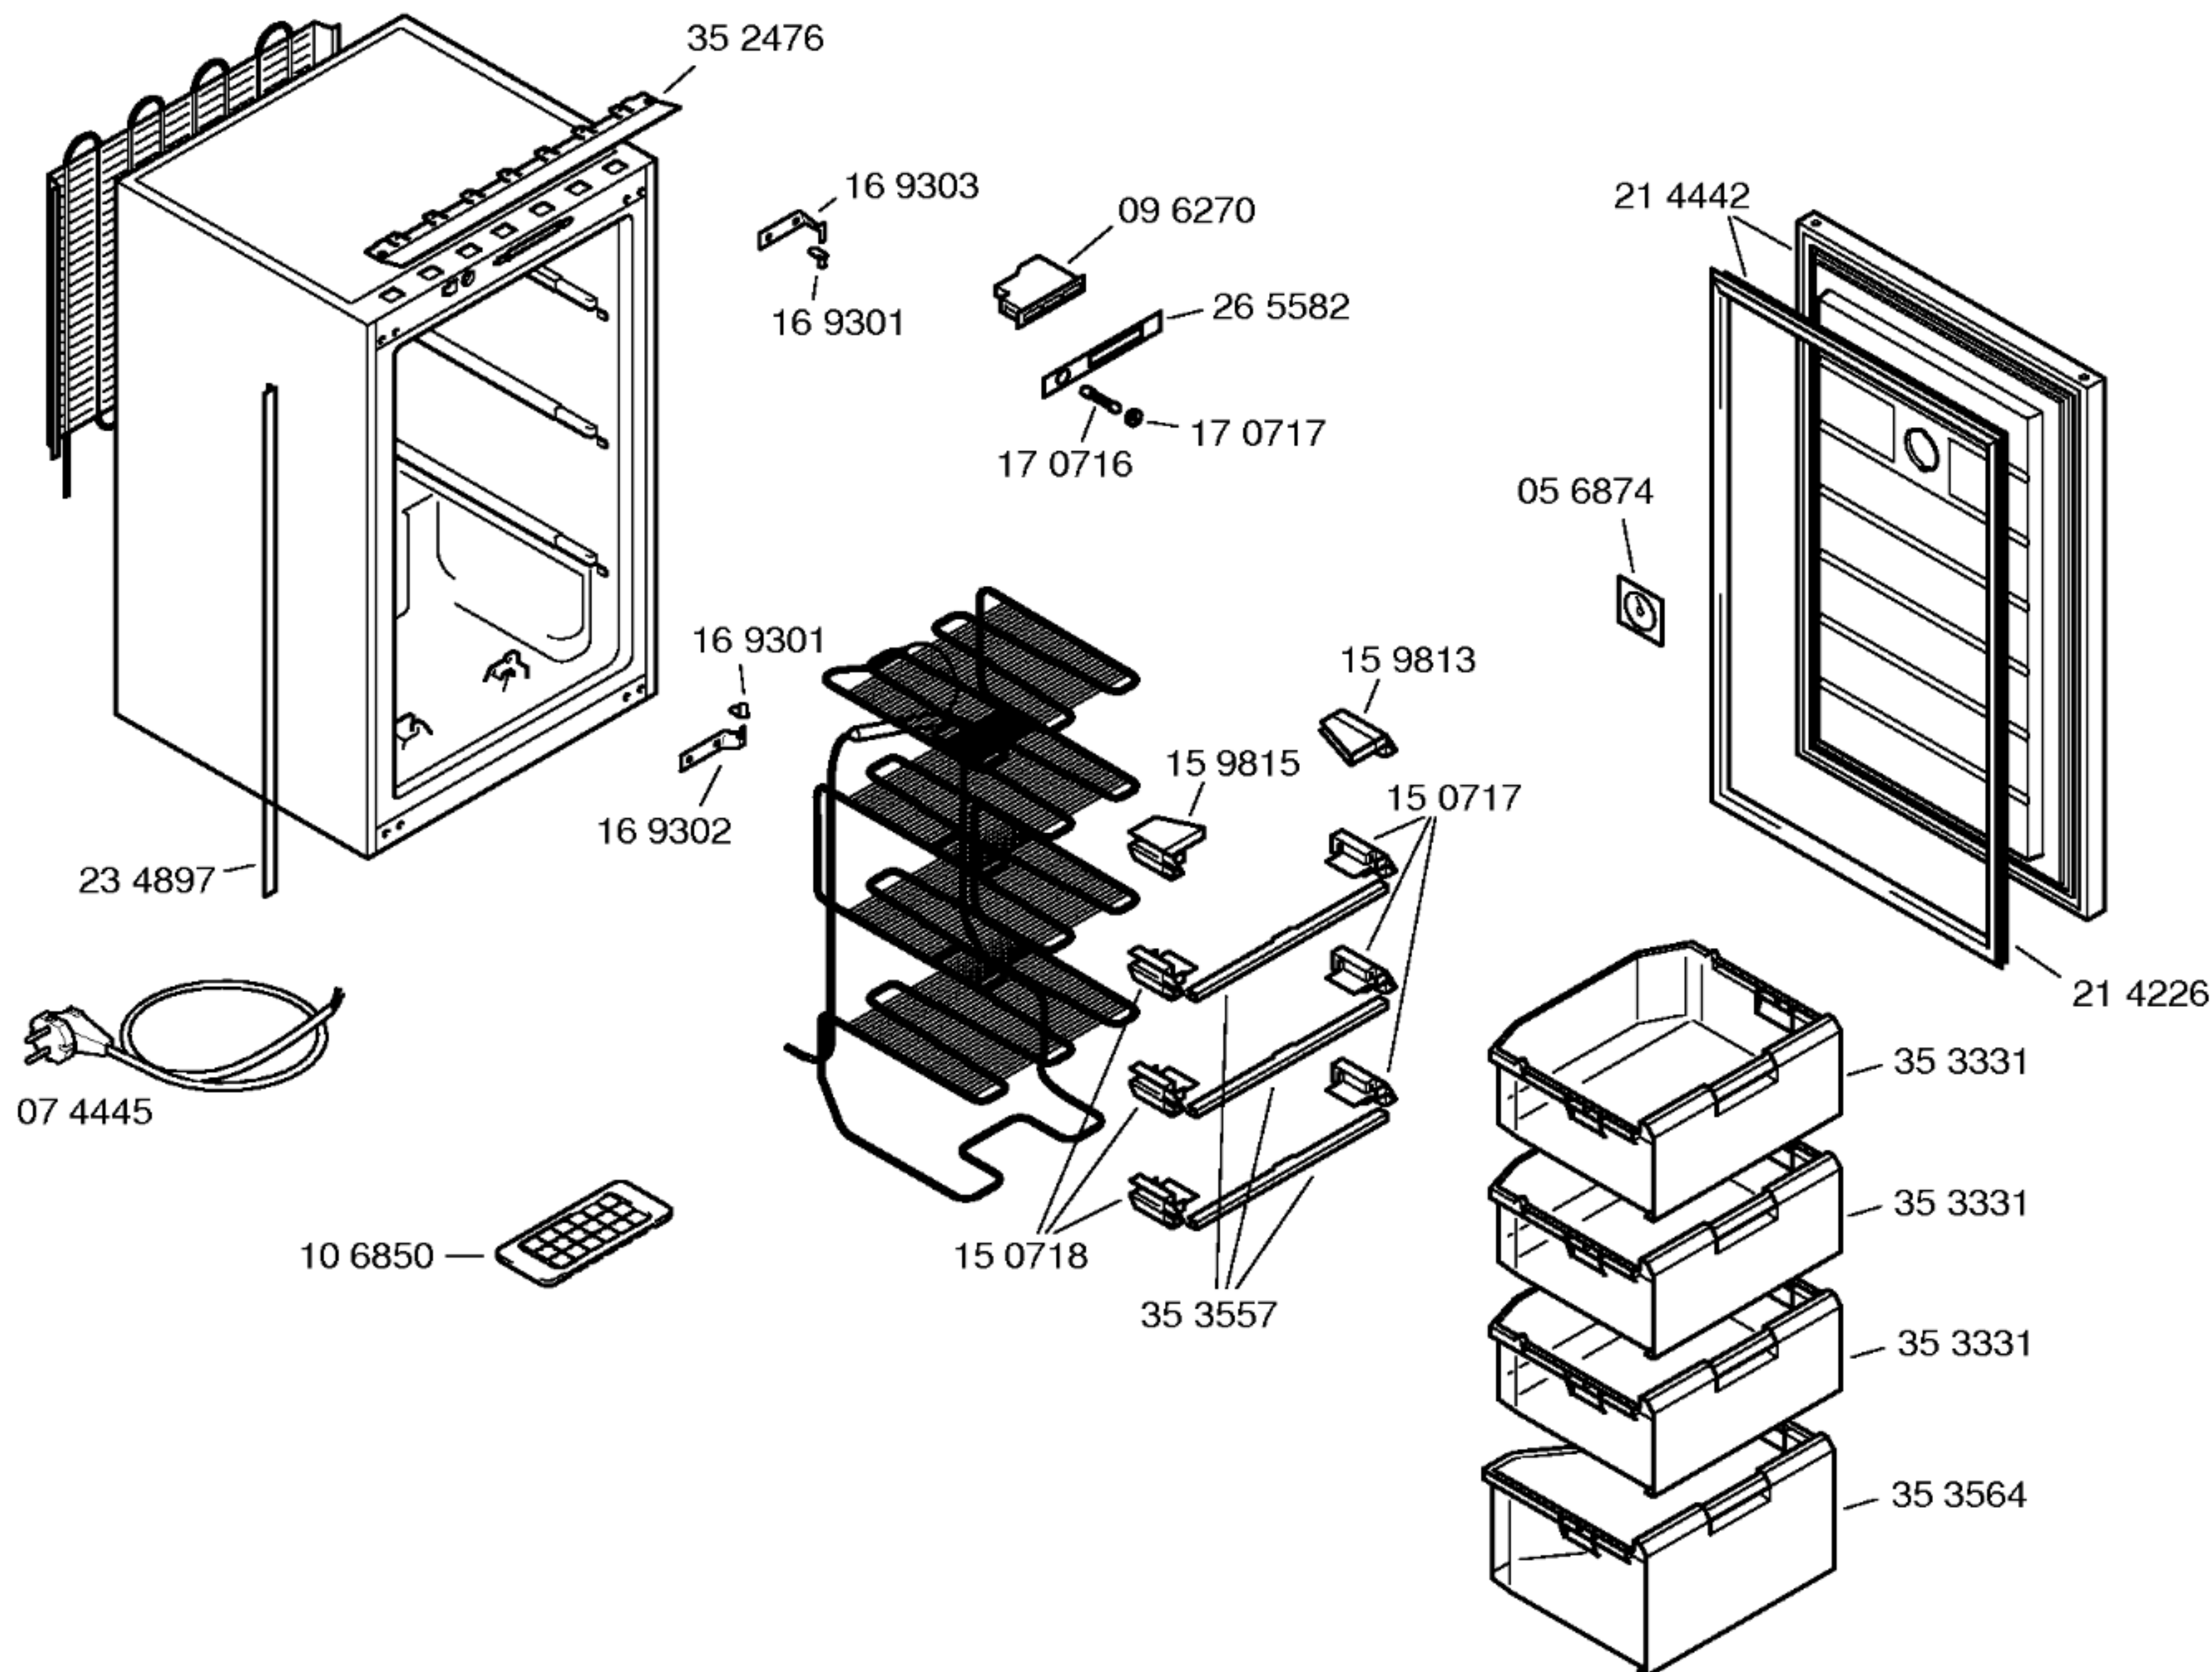


Gebrauchsanweisung
52 2710
(D,GB,F,I,NL)

Montageanleitung
52 1893
(D,GB,F,I,NL,DK,N,SF,
SE,P)

Beistellsatz
26 4862

Temp.-Regler
Rep.-Satz
26 5271

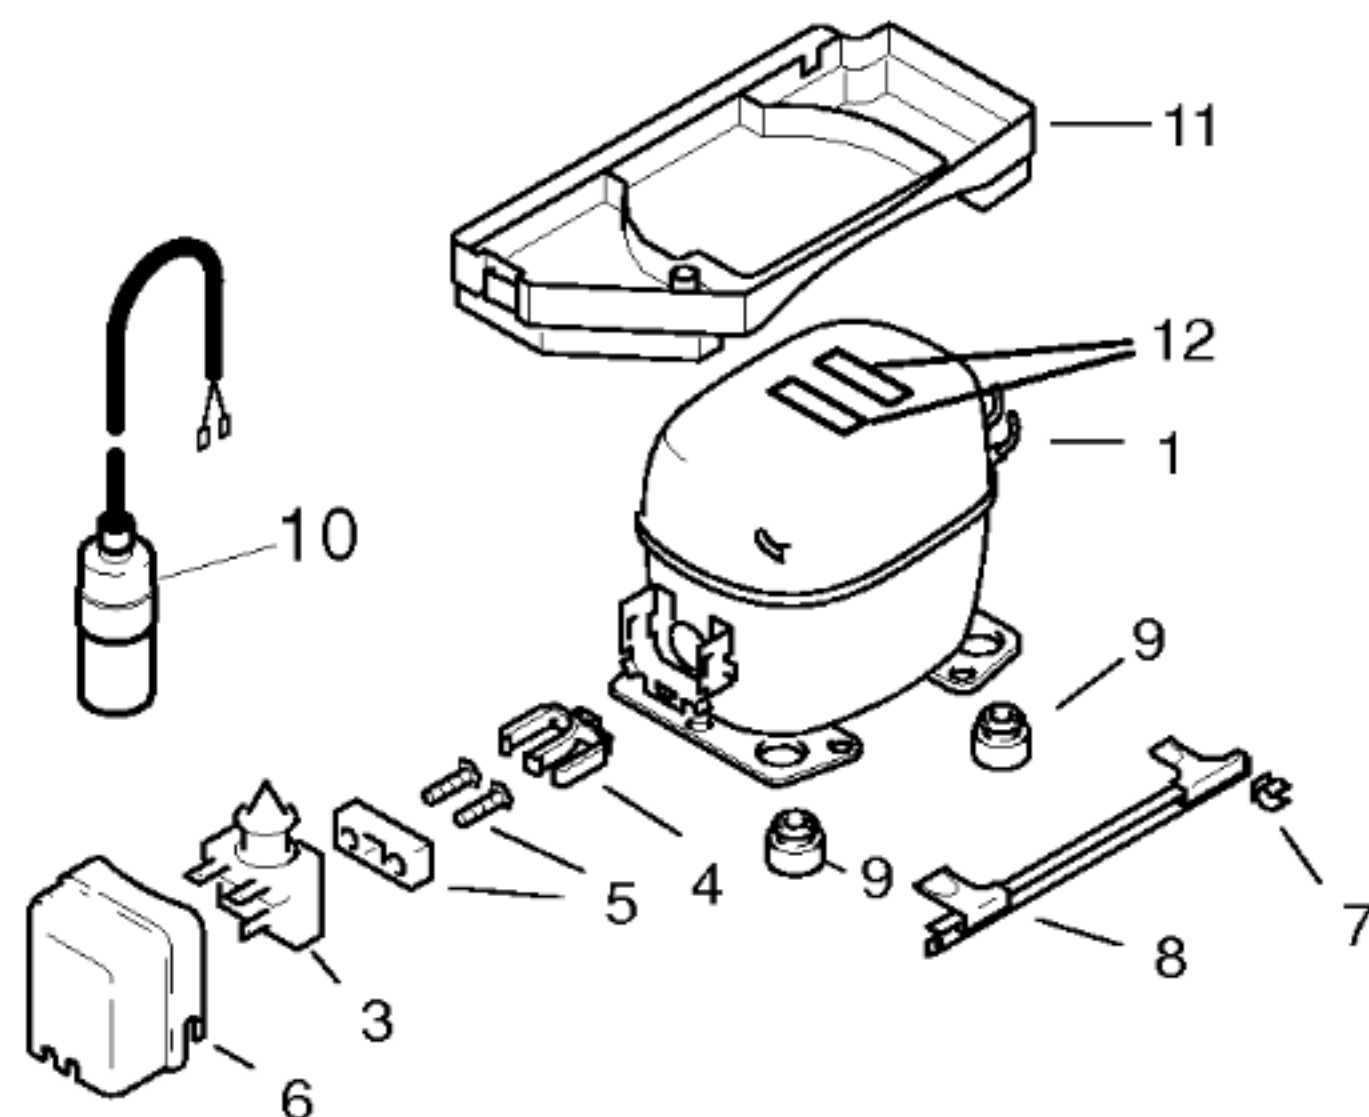

	V01	V02,	
Pos.	Goldstar	Danfoss	
	ND69NAEM	TLES 7 KK2	
1	14 1999	14 1903	
2			
3	17 0743	15 1055	
4	17 0746		
5	17 0745	15 0760	
6	17 0744	15 1072	
7	16 9319	16 9319	
8	26 4879	26 4879	
9	05 0166	05 0166	
10			
11			
12			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur	Goldstar	Danfoss	
Typ/Type	ND69NAEM	TLES 7 KK2	
Förderleistung/Delivery/Débit	l/h	1168	
Anlaufstrom/Starting current/Cour de démarrage	A	8,8	
Widerstand/Resistance/Résistance Ha/main/prin	Ω	18,9	
Hi/aux	Ω	15,3	

Temp.-Regler/Thermostat	KER		
Typ/Type	RCO		
Regelstellung/Position	kalt	warm	
Schaltwerte/Switching values	ein"	-23,0	-15,0
Valeurs de commutation	aus"	-31,0	-21,0
	"alarm"		

Füllmenge/Fill.quantity/Charge	R600a	*	
--------------------------------	-------	---	--

Anschlußwert/Conn.load/Puiss. connectée	W	83	
---	---	----	--

Heizung/Heater/Chauffage			
Widerstand/Resistance/Résistance	Ω		
Leistung/Power/Puissance	W		

Ventilator/Blower/Ventilateur			
Widerstand/Resistance/Résistance	Ω		

Temp.-Regler/Thermostat			
-------------------------	--	--	--

Magnetventil/Magnetic valve/Electrovanne			
Widerstand/Resistance/Résistance	Ω		
Spannung/Voltage/Tension	V		

* siehe Typenschild