




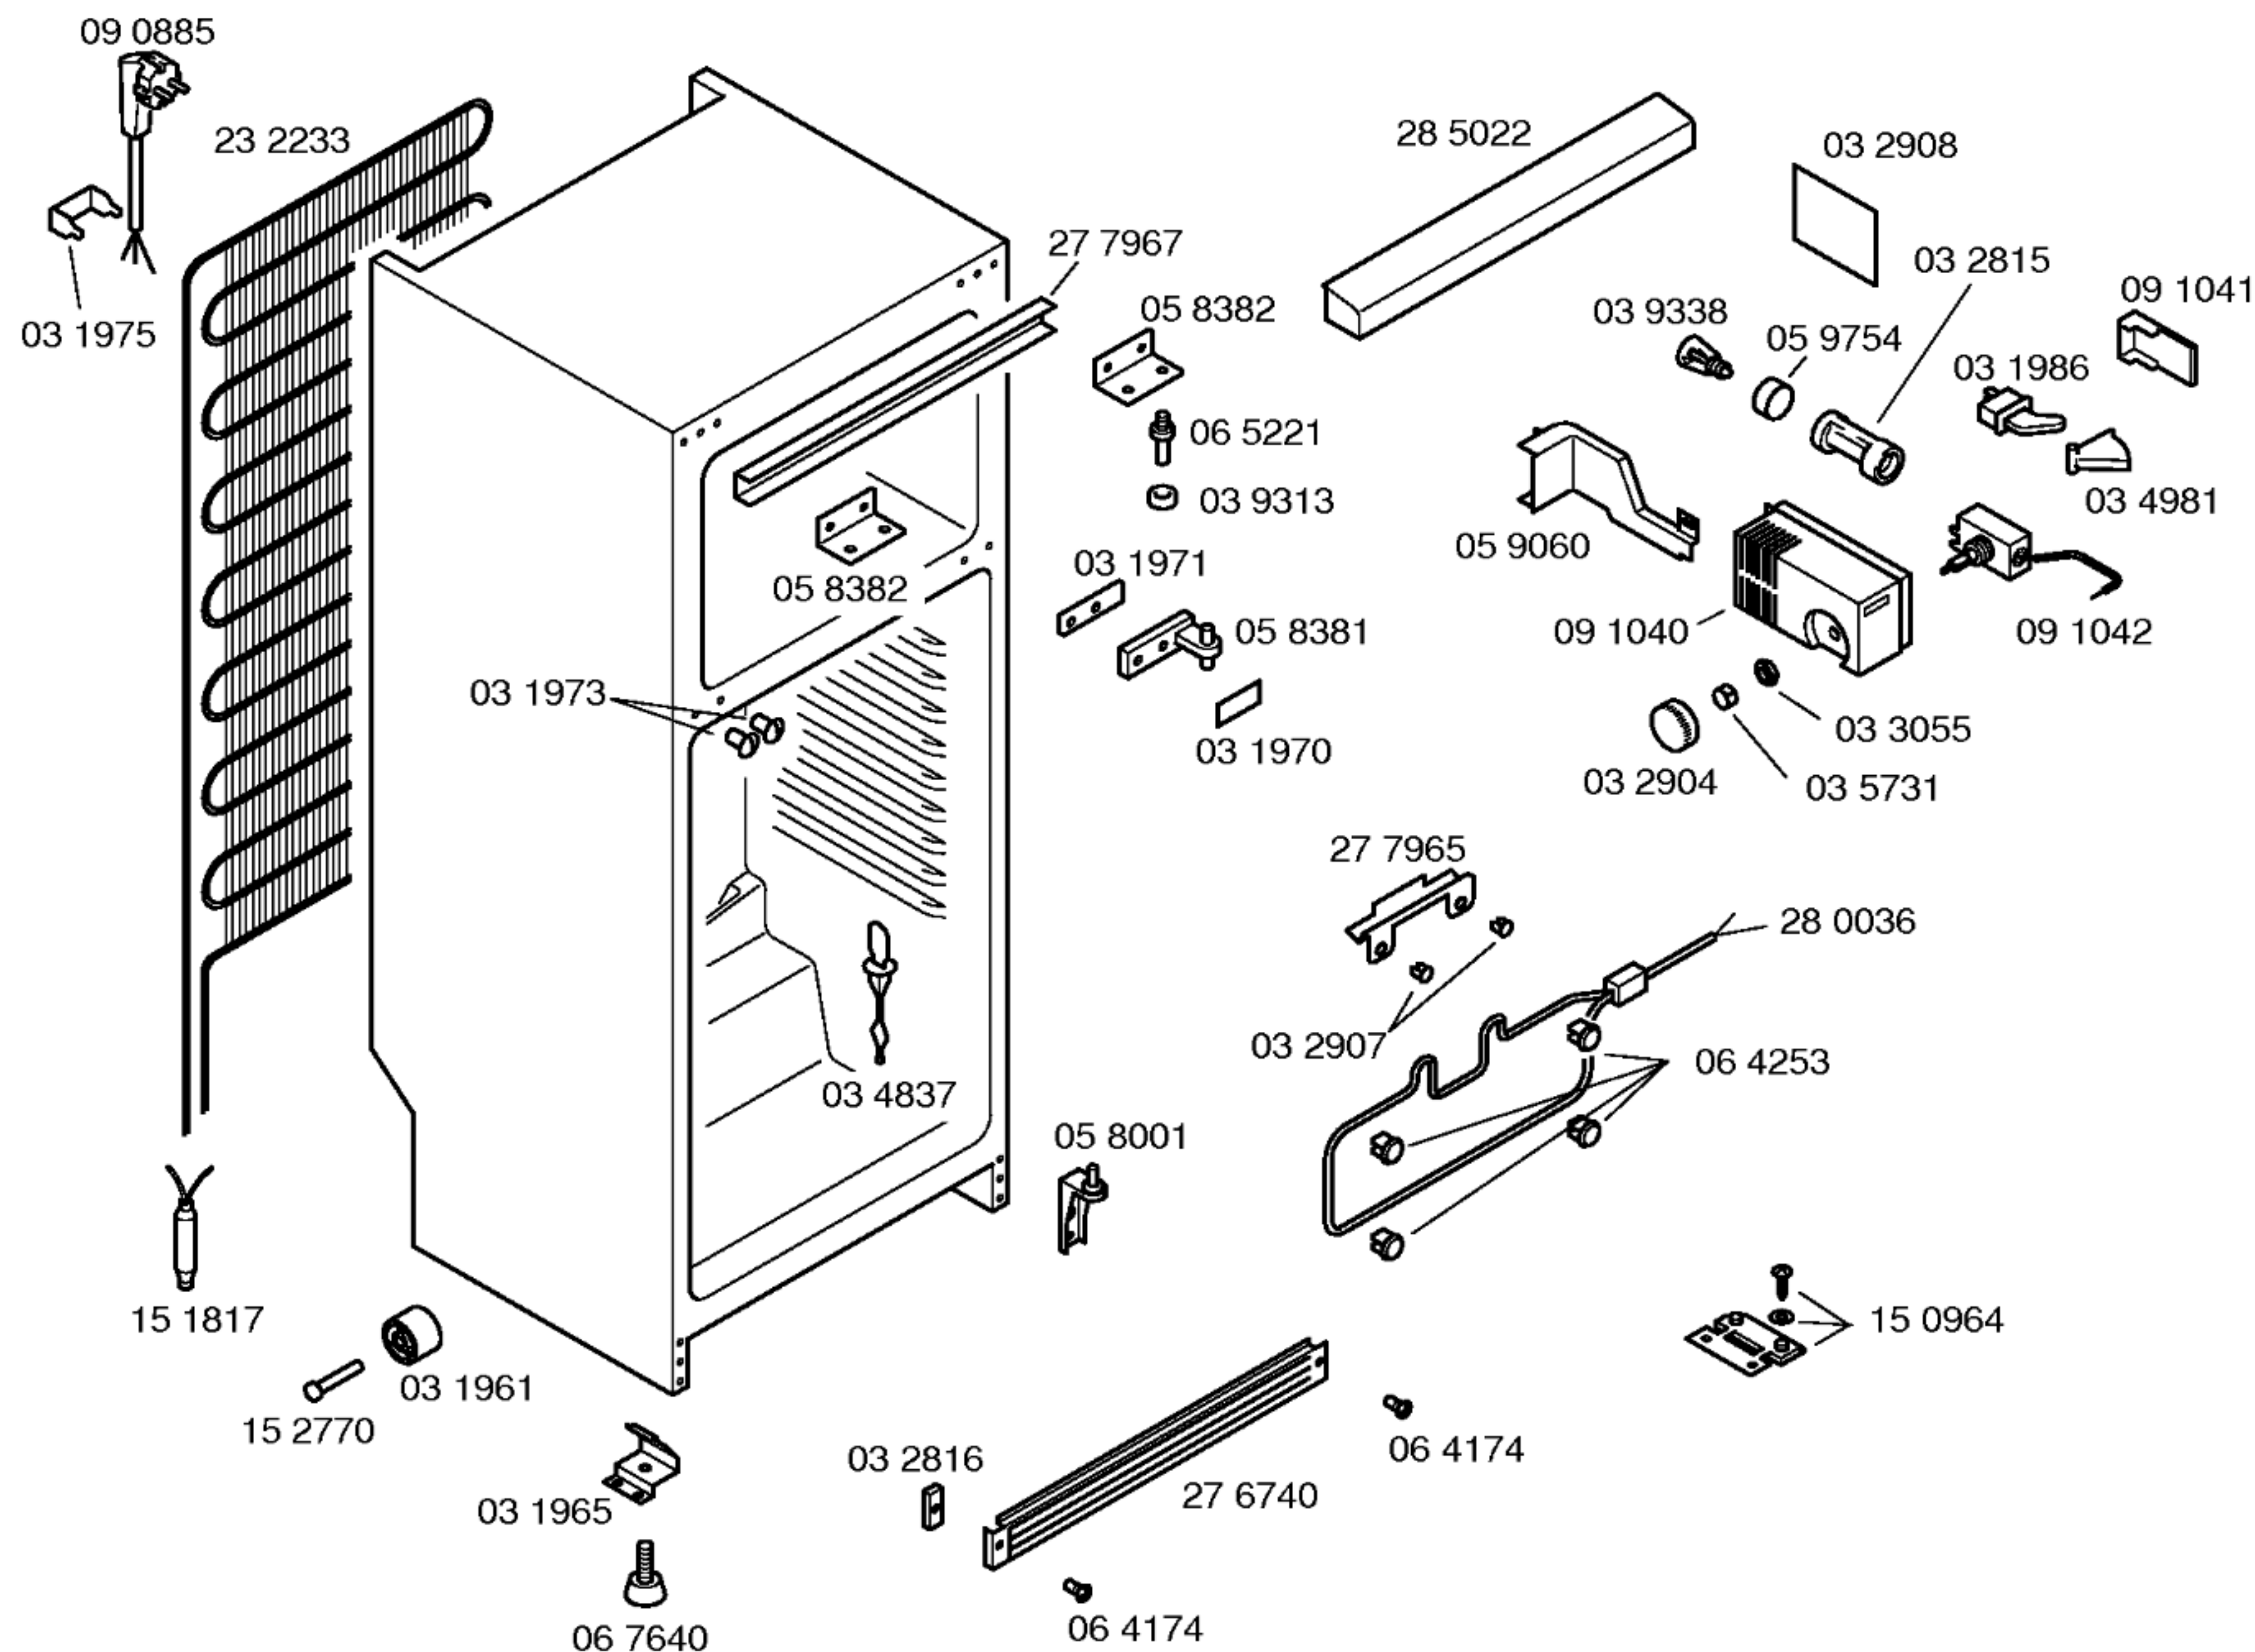

Libro de instrucciones
51 5200
(E, P, GB, F, NL, GR)

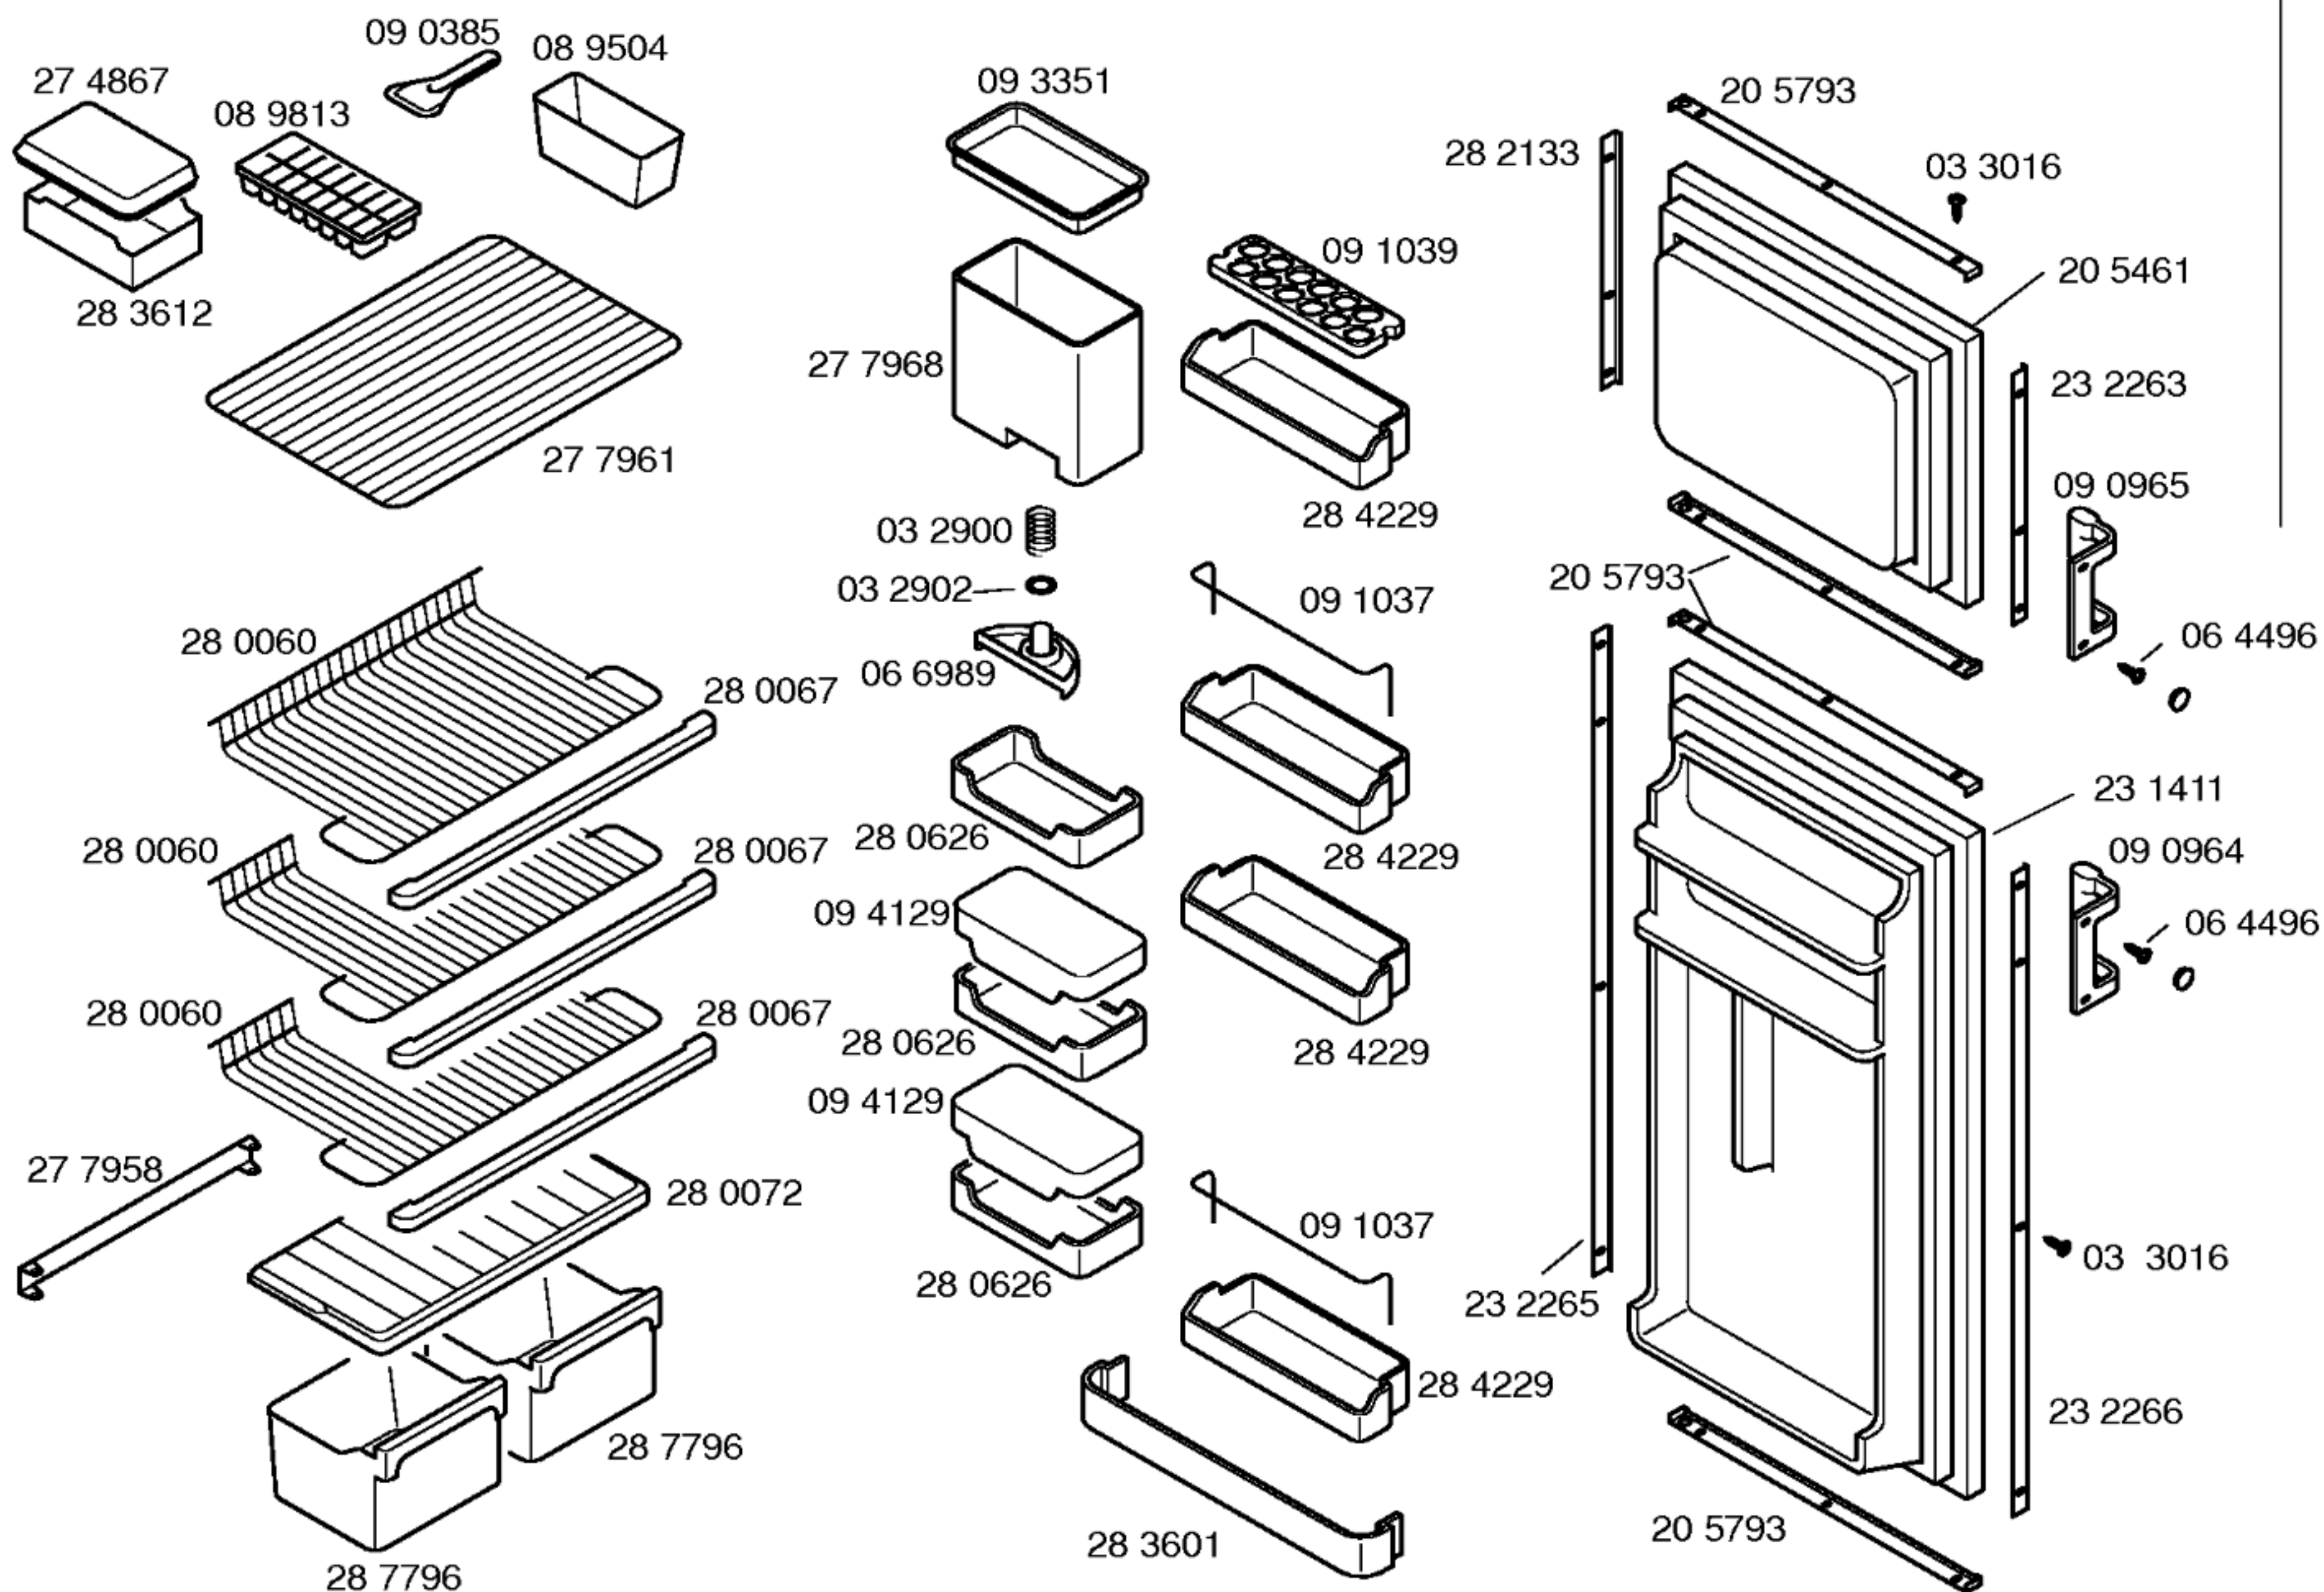

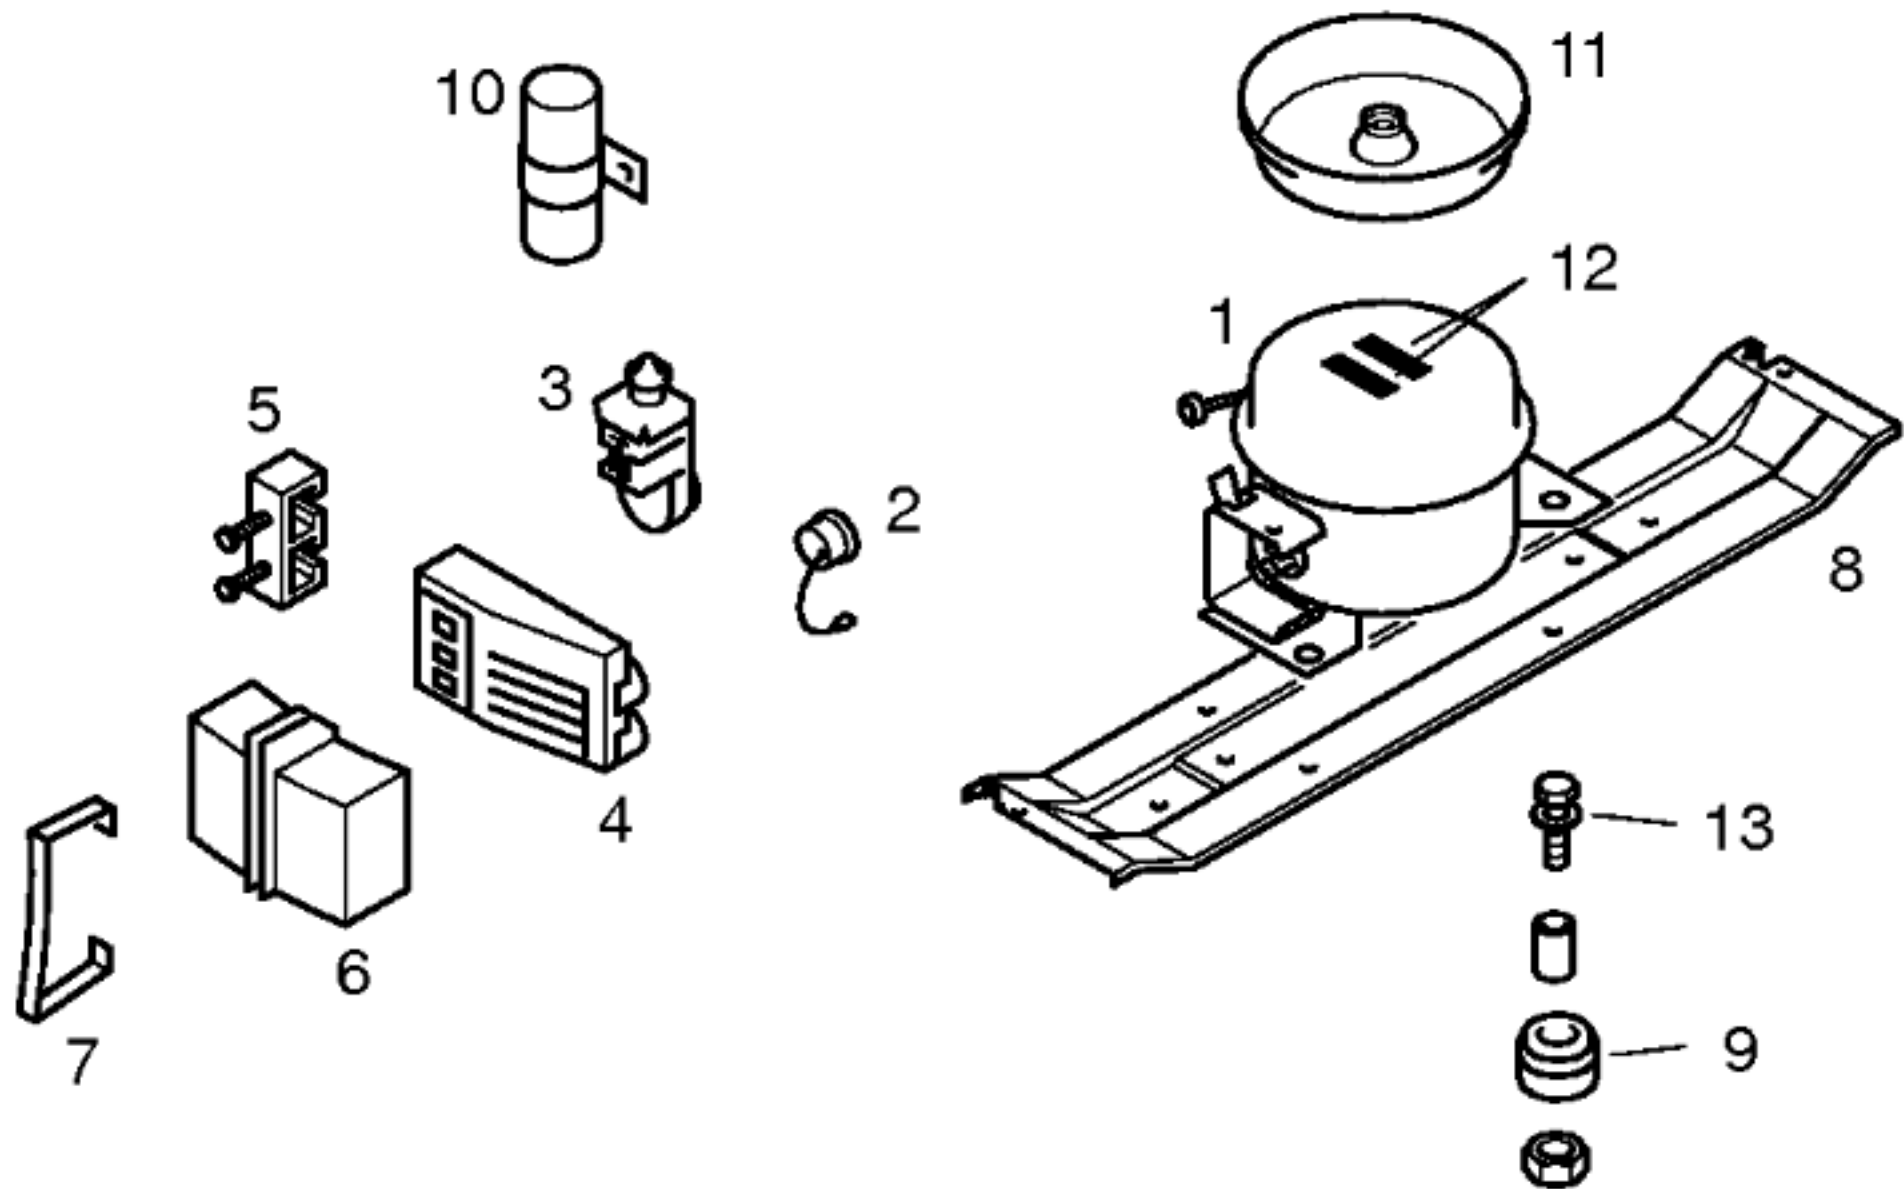

Pos.	KÜHLGERÄTE
	UNIDAD
	L-99BS
1	14 0784
2	06 4262
3	06 4261
4	
5	
6	
7	
8	27 7954
9	06 4260
10	
11	27 5629
12	03 5392
13	06 4259

TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECHNIQUES/DATOS TECNICOS			
Verdichter/Compressor/Compresseur/Compresor Typ/Type/Tipo		UNIDAD L-99BS	
Förderleistung/Delivery/Debit/Aspiración l/h		182	
Anlaufstrom/Starting current/Cour.démarrage/Int.arranque A		7,7	
Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm		7,8	
Hi/aux.		21,5	
Temp.Reyler/Thermostat/Termostato Typ/Type/Tipo		ATEA MANUAL	
Reglerstellung/Position/Conexión		+5º	
Schaltwerte/Switching values/		-15,5º	
Valeurs de commutation/Desconex.		-32º	
(..abtaven' od)		..alarm'	
Füllmenge/Fill. quantily/Charge/Carga R12		g	230
AnschluBwert/Comm. load/puiss. Connect./Potenc.		W	182
Heizung/Heater/Chauflage/Resistenc.descong.			
Widerstand/Resistance/Resistencia		Ohm	3782
Leistung/Power/Puissance/Potencia		W	12,5
Ventilador/Blower/Ventilateur/Ventilador			
Widerstand/Resistance/Resistencia		Ohm	
Magnetventil/Magnetic valve/Electrovanne/Electrovalvula			
Widerstand/Resistance/Resistencia		Ohm	
Spannung/Volare/Tension/Tensión		V	
Temp.Reyler/Thermostat/Termostato ambiente para ventilador refrigerador			