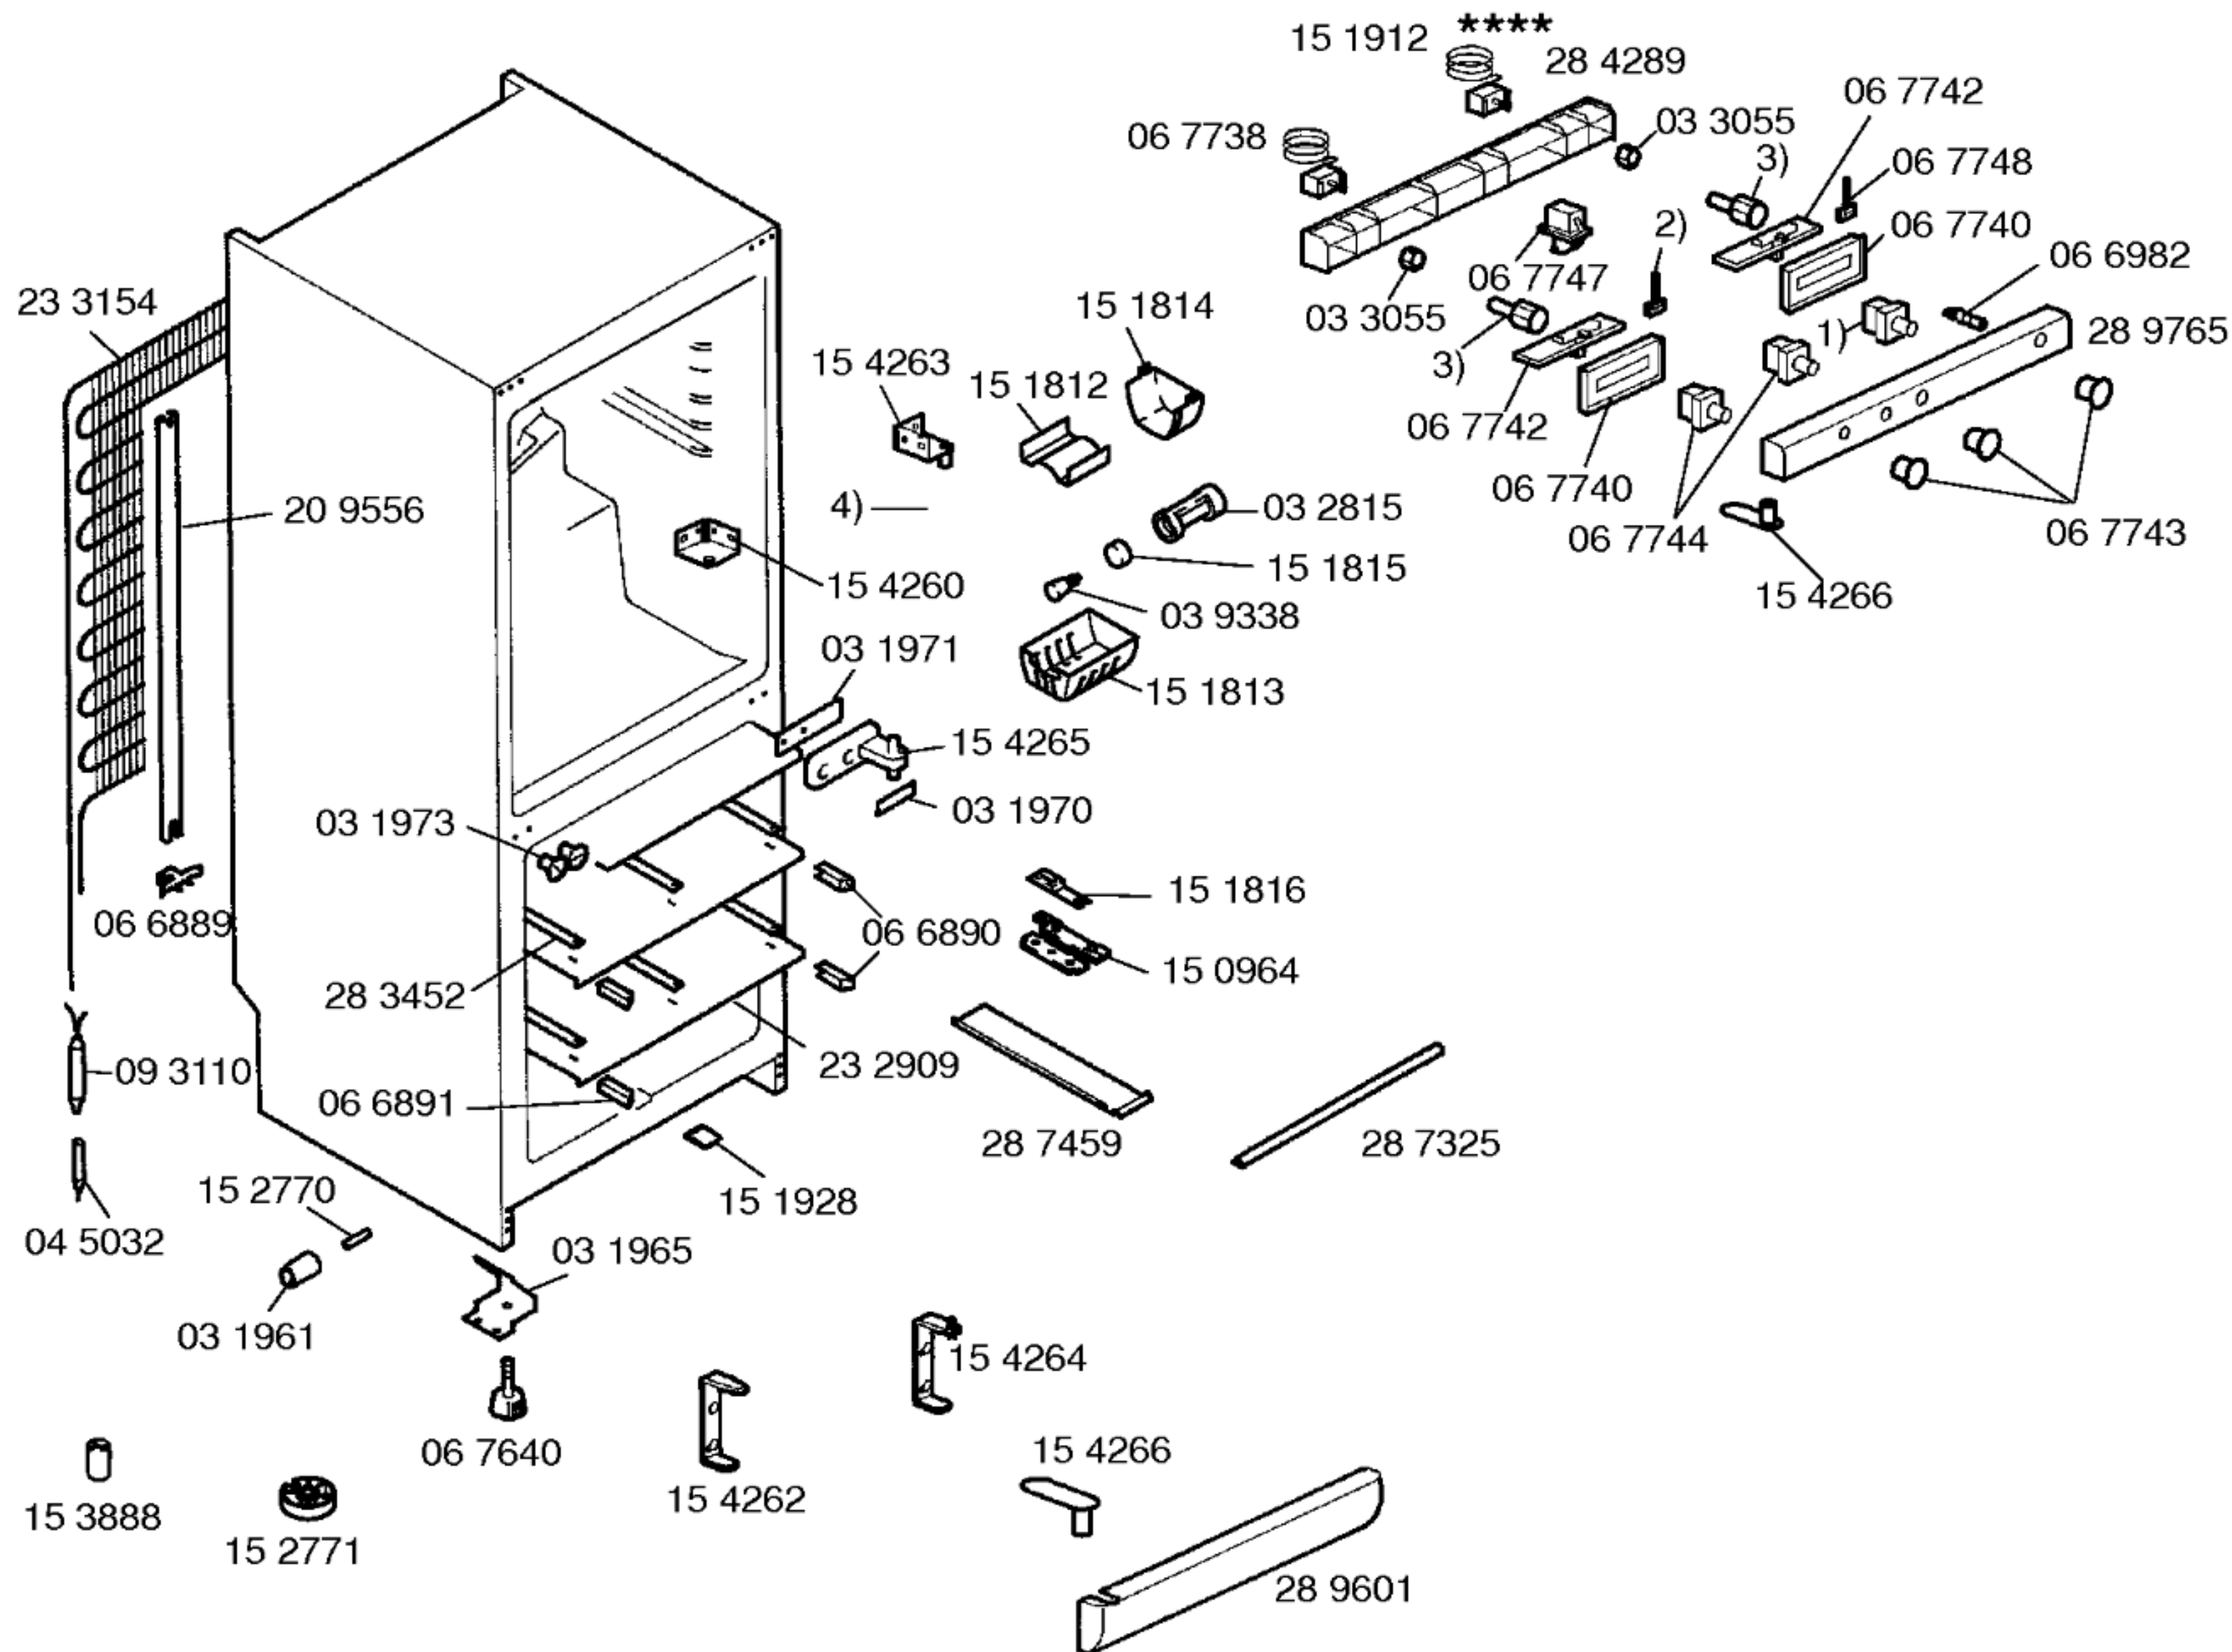


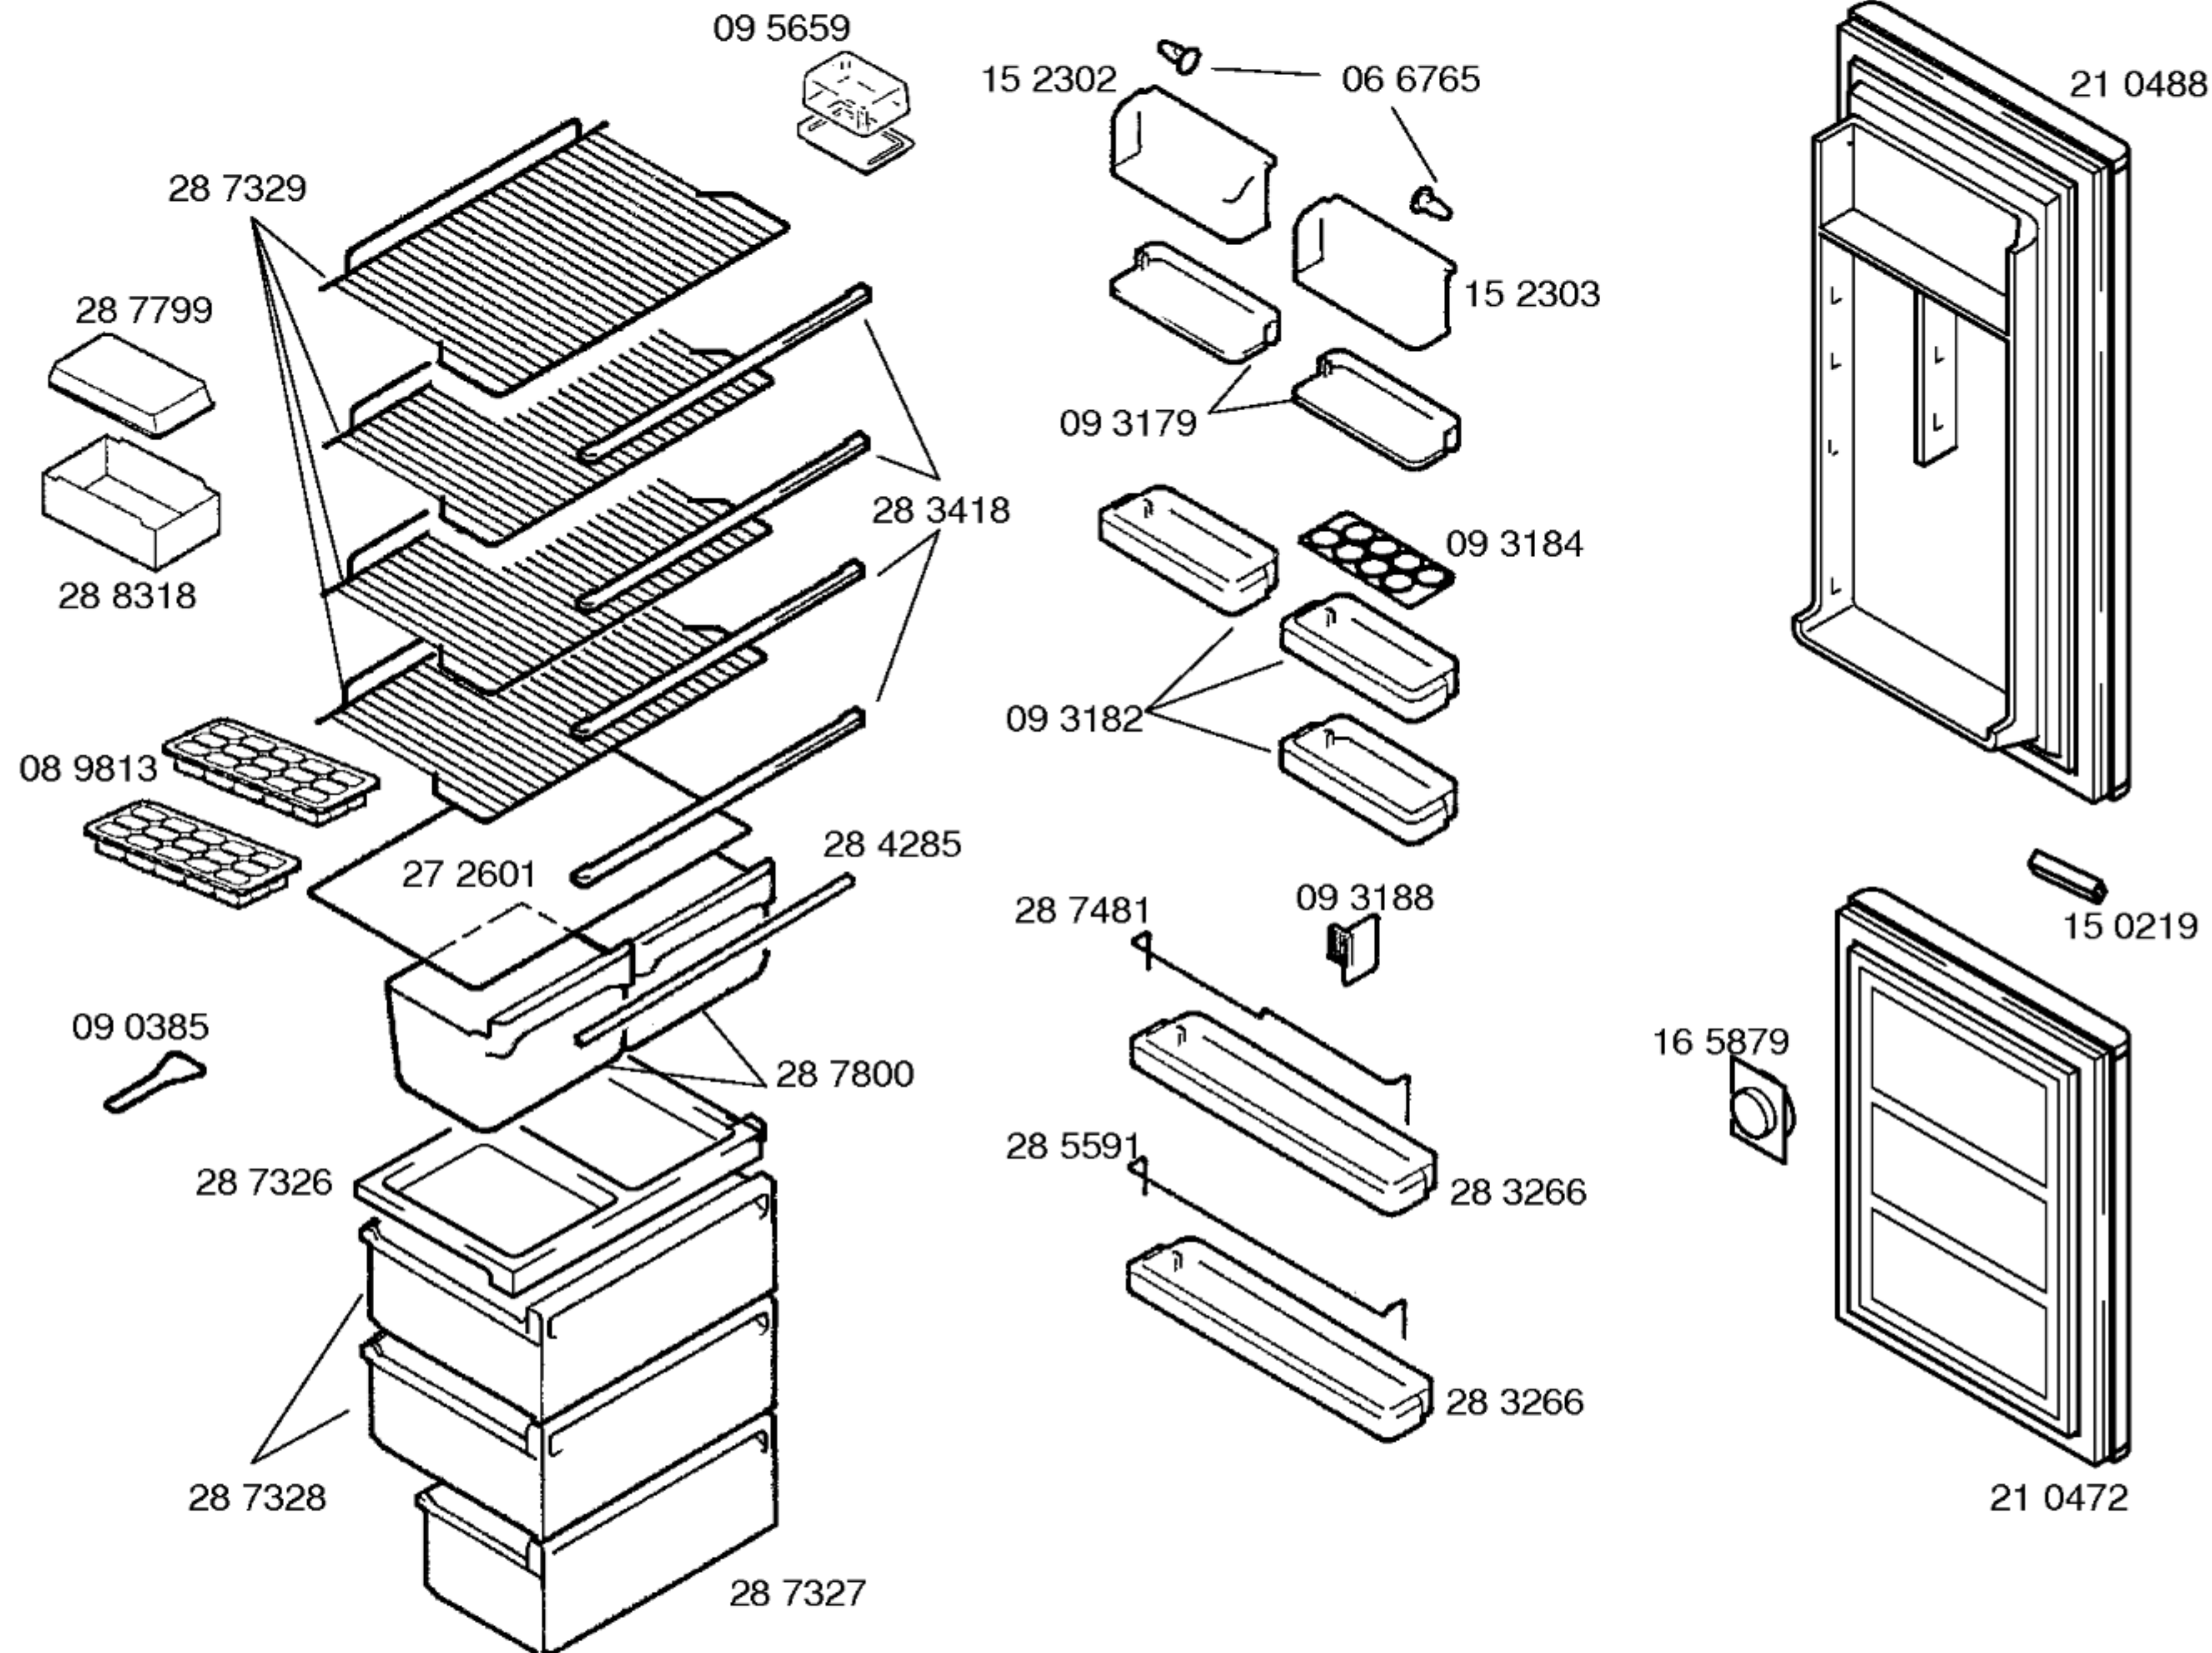


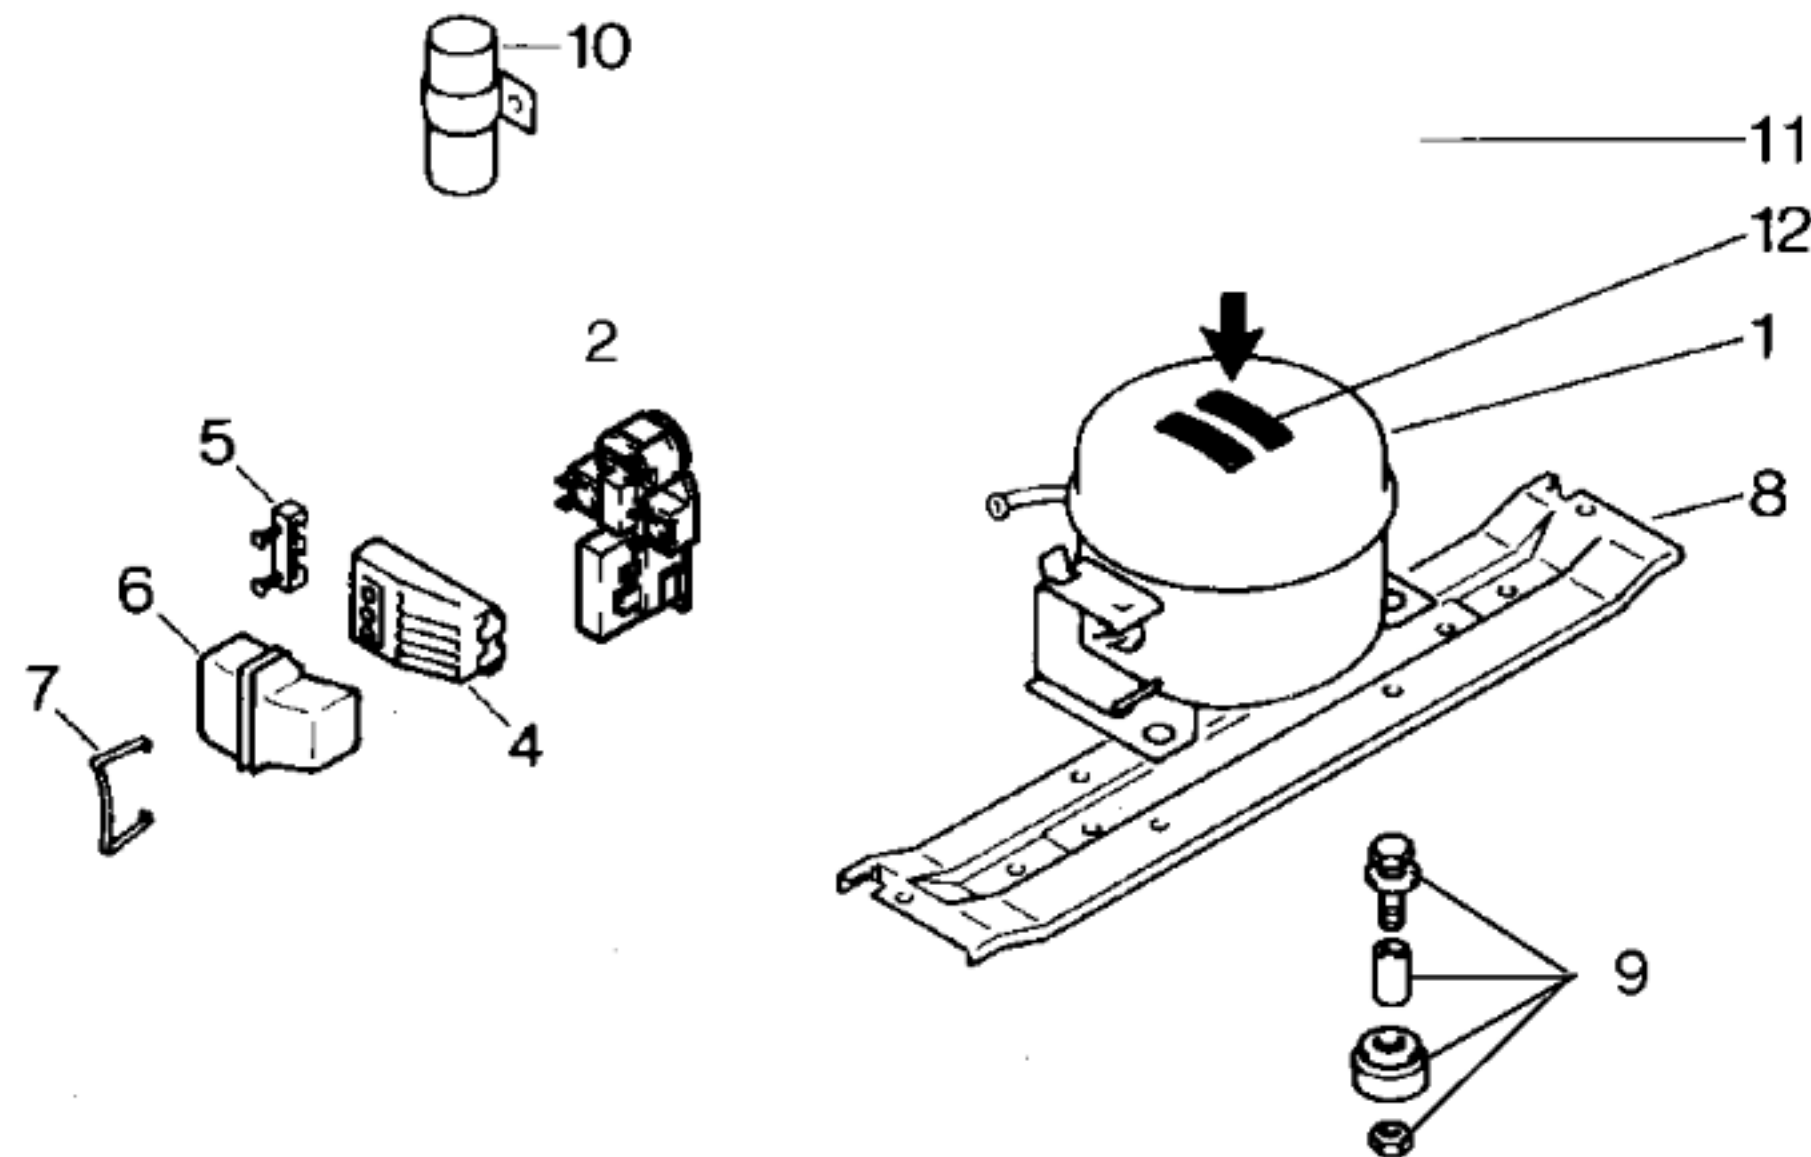
Ident - Nummern - Konstante
3740

Gebrauchsanweisung
51 7373
(D, GB, F, I, NL, P)

Montageanweisung
51 7949
(D, GB, F, I, NL)

- 1) 06 7745
- 2) 06 7748
- 3) 06 7746
- 4) 15 2757

Ident – Nummern – Konstante
3740

Ident – Nummern – Konstante
3740

Pos.	****	
	ASPERA BPM1084Z	U. HERMÉT. GL45AA
1	14 1343	14 1374
2	15 4315	15 5130
3		
4		
5		
6		
7		
8	28 8253	
9	05 0166	05 0166
10		
11	09 6883	
12		
13		

TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECHNIQUES/DATOS TECNICOS

Verdichter/Compressor/Compresseur/Compresor Typ/Type/Tipo Förderleistung/Delivery/Debit/Aspiración l/h Anlaufstrom/Starting current/Cour.démarrage/Int.arranque A Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm Hi/aux.	ASPERA. BPM1084Z	U. HERMÉT. GL45AA
	27,80	8,3
	38,5	21,2
		24,3

Temp.Reyler/Thermostat/Termostato Typ/Type/Tipo Reglerstellung/Position/Conexión Schaltwerte/Switching values/ ..ein/conex. °C Valeurs de commutation/Desconex. ..aus"/descon. (..abtaven' od) ..alarm'	DANFOS 077B62 MIN. MAX +6° -13° -28°	RANCO K54 L1924 MIN. MAX -14° -24° -21° -31° -15°
--	--	--

Füllmenge/Fill. quantity/Charge/Carga 134a	g	50	125
--	---	----	-----

Anschlußwert/Comm. load/puiss. Connect./Potenc.	W	84	87
---	---	----	----

Heizung/Heater/Chauflage/Resistenc.descong. Widerstand/Resistance/Resistencia Leistung/Power/Puissance/Potencia	Ohm W		
---	----------	--	--

Ventilator/Blower/Ventilateur/Ventilador Widerstand/Resistance/Resistencia	Ohm		
---	-----	--	--

Magnetventil/Magnetic valve/Electrovanne/Electrovalvula Widerstand/Resistance/Resistencia Spannung/Voltage/Tension/Tensión	Ohm V		
--	----------	--	--

Temp.Reyler/Thermostat/Termostato ambiente para ventilador refrigerador			
--	--	--	--