 


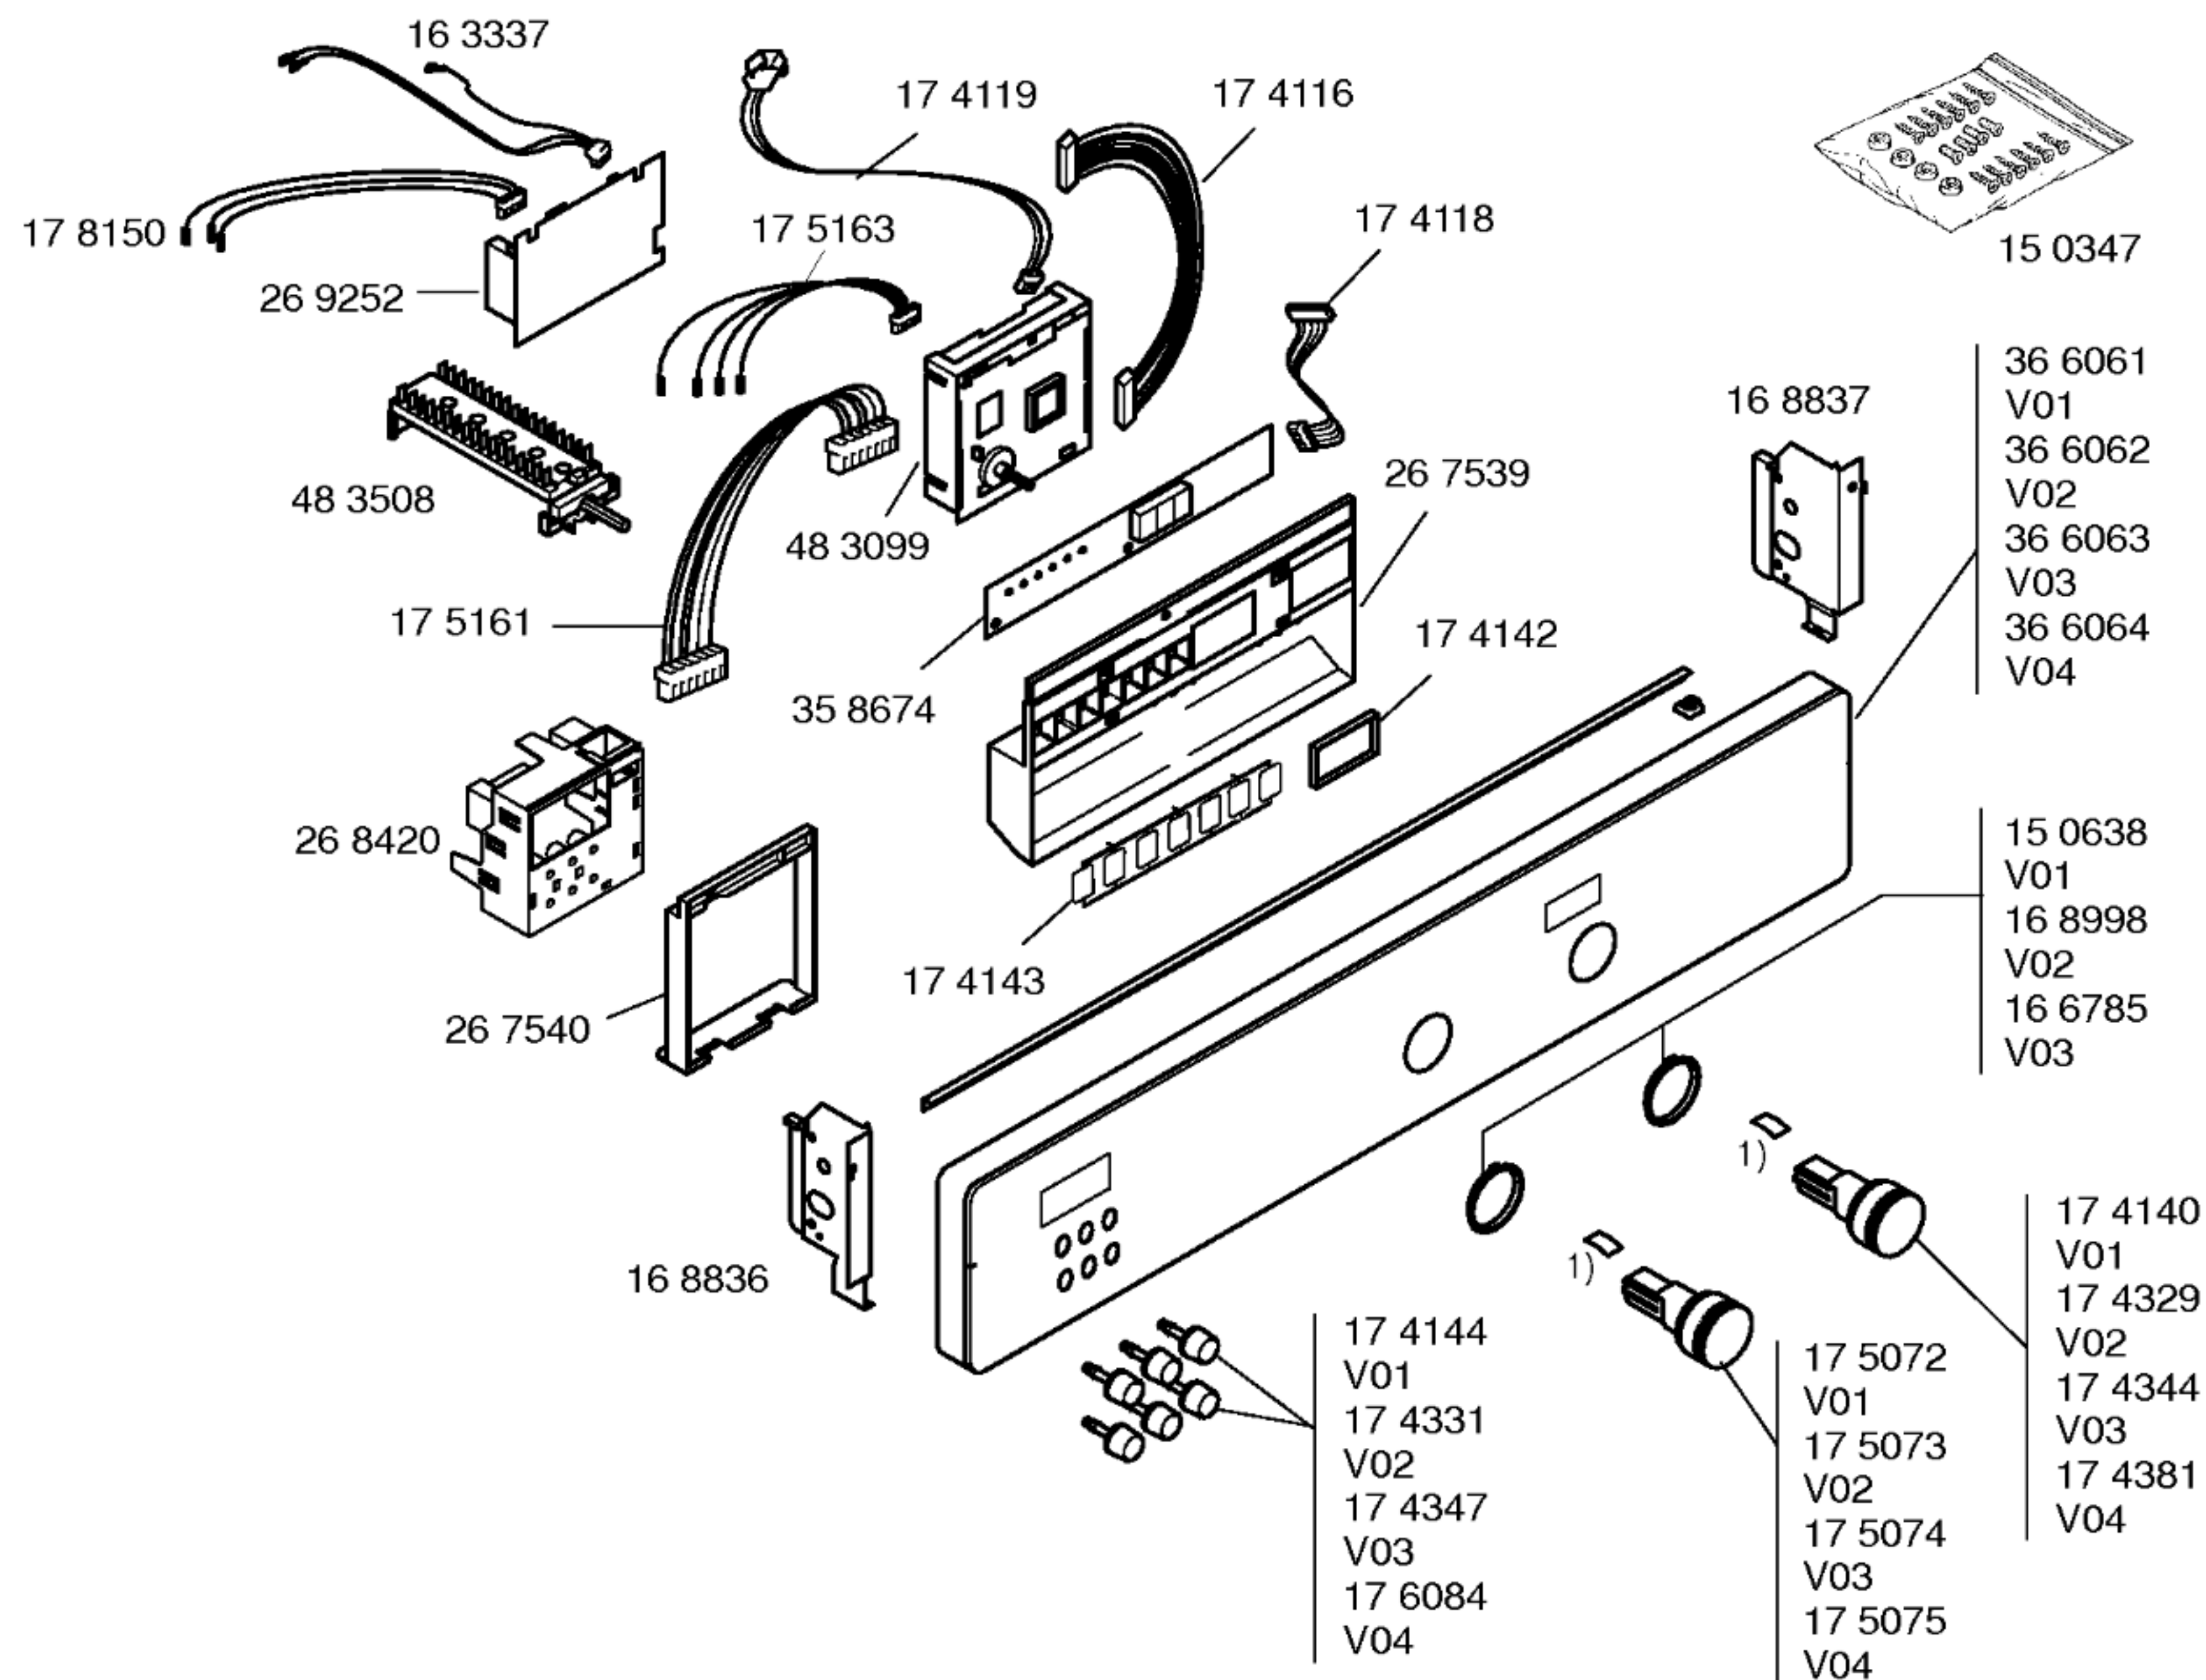 


Gebrauchsanweisung
58 1363 (de)
58 6394 (nl)

Montageanweisung
52 4904
(de,en,fr,it,nl,da,sv,no
fi,es,pt,el,cs,pl,tr,ru)

Zubehoer:
HZ21004
Backblech Alu
HZ21101
Backblech emailliert
HZ21301
Universalpfanne
HZ21401
Kombirost
HZ22400
Einlegerost
HZ22500
Grillblech
HZ9150
Glasbraeter
HZ26000
Metallbraeter
HZ26001
Backform
Auslausicher

1) 01 4254

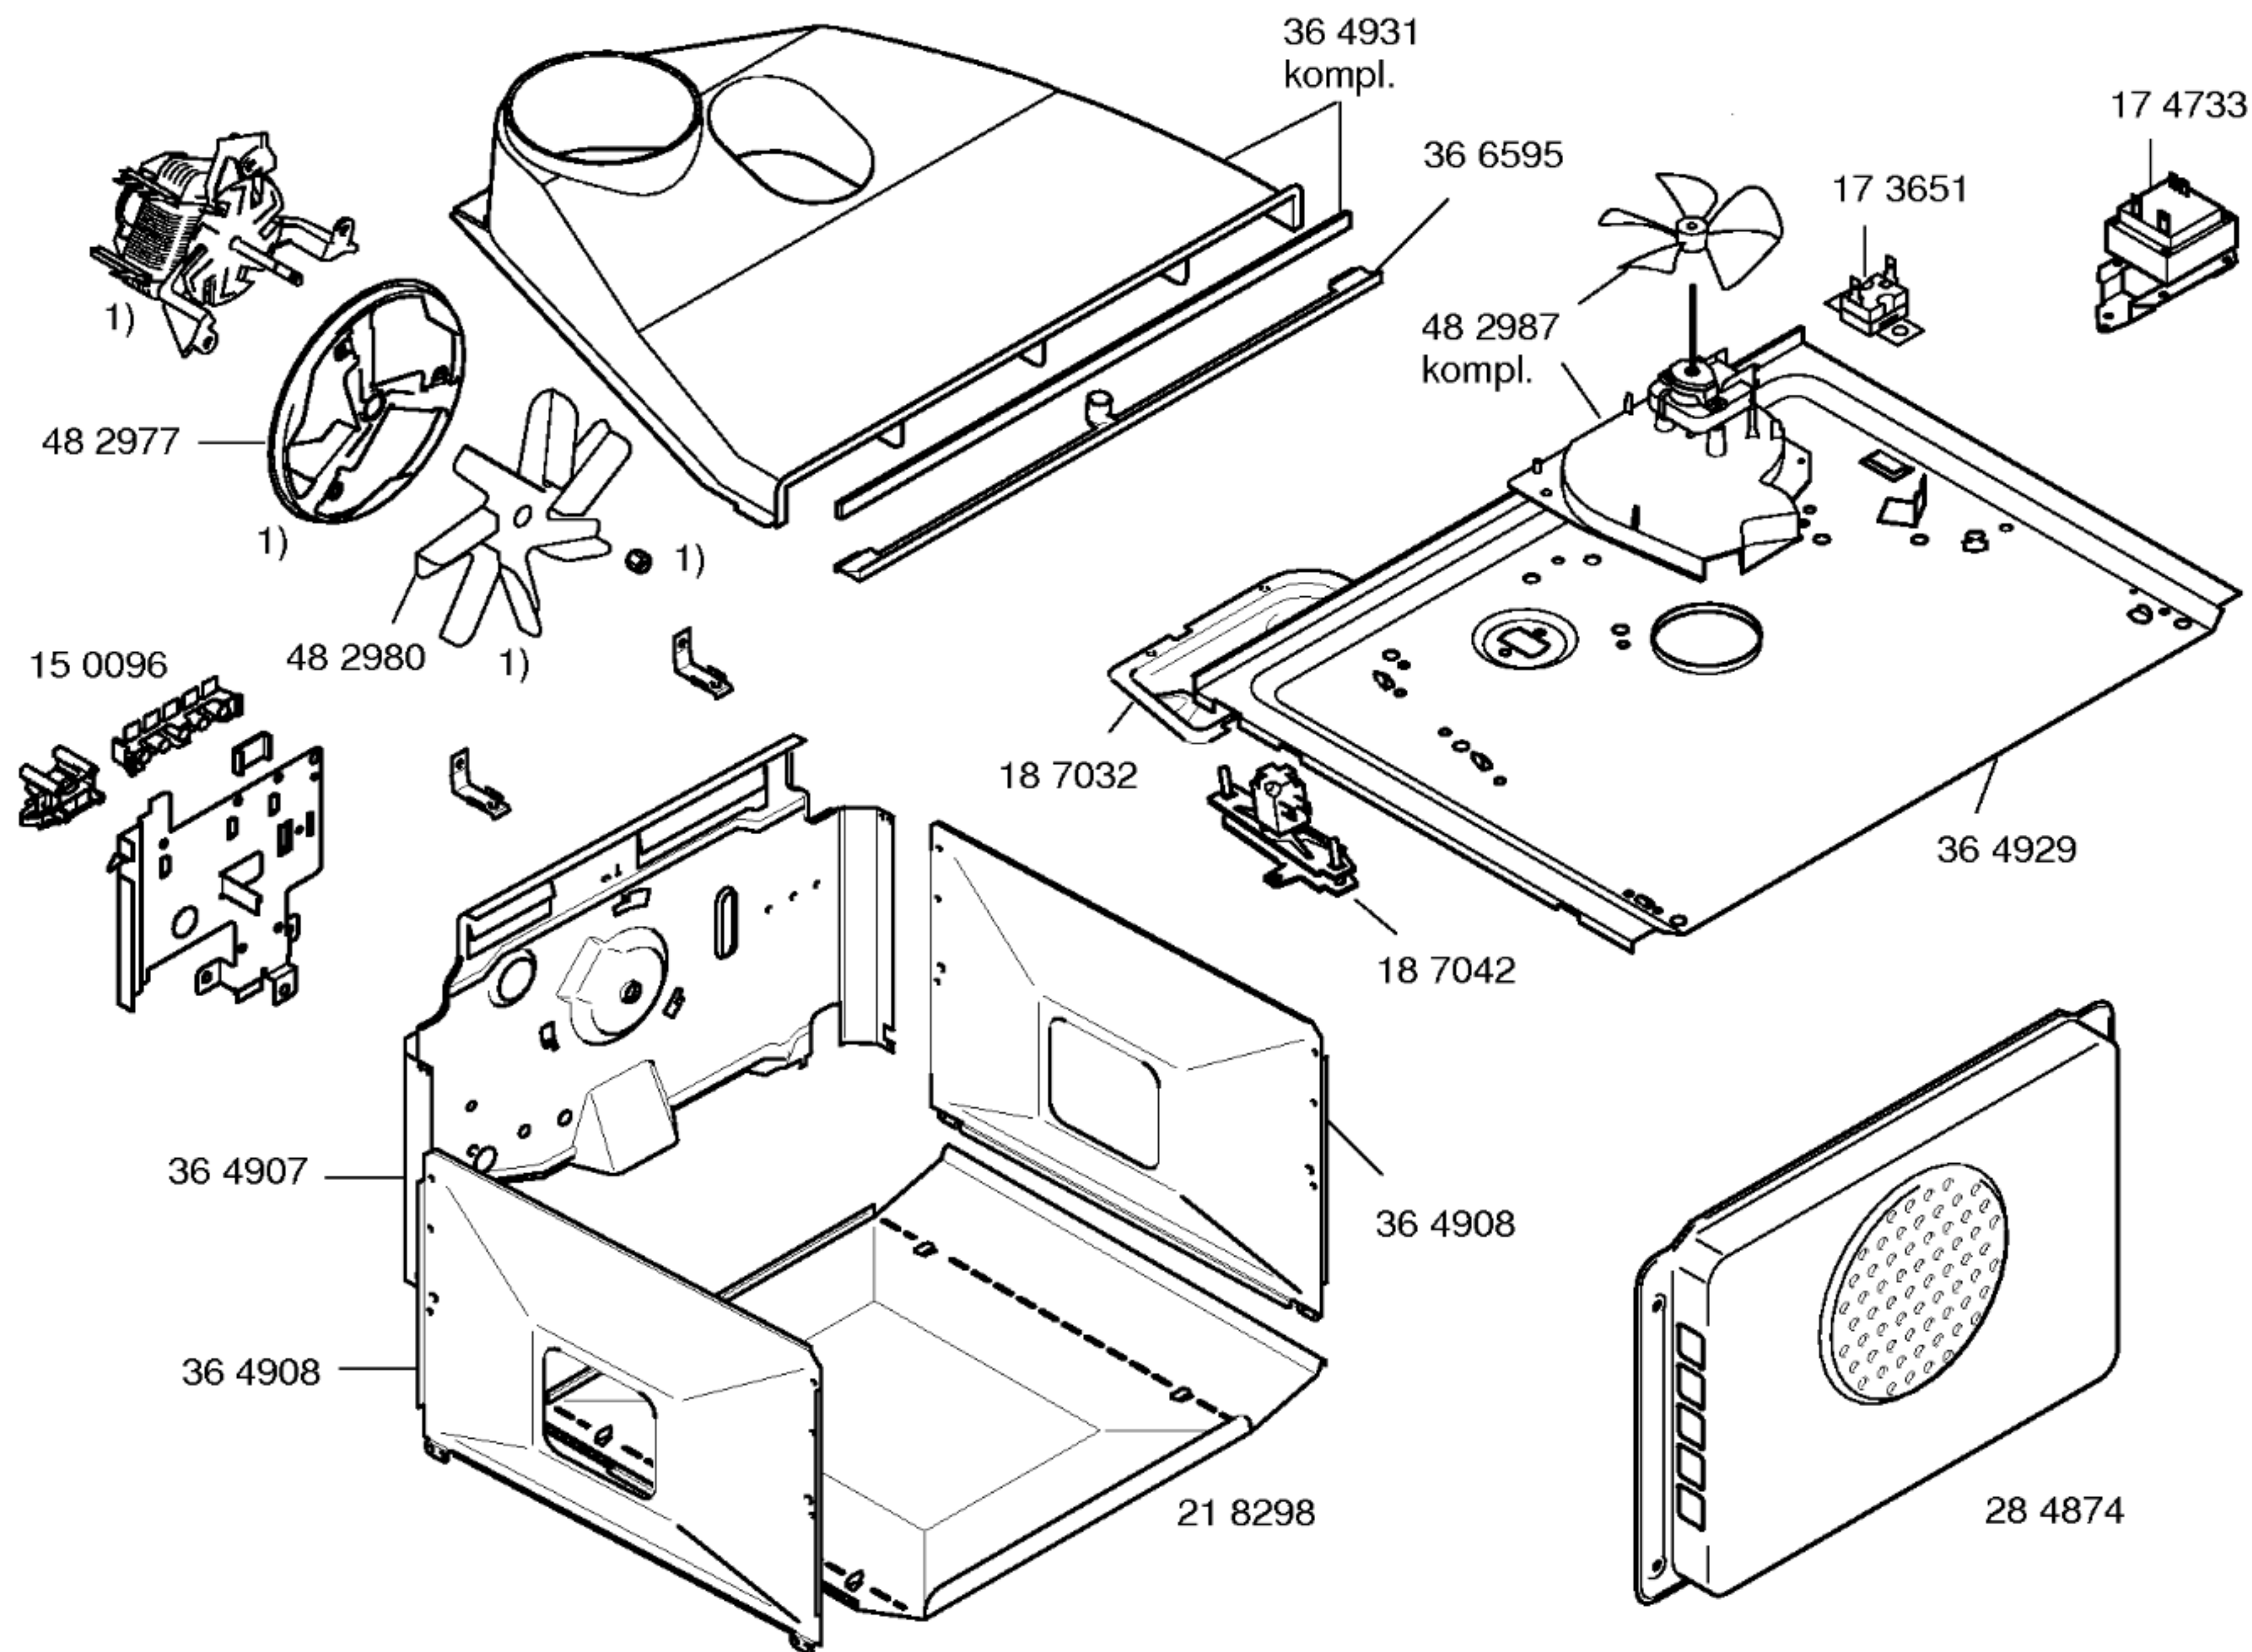

1) 48 2981
Set

