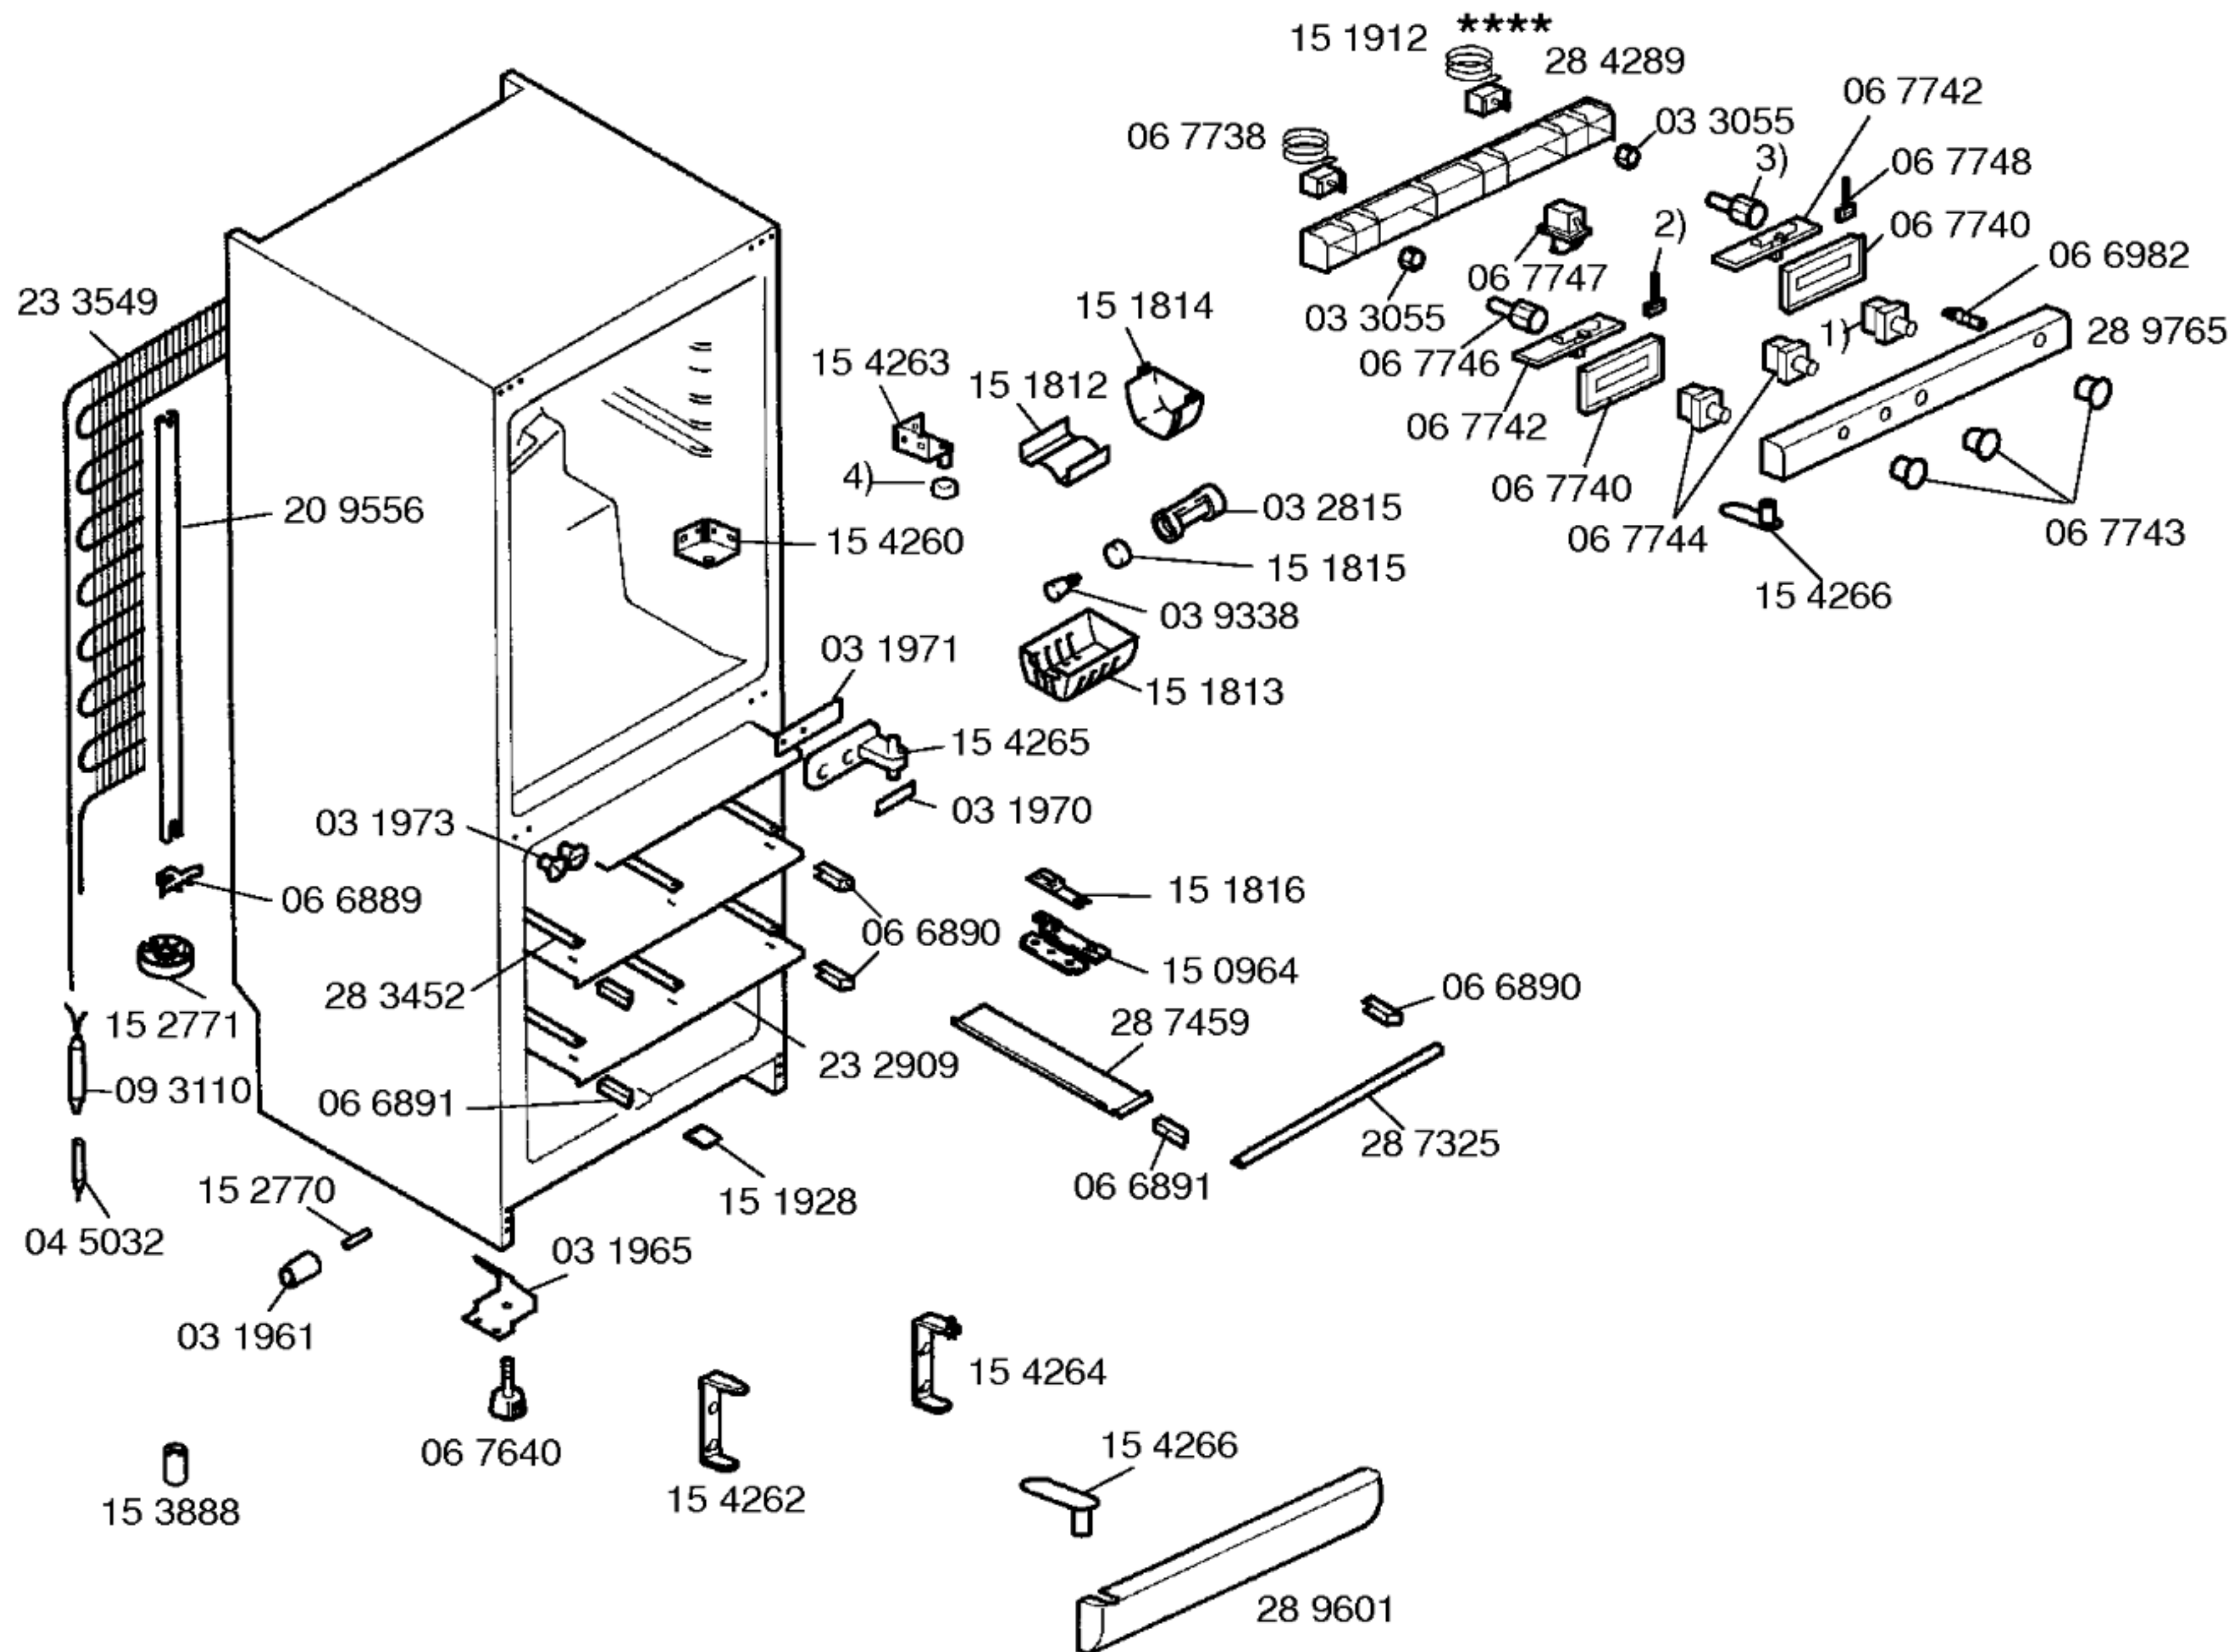


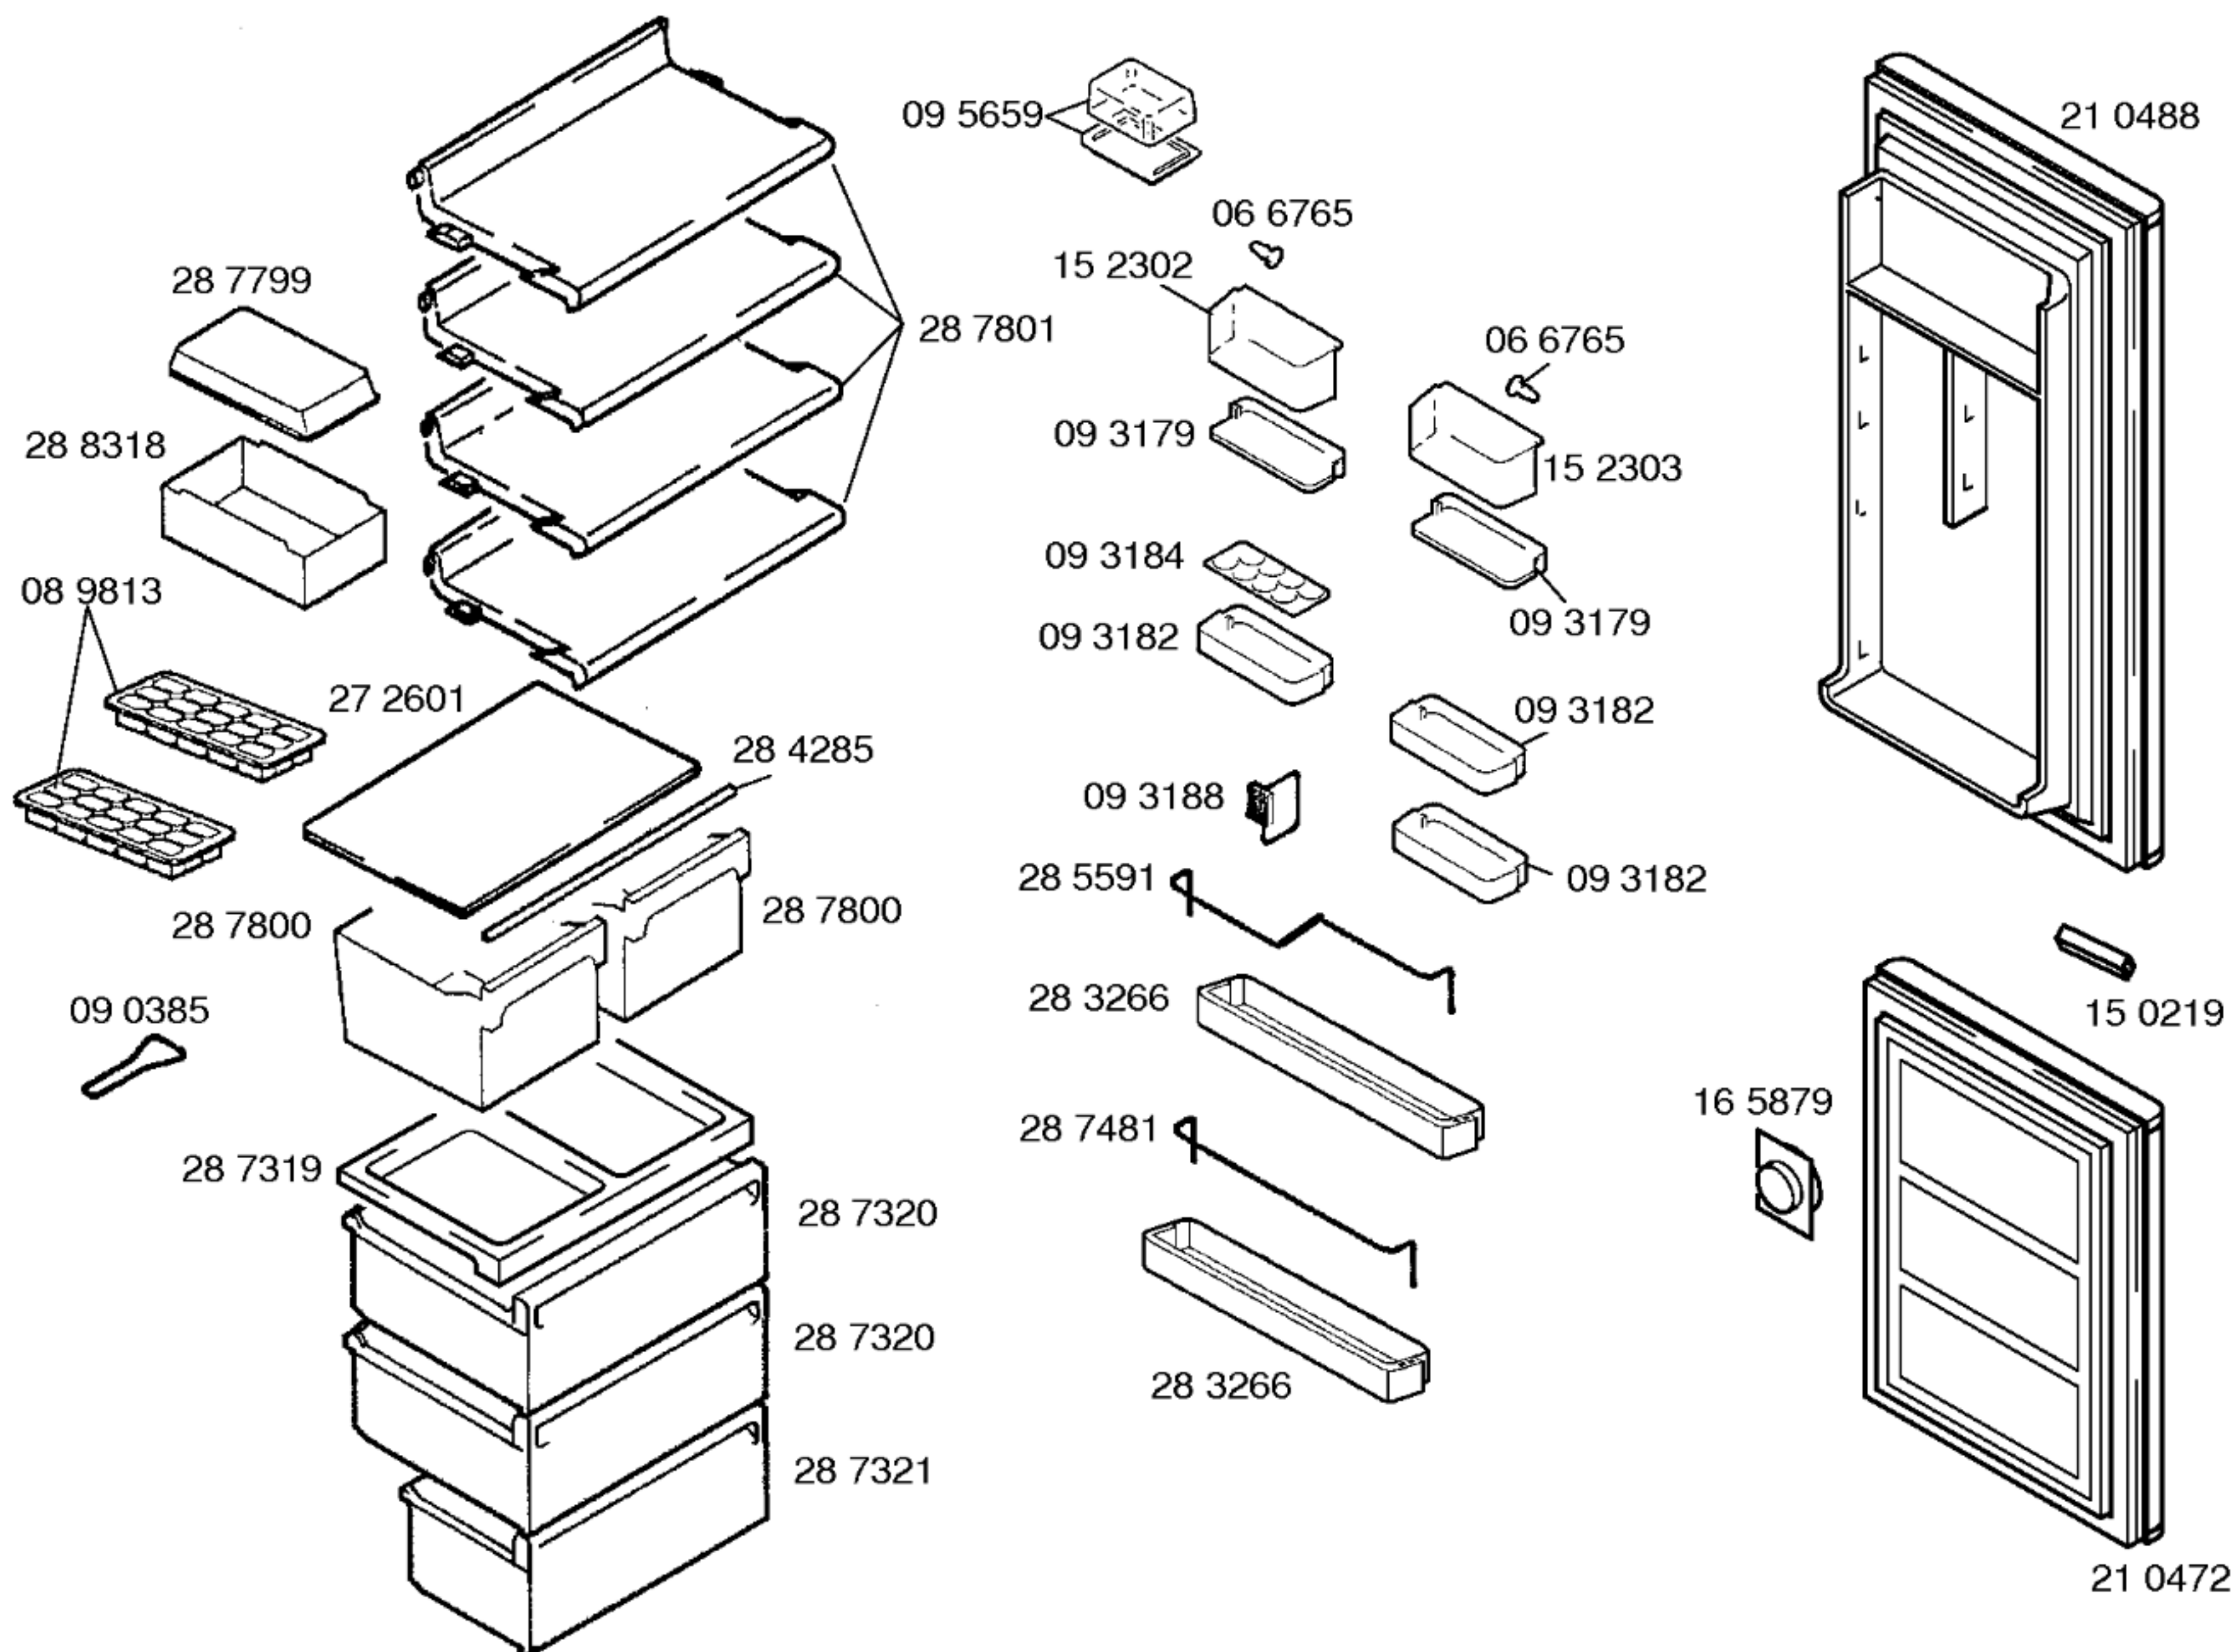


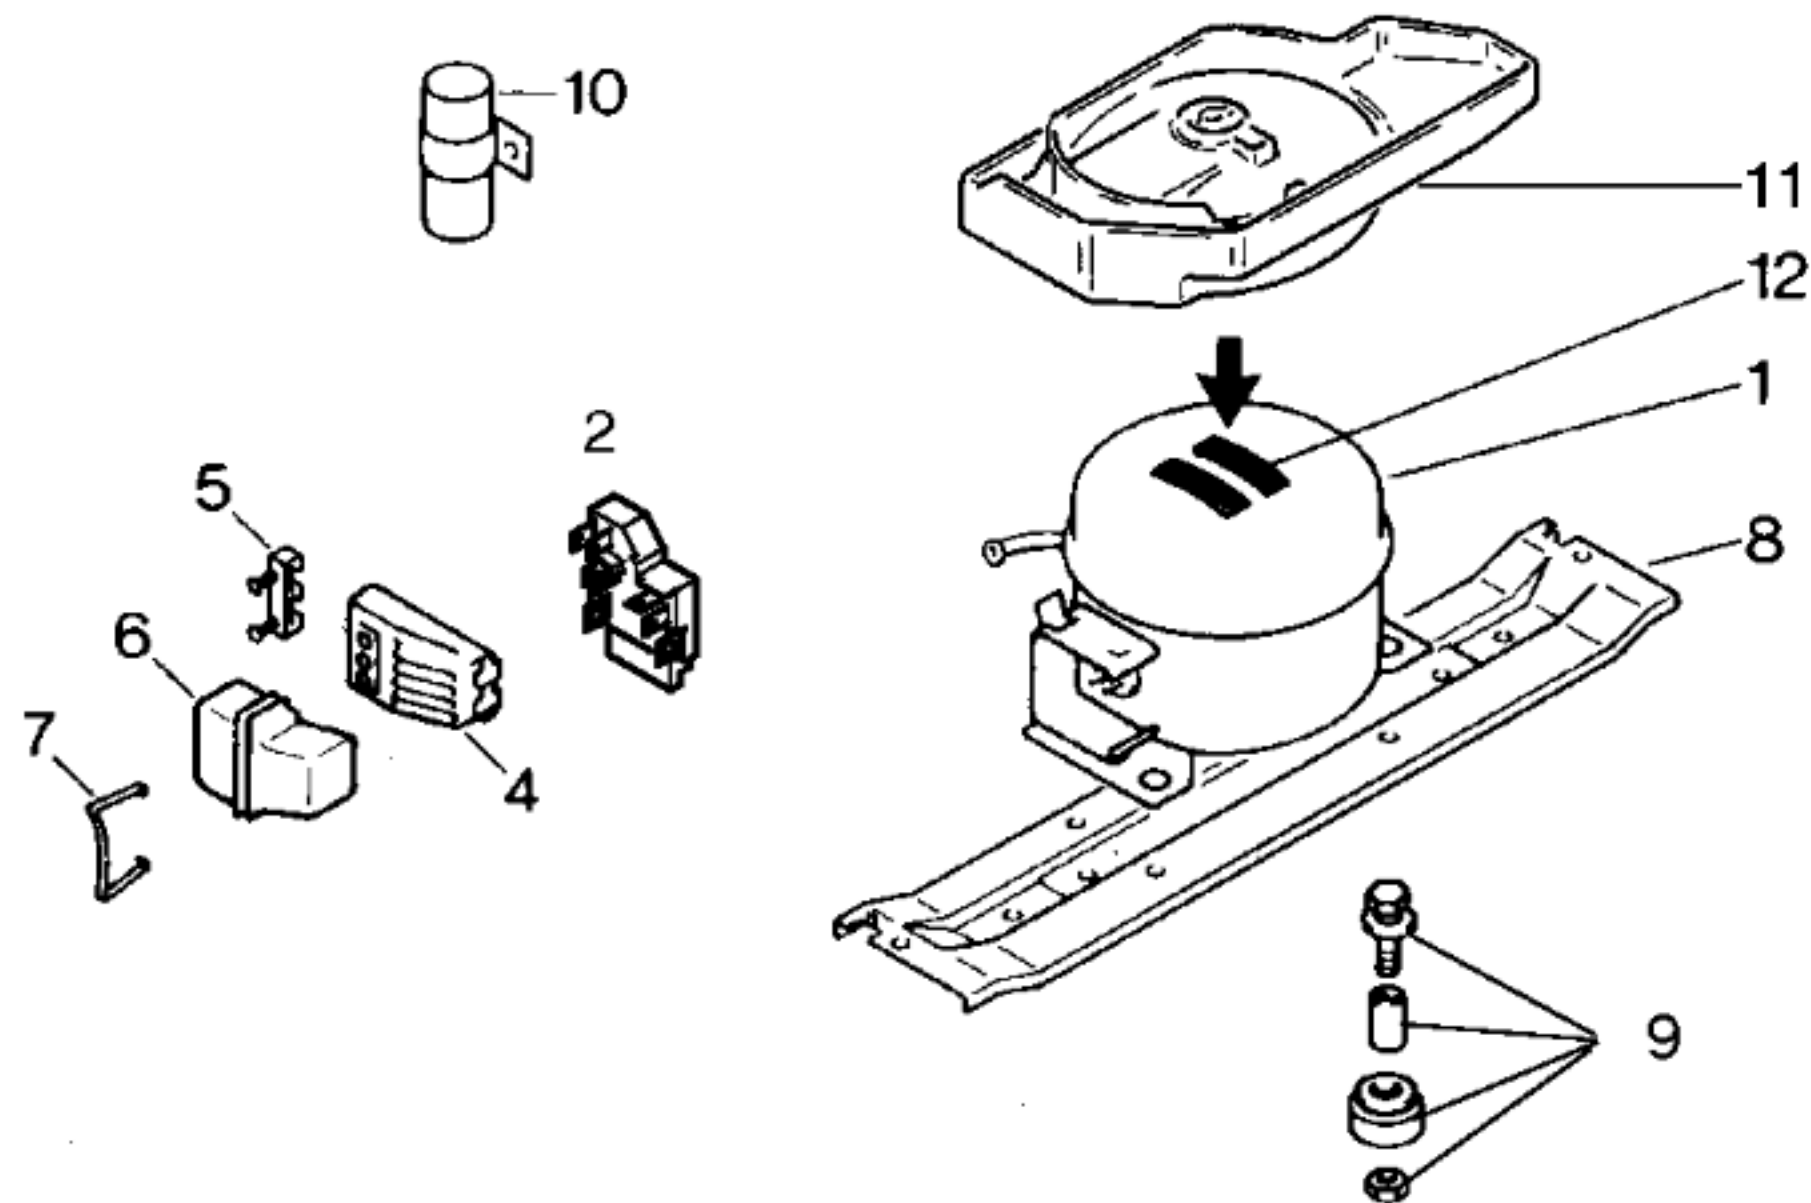
Ident - Nummern - Konstante
3740

Gebrauchsanweisung
51 7373
(D, GB, F, I, NL, P)

Montageanweisung
51 7949
(D, GB, F, I, NL)

- 1) 06 7745
- 2) 06 7748
- 3) 06 7746
- 4) 15 2757

Ident – Nummern – Konstante
3740

Ident – Nummern – Konstante
3740

Pos.	****	
	U. HERMÉT.	DANFOSS
	GL45AA	TL5F
1	14 1374	14 1498
2	15 5130	
3		
4		
5		
6		
7		
8	28 8253	
9	05 0166	05 0166
10		
11	09 6864	
12		
13		

TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECHNIQUES/DATOS TECNICOS

Verdichter/Compressor/Compresseur/Compresor	U. HERM.	DANFOSS	
Typ/Type/Tipo	GL45AA	TL5F	
Förderleistung/Delivery/Debit/Aspiración l/h			
Anlaufstrom/Starting current/Cour.démarrage/Int.arranque A	8,3	4	
Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm	21,2	18,9	
Hi/aux.	24,3	15,3	
Temp.Reyler/Thermostat/Termostato	DANFOSS	RANCO	
Typ/Type/Tipo	077B62	K54 L1924	
Reglerstellung/Position/Conexión	MIN.–MAX	MIN.–MAX	
Schaltwerte/Switching values/	..ein/conex.°C	+6°	
Valeurs de commutation/Desconex.	..aus"/descon.	-14° -24°	
(..abtaven' od)	..alarm'	-21° -31°	
		-15	
Füllmenge/Fill. quantity/Charge/Carga	134a g	60	125
Anschlußwert/Comm. load/puiss. Connect./Potenc.	W	87	120
Heizung/Heater/Chaufrage/Resistenc.descong.			
Widerstand/Resistance/Resistencia	Ohm		
Leistung/Power/Puissance/Potencia	W		
Ventilador/Blower/Ventilateur/Ventilador			
Widerstand/Resistance/Resistencia	Ohm		
Magnetventil/Magnetic valve/Electrovanne/Electrovalvula			
Widerstand/Resistance/Resistencia	Ohm		
Spannung/Volare/Tension/Tensión	V		
Temp.Reyler/Thermostat/Termostato ambiente para ventilador refrigerador			