



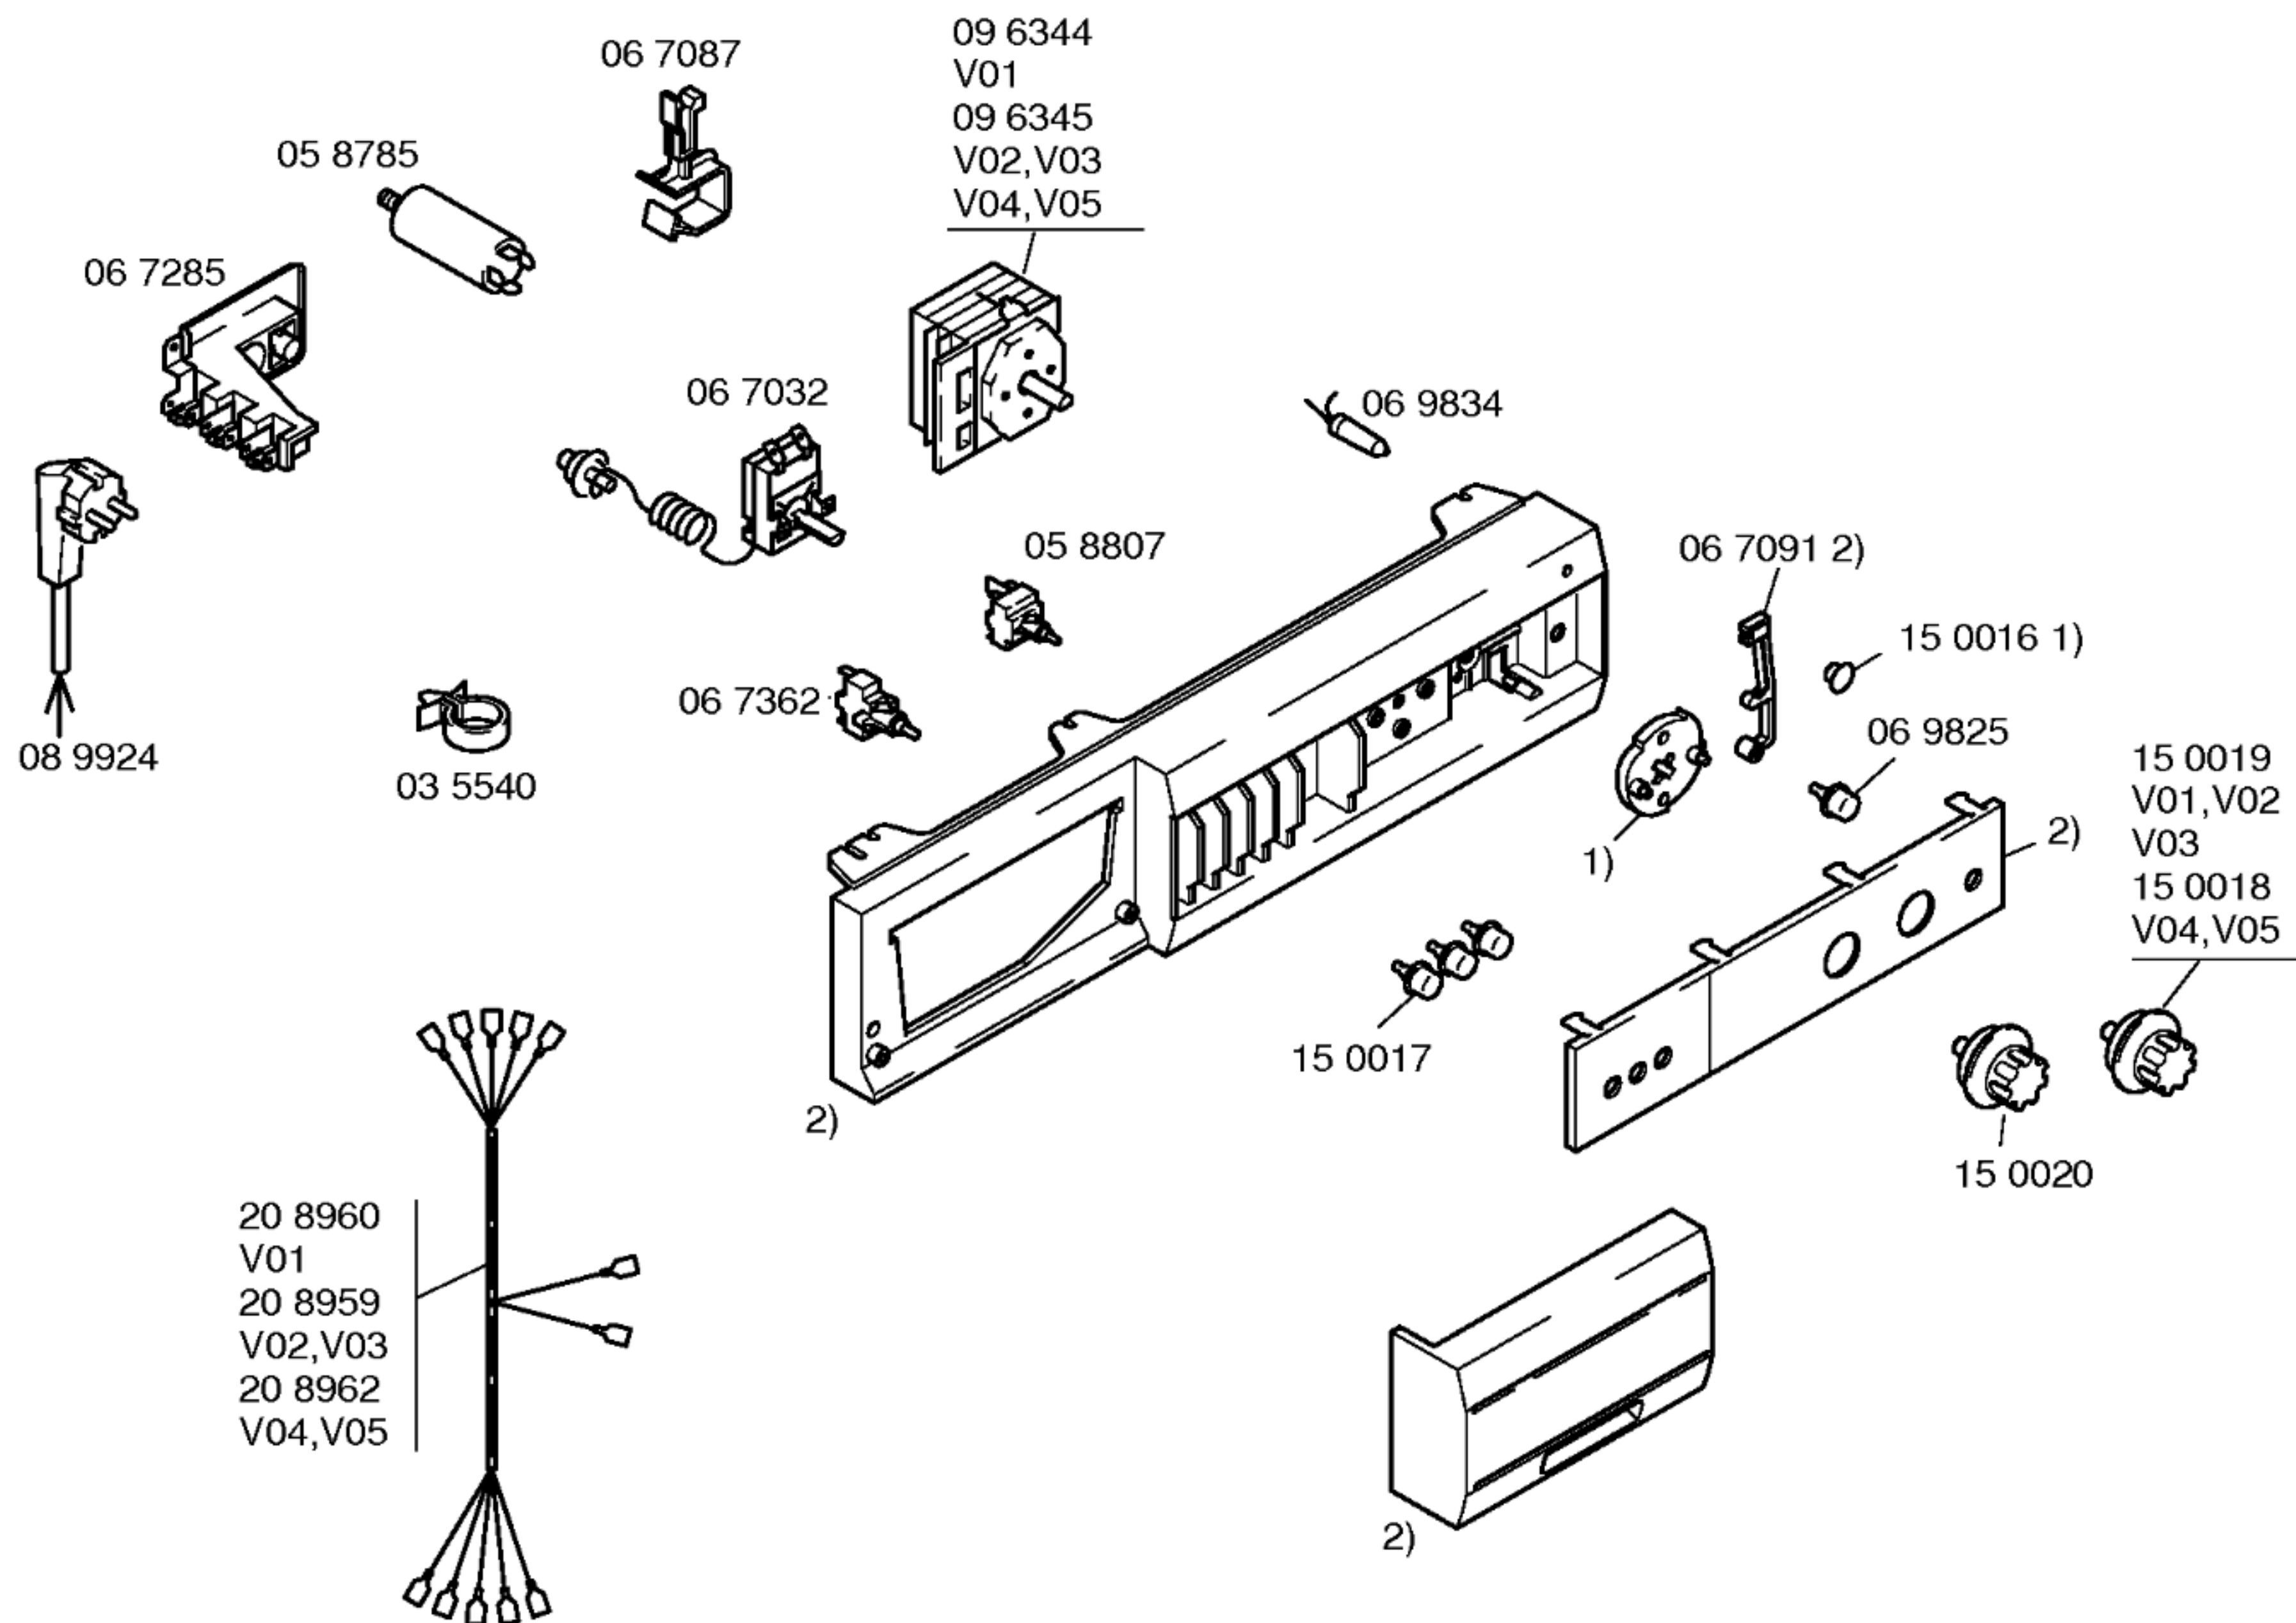

Libro de instrucciones
51 6829
(E)


1) 06 9631


2) 20 9107
V01
20 9105
V02
20 9106
V03
20 9104
V04, V05

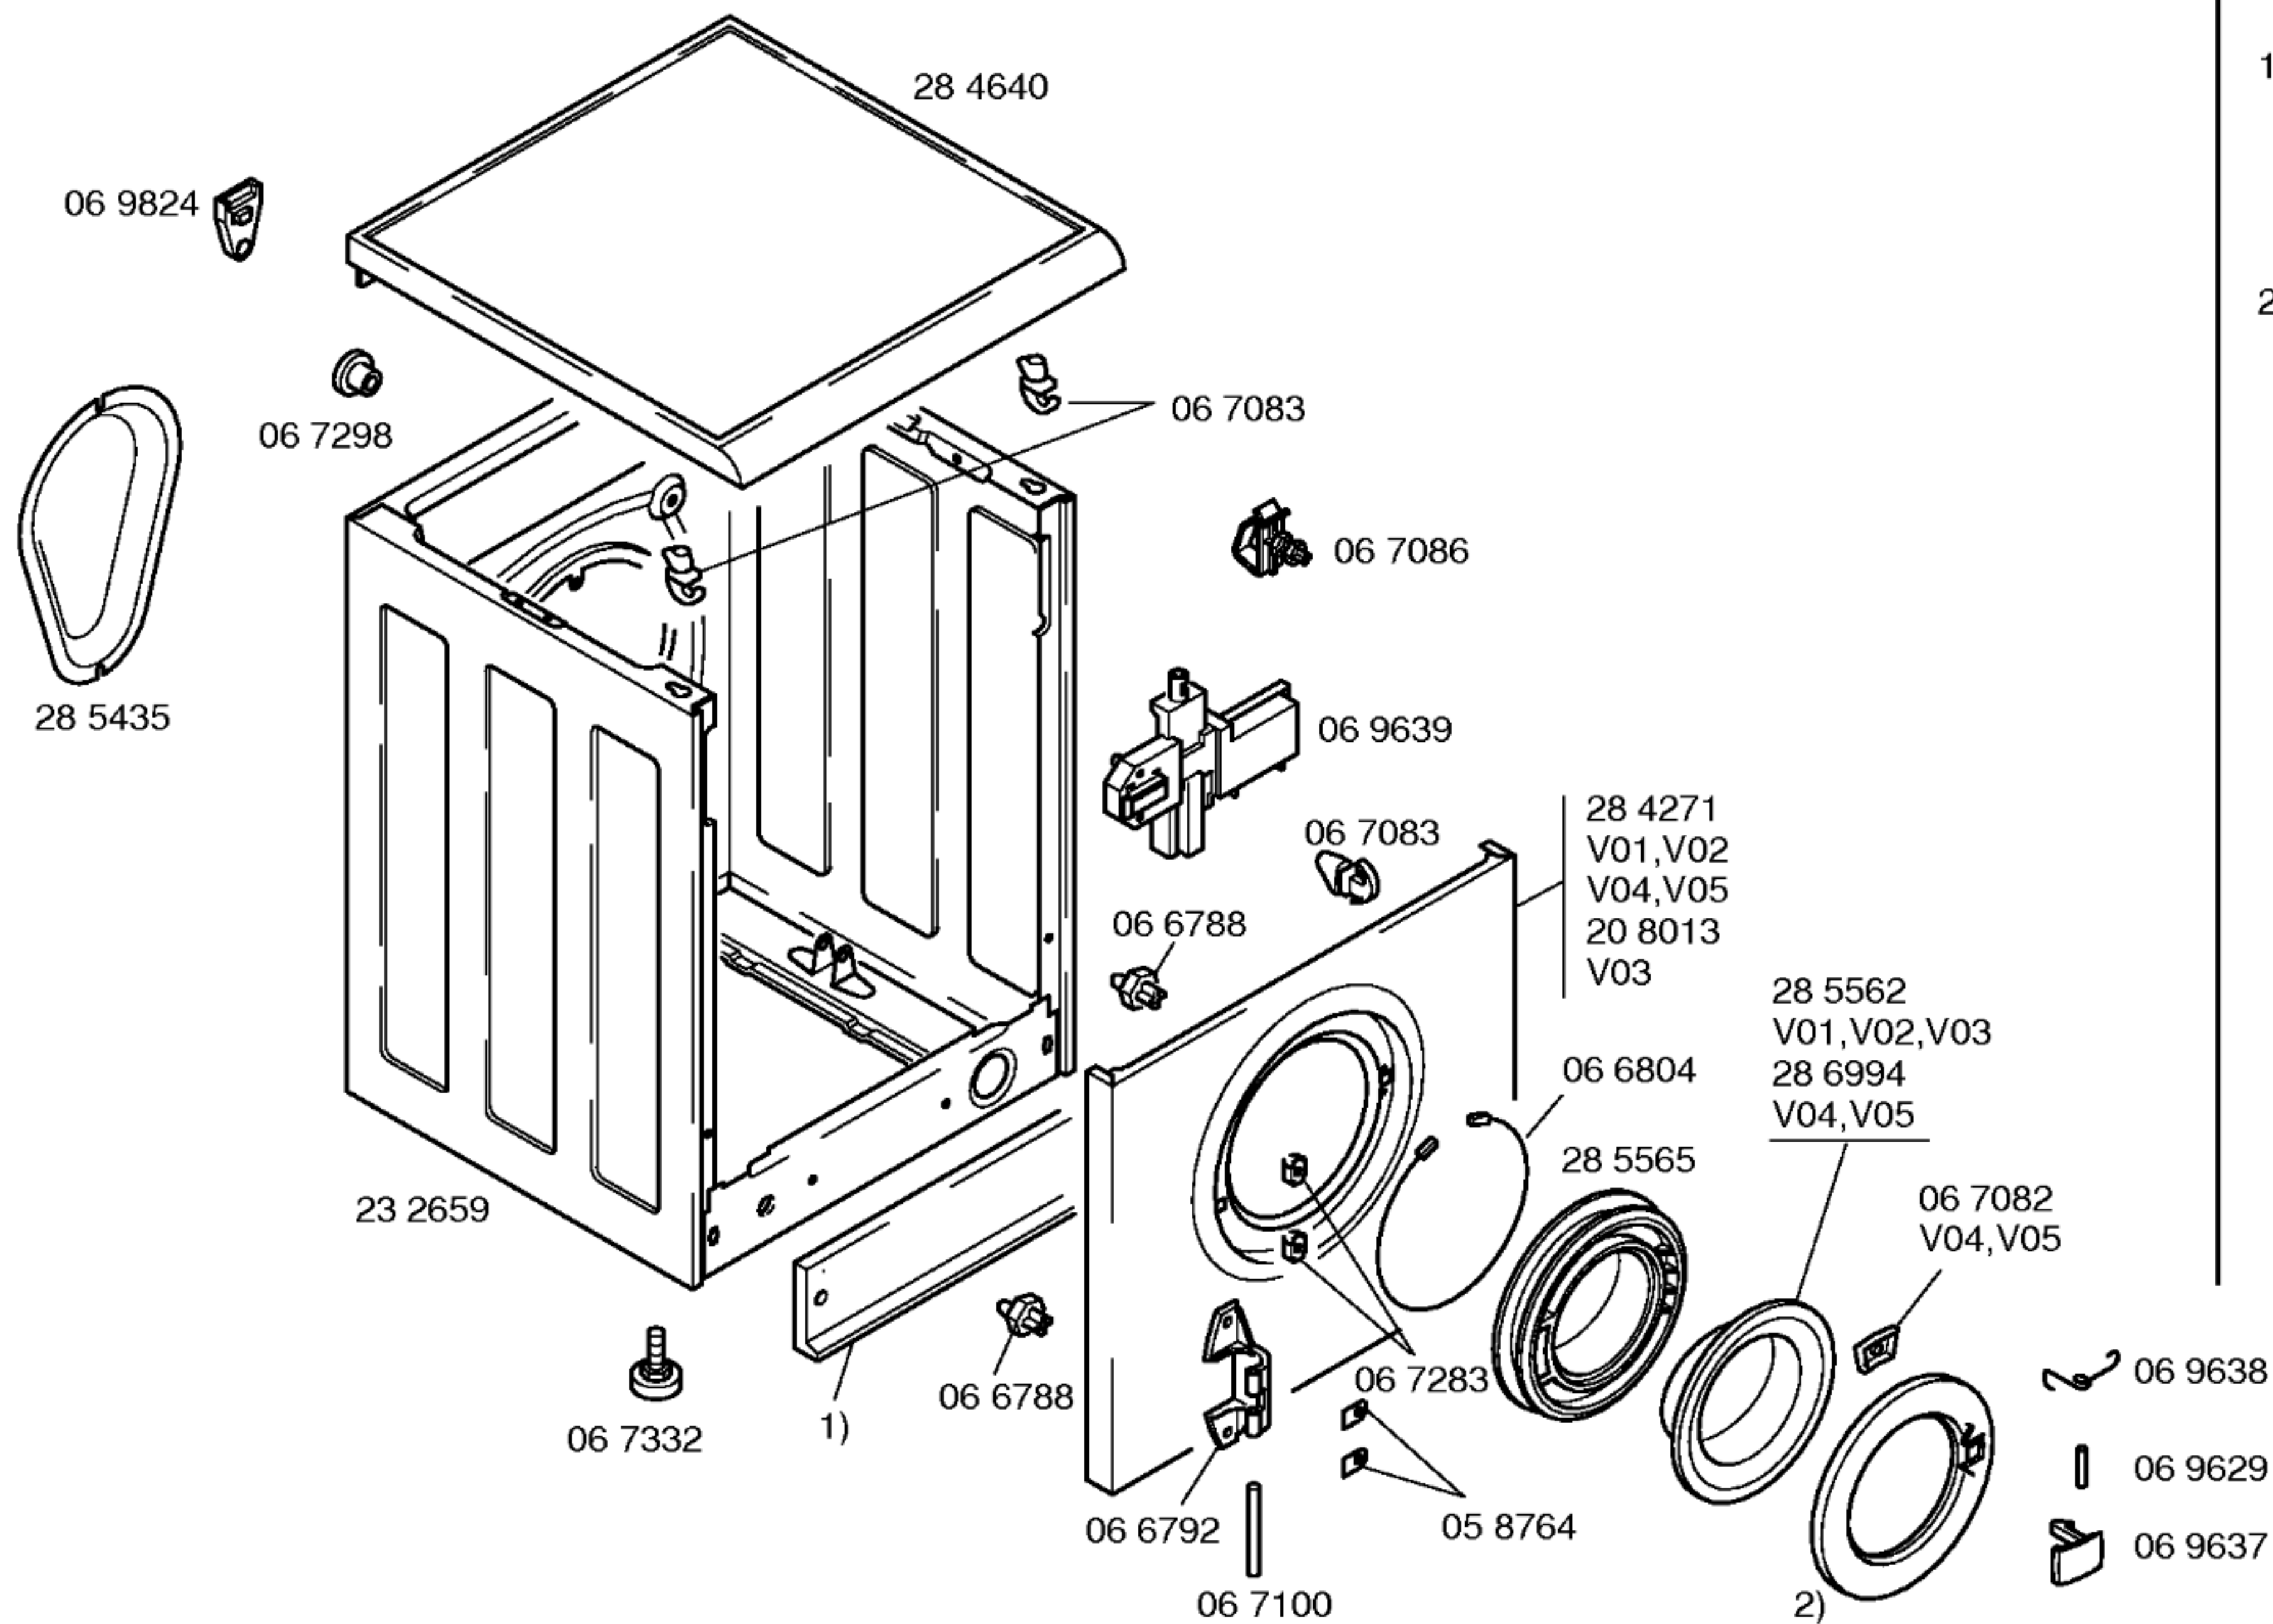

1) 28 3321
V01,V02
V04,V05
28 3322
V03


2) 28 9458
V01,V02
V04,V05
28 5564
V03

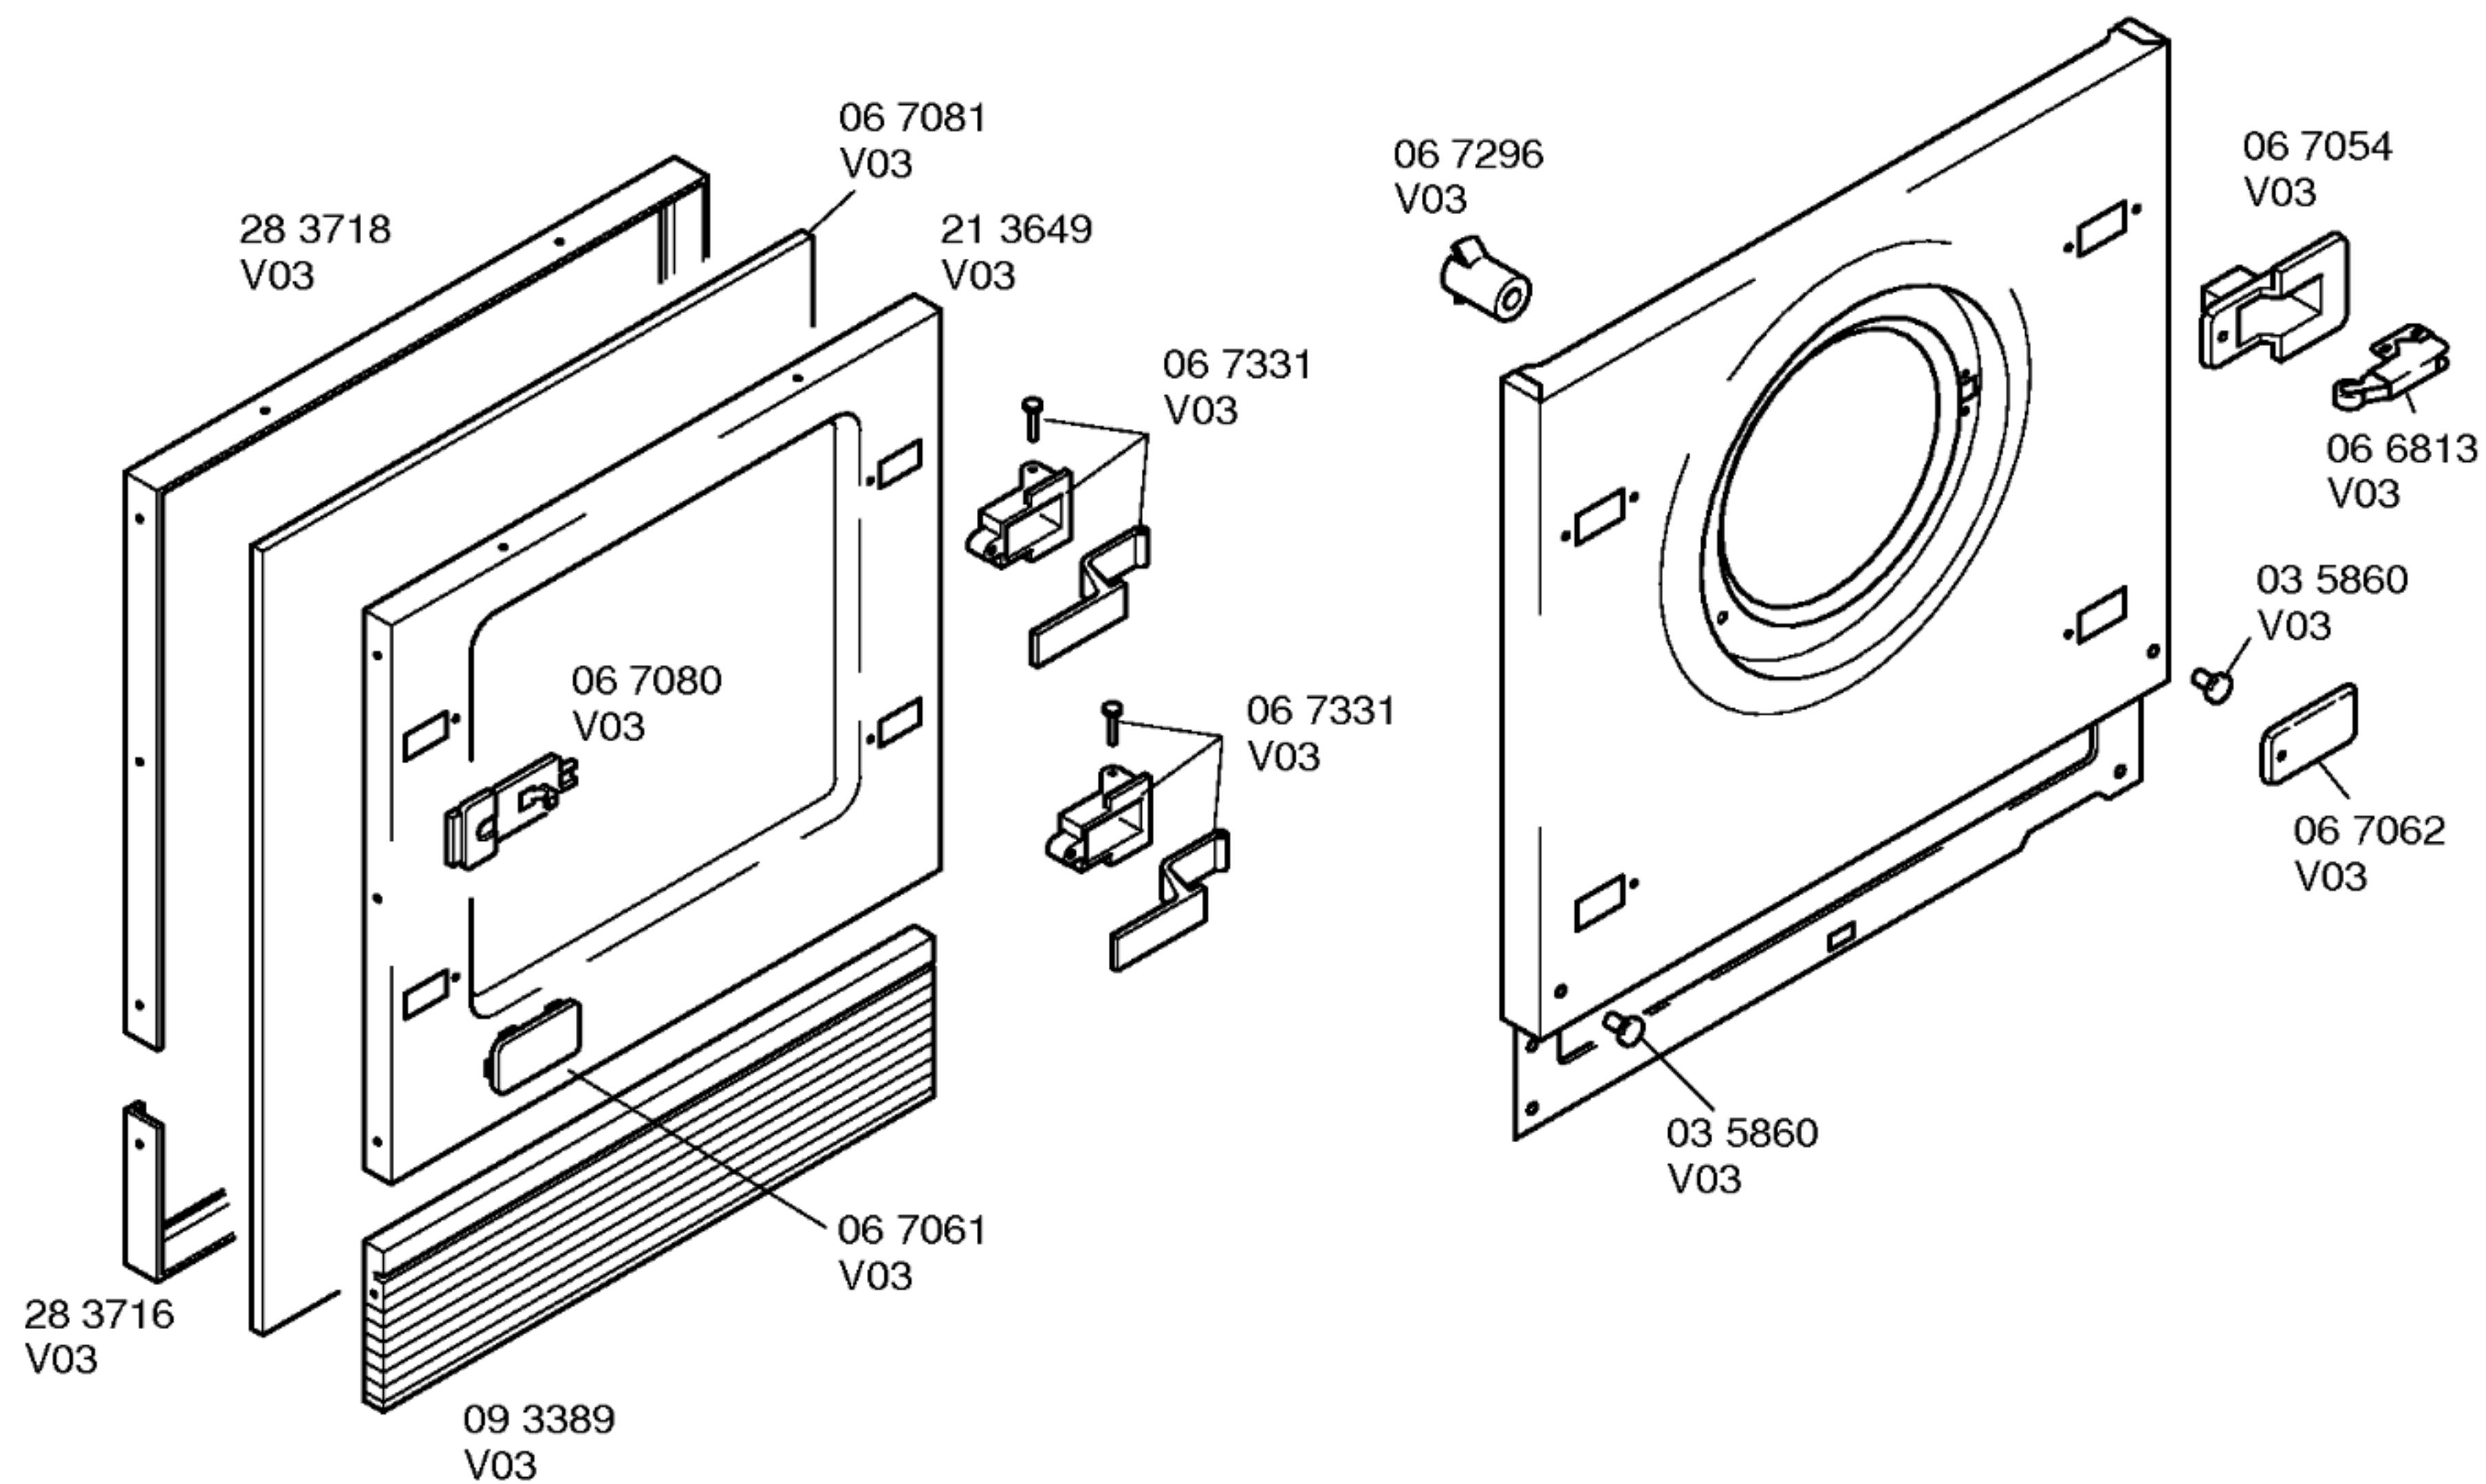

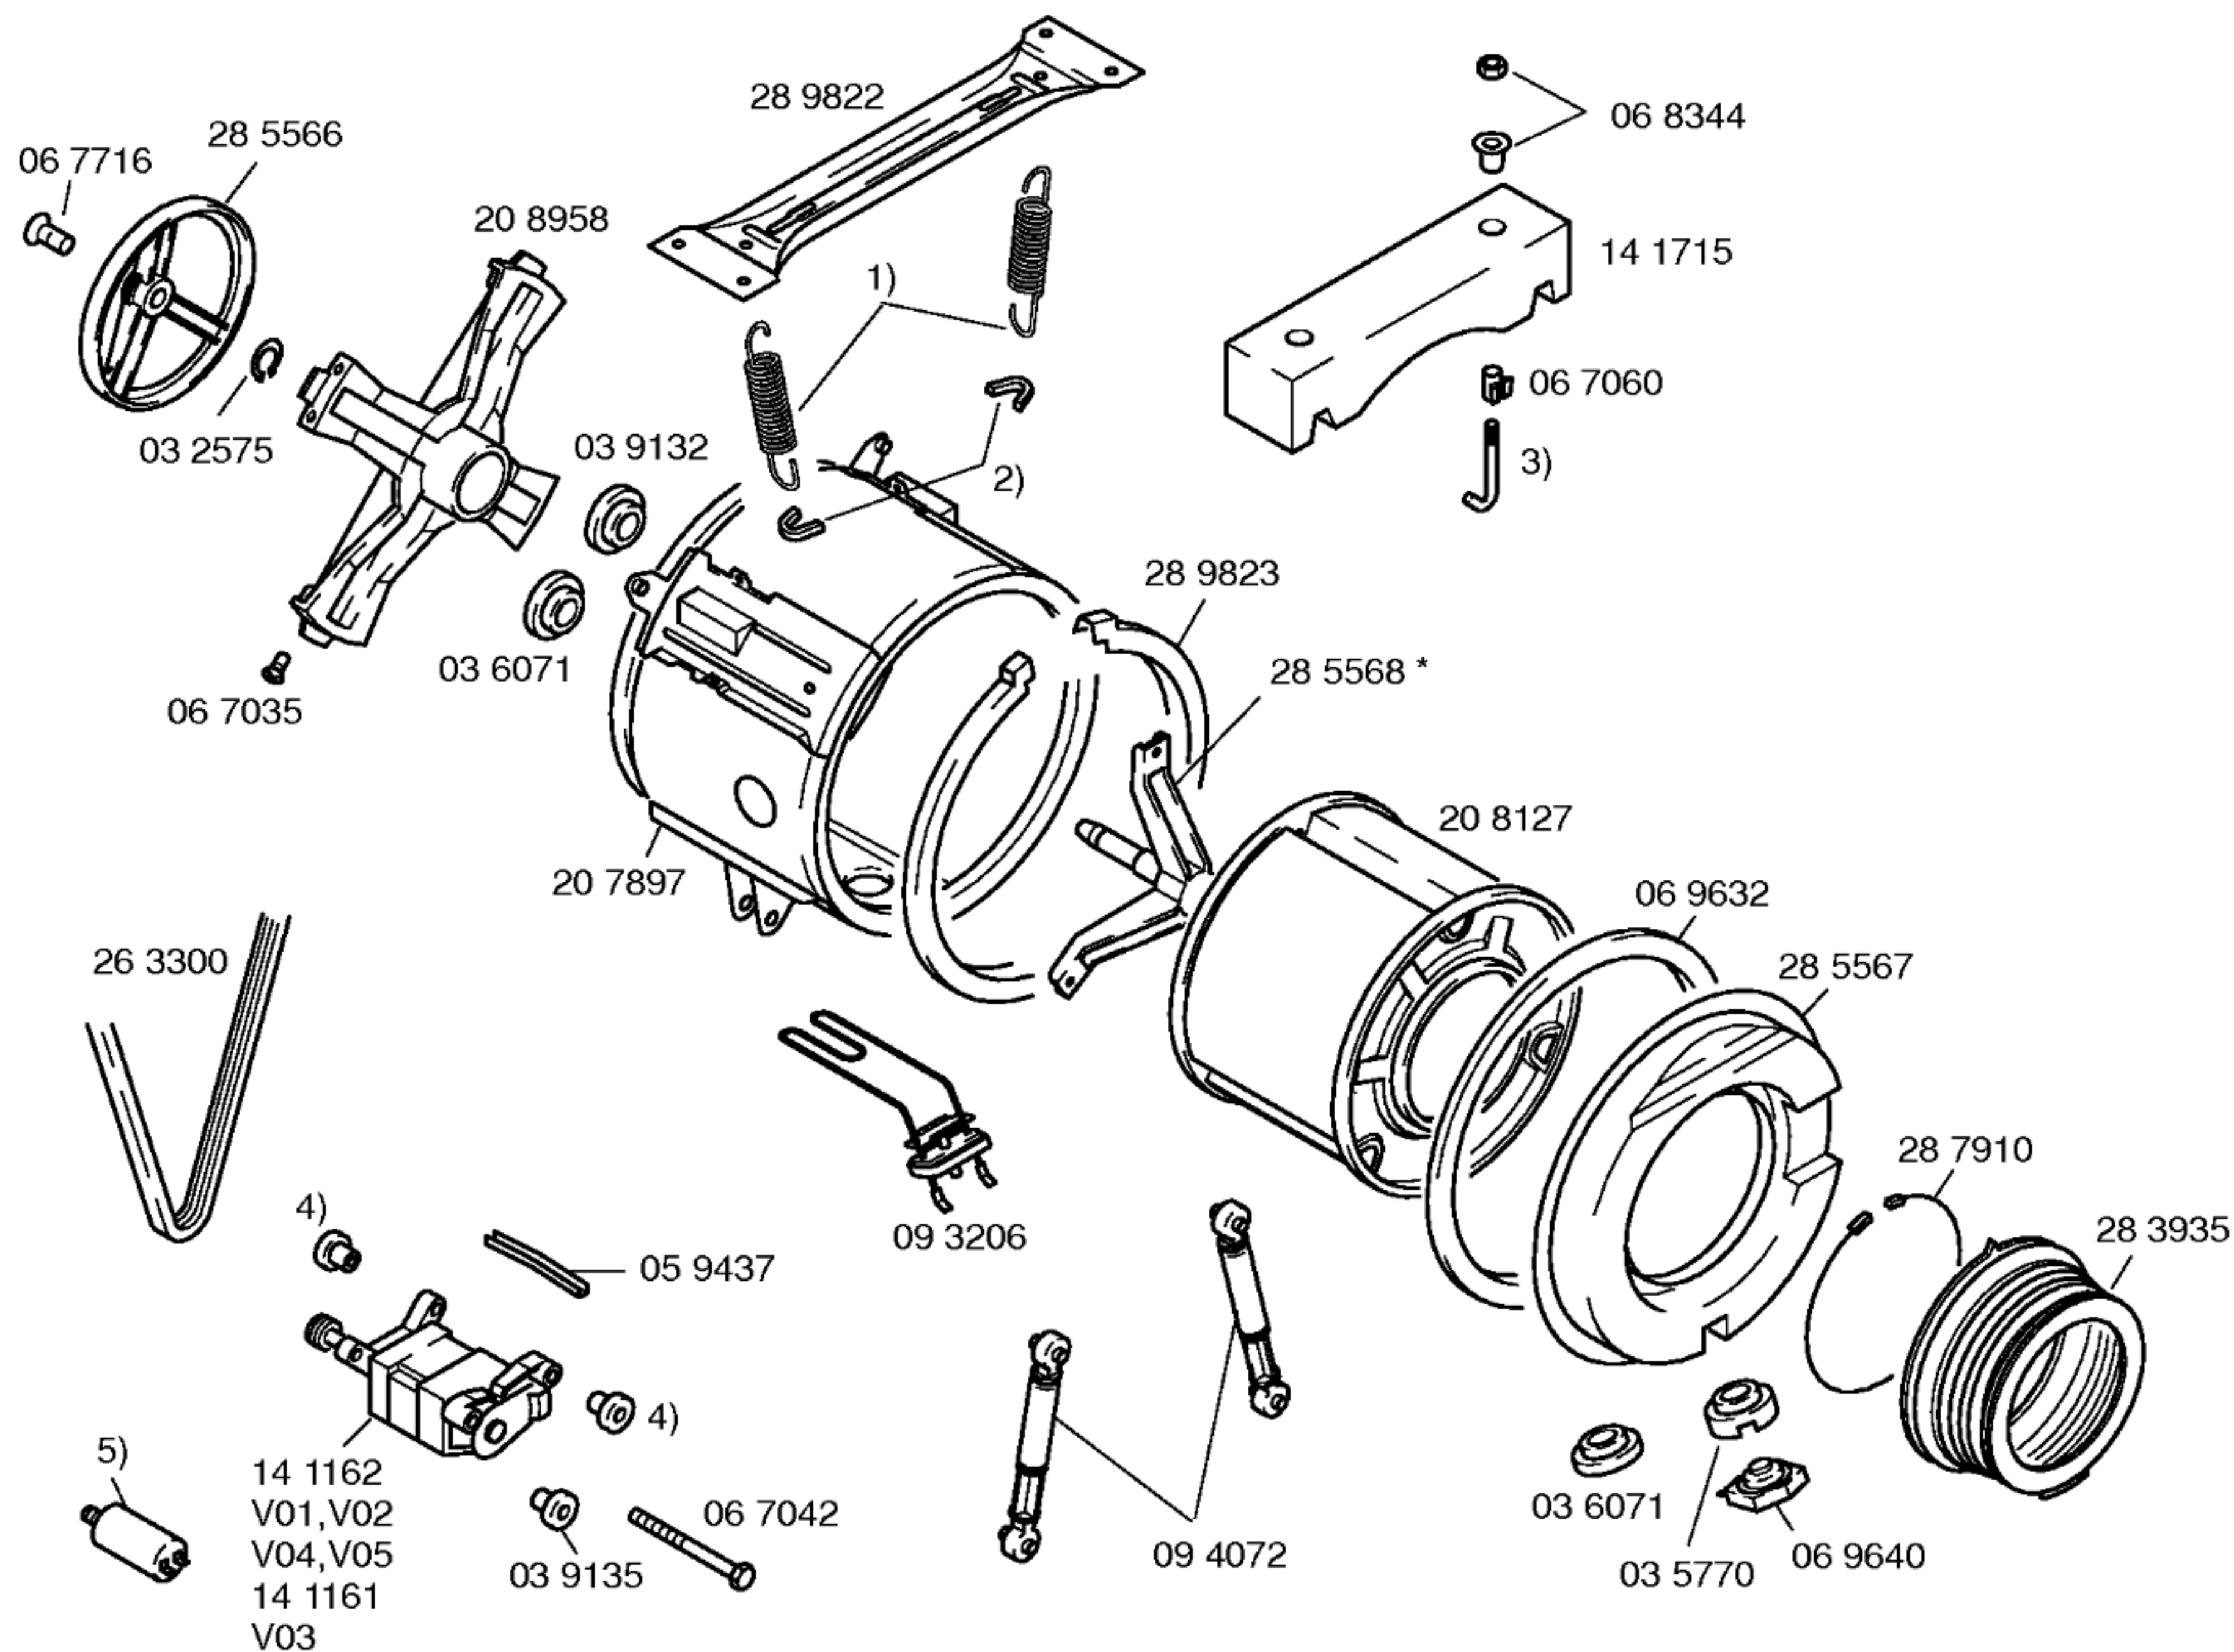

- 1) 06 9605
- 2) 06 7297
- 3) 06 8344
- 4) 03 2584
- 5) 05 9471
- V01,V02,V03
- 08 8672
- V04,V05

* Conj. tornill. tambor
05 9132

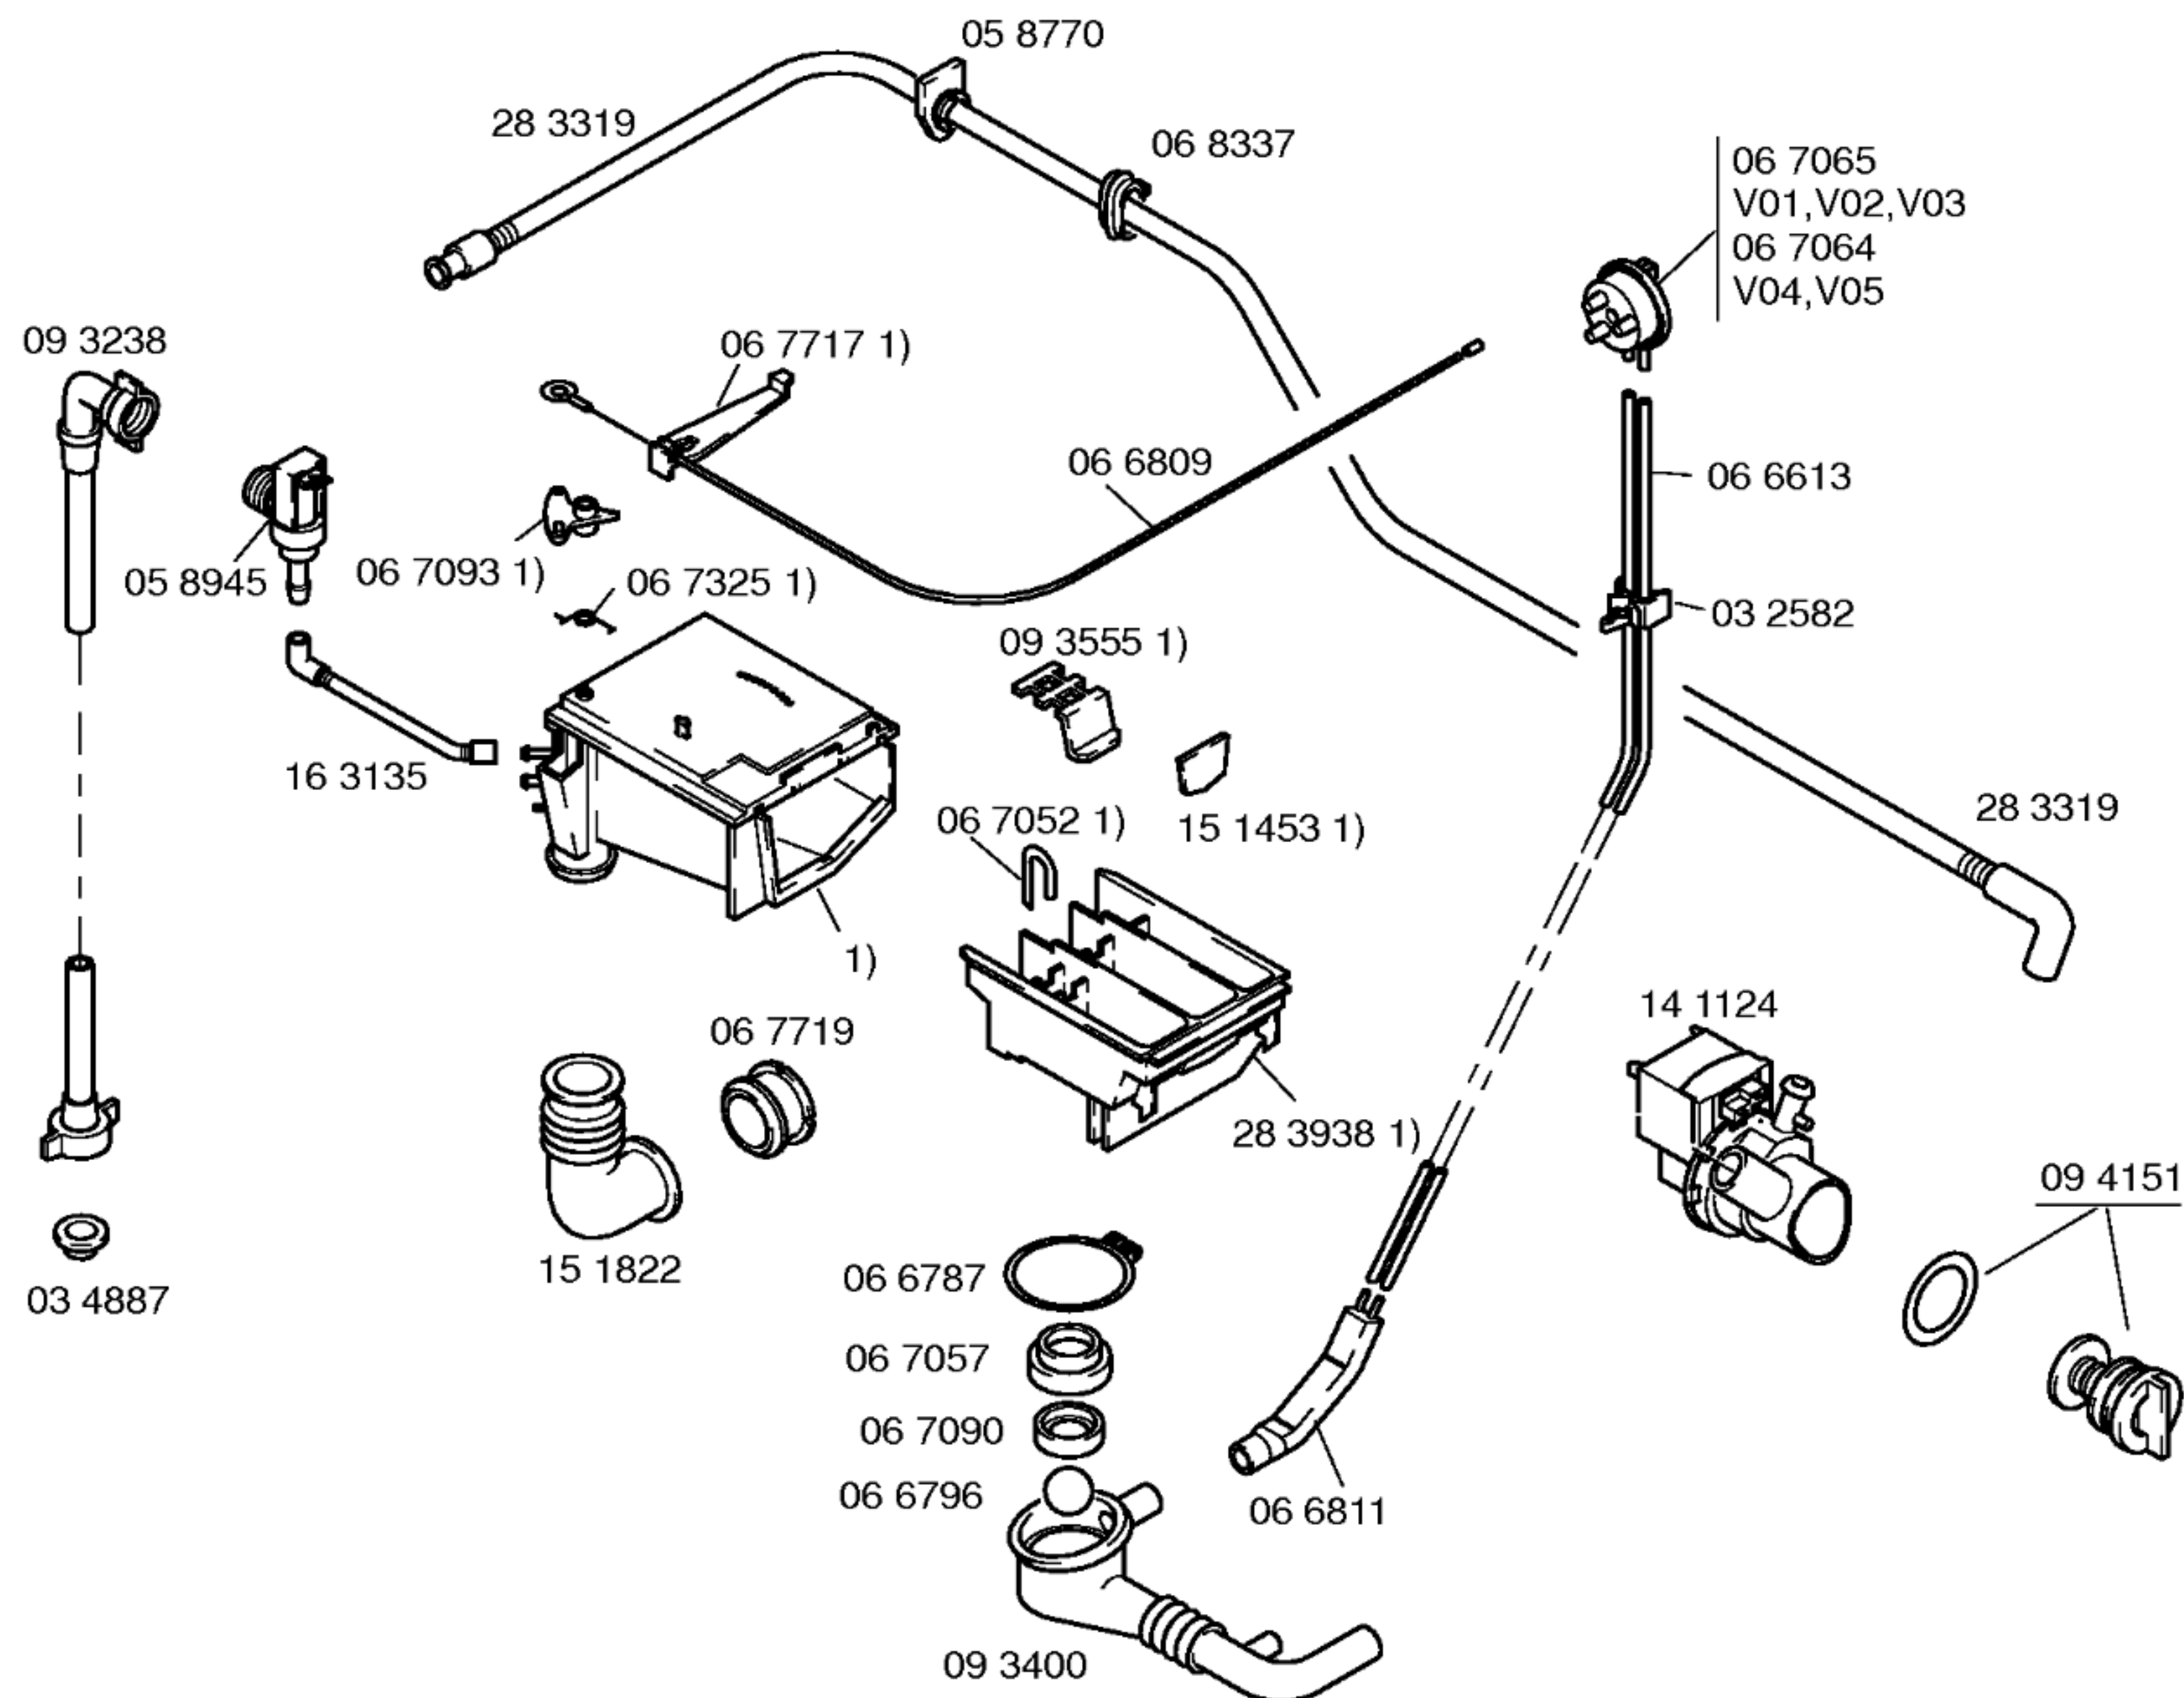

1) 28 7065