




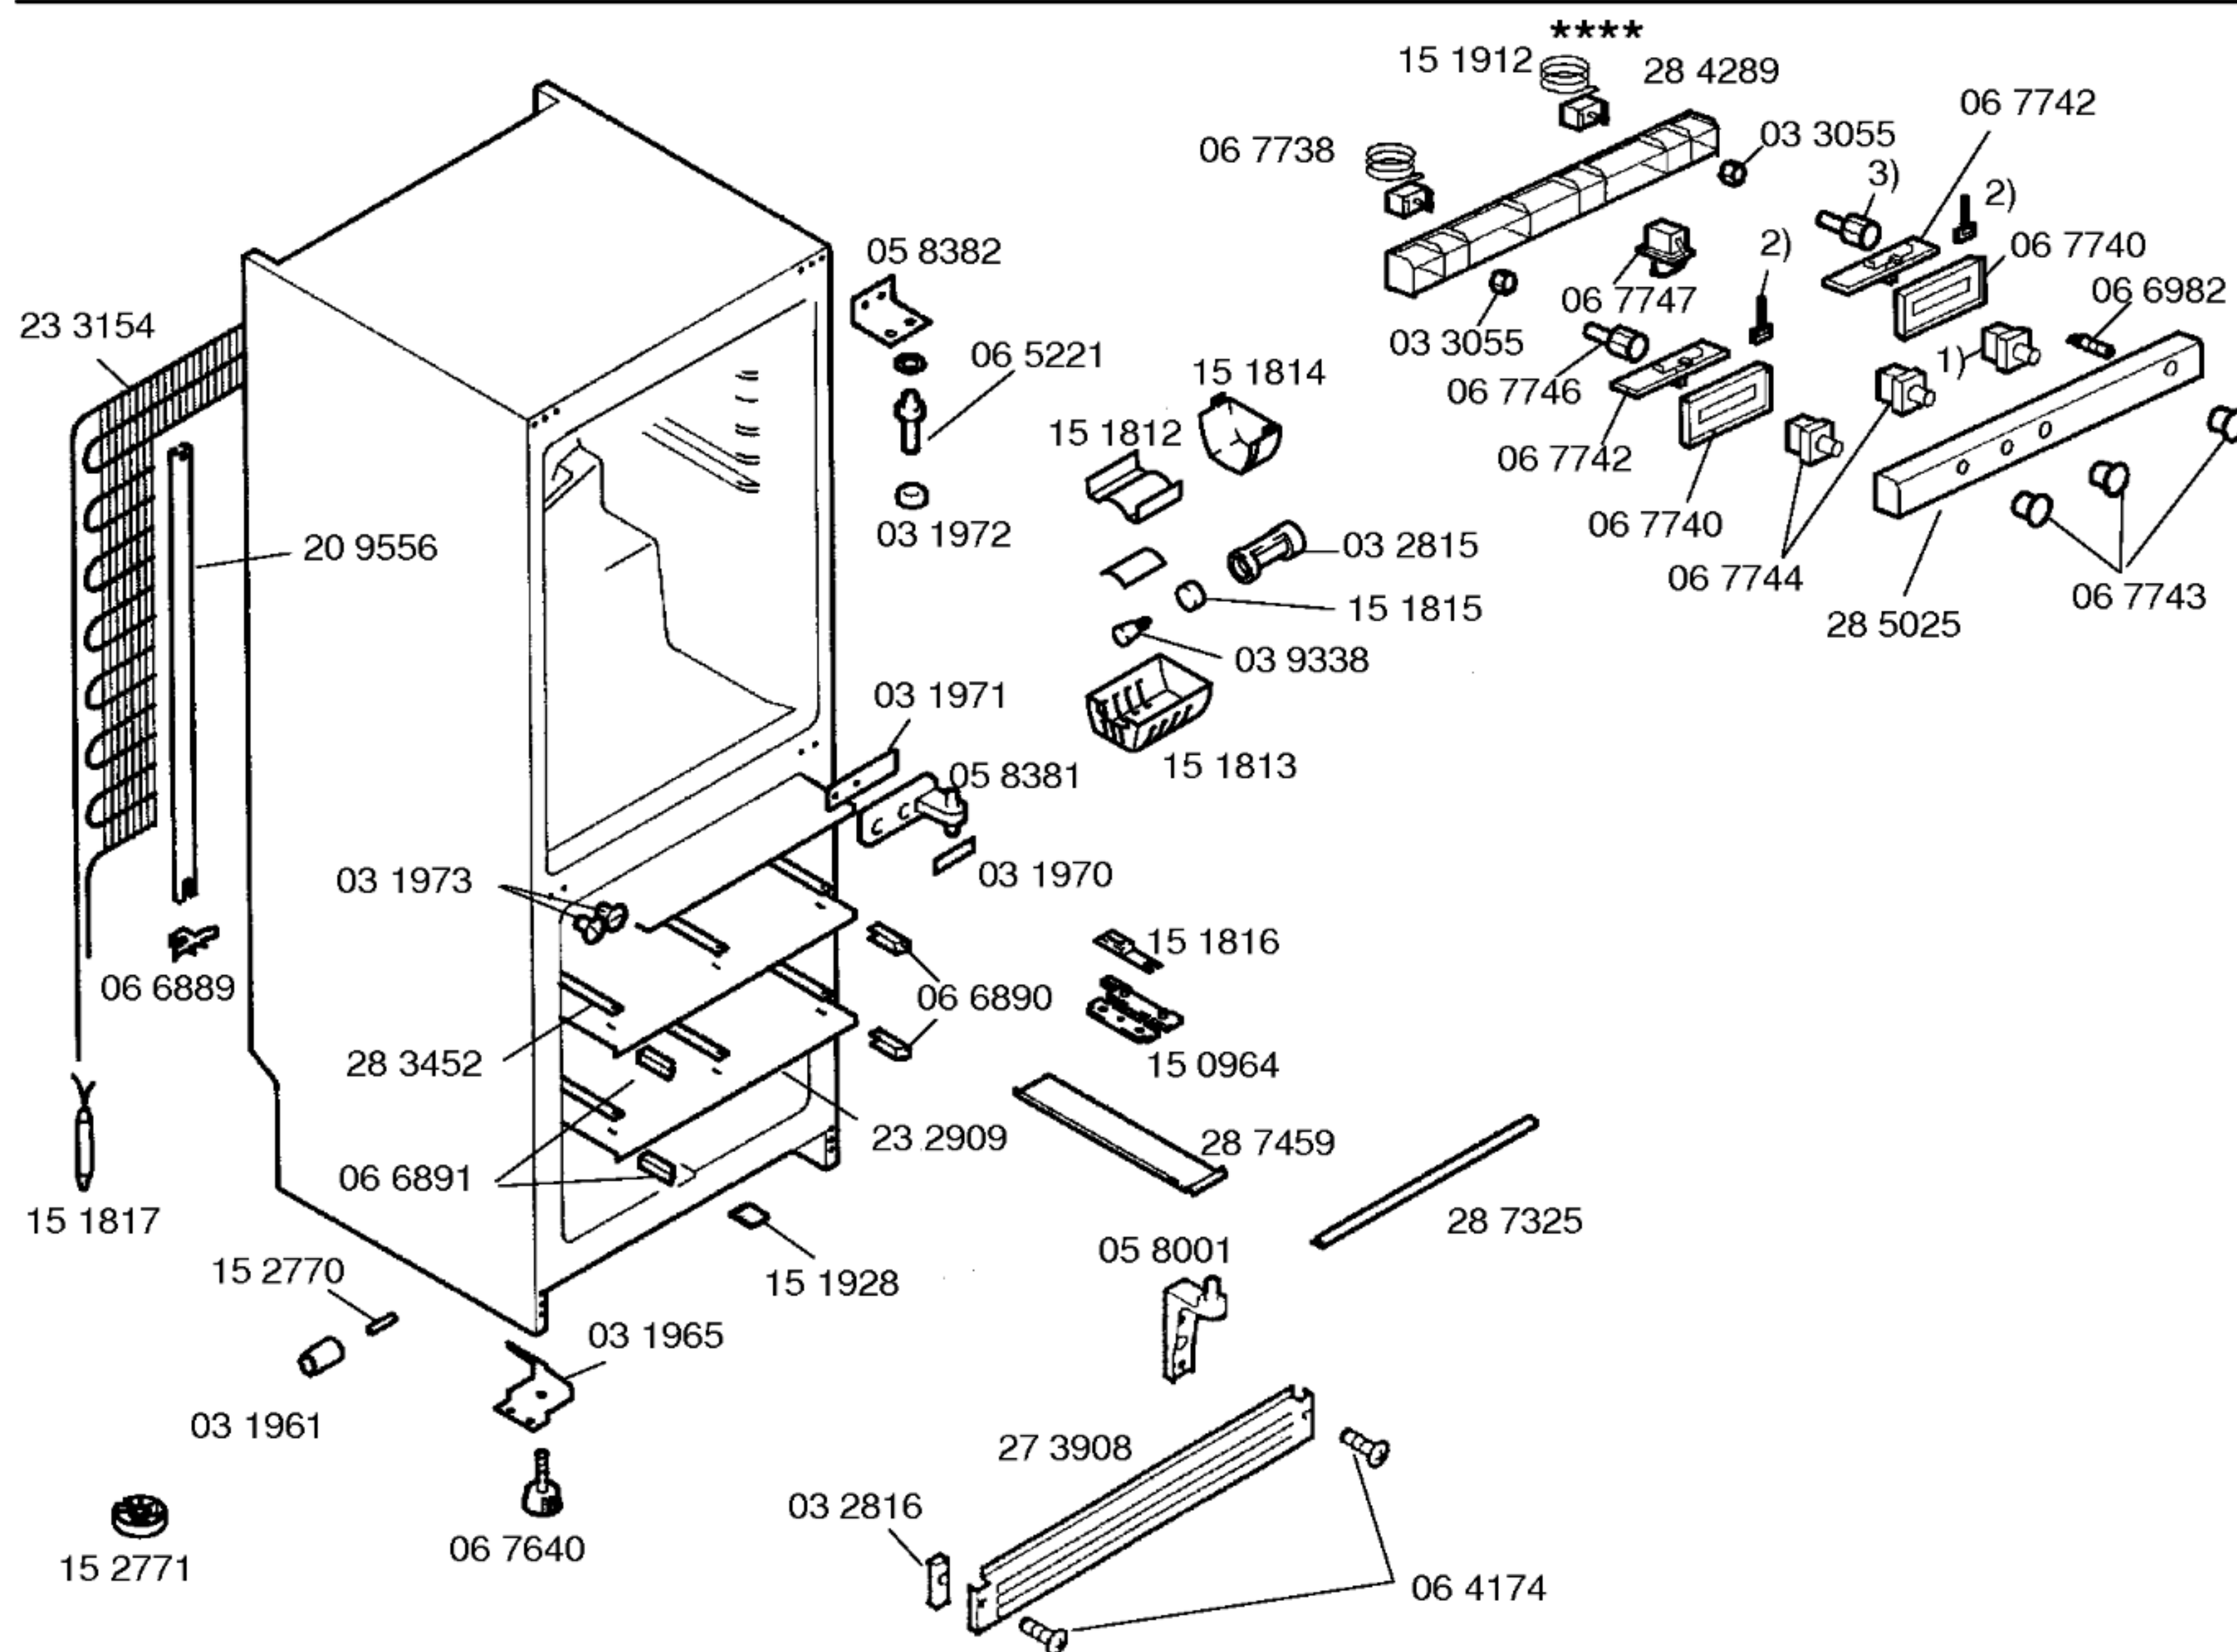

Libro de instrucciones
51 7462
(E,P,GB,F,NL,GR)

- 1) 06 7745
- 2) 06 7748
- 3) 06 7746

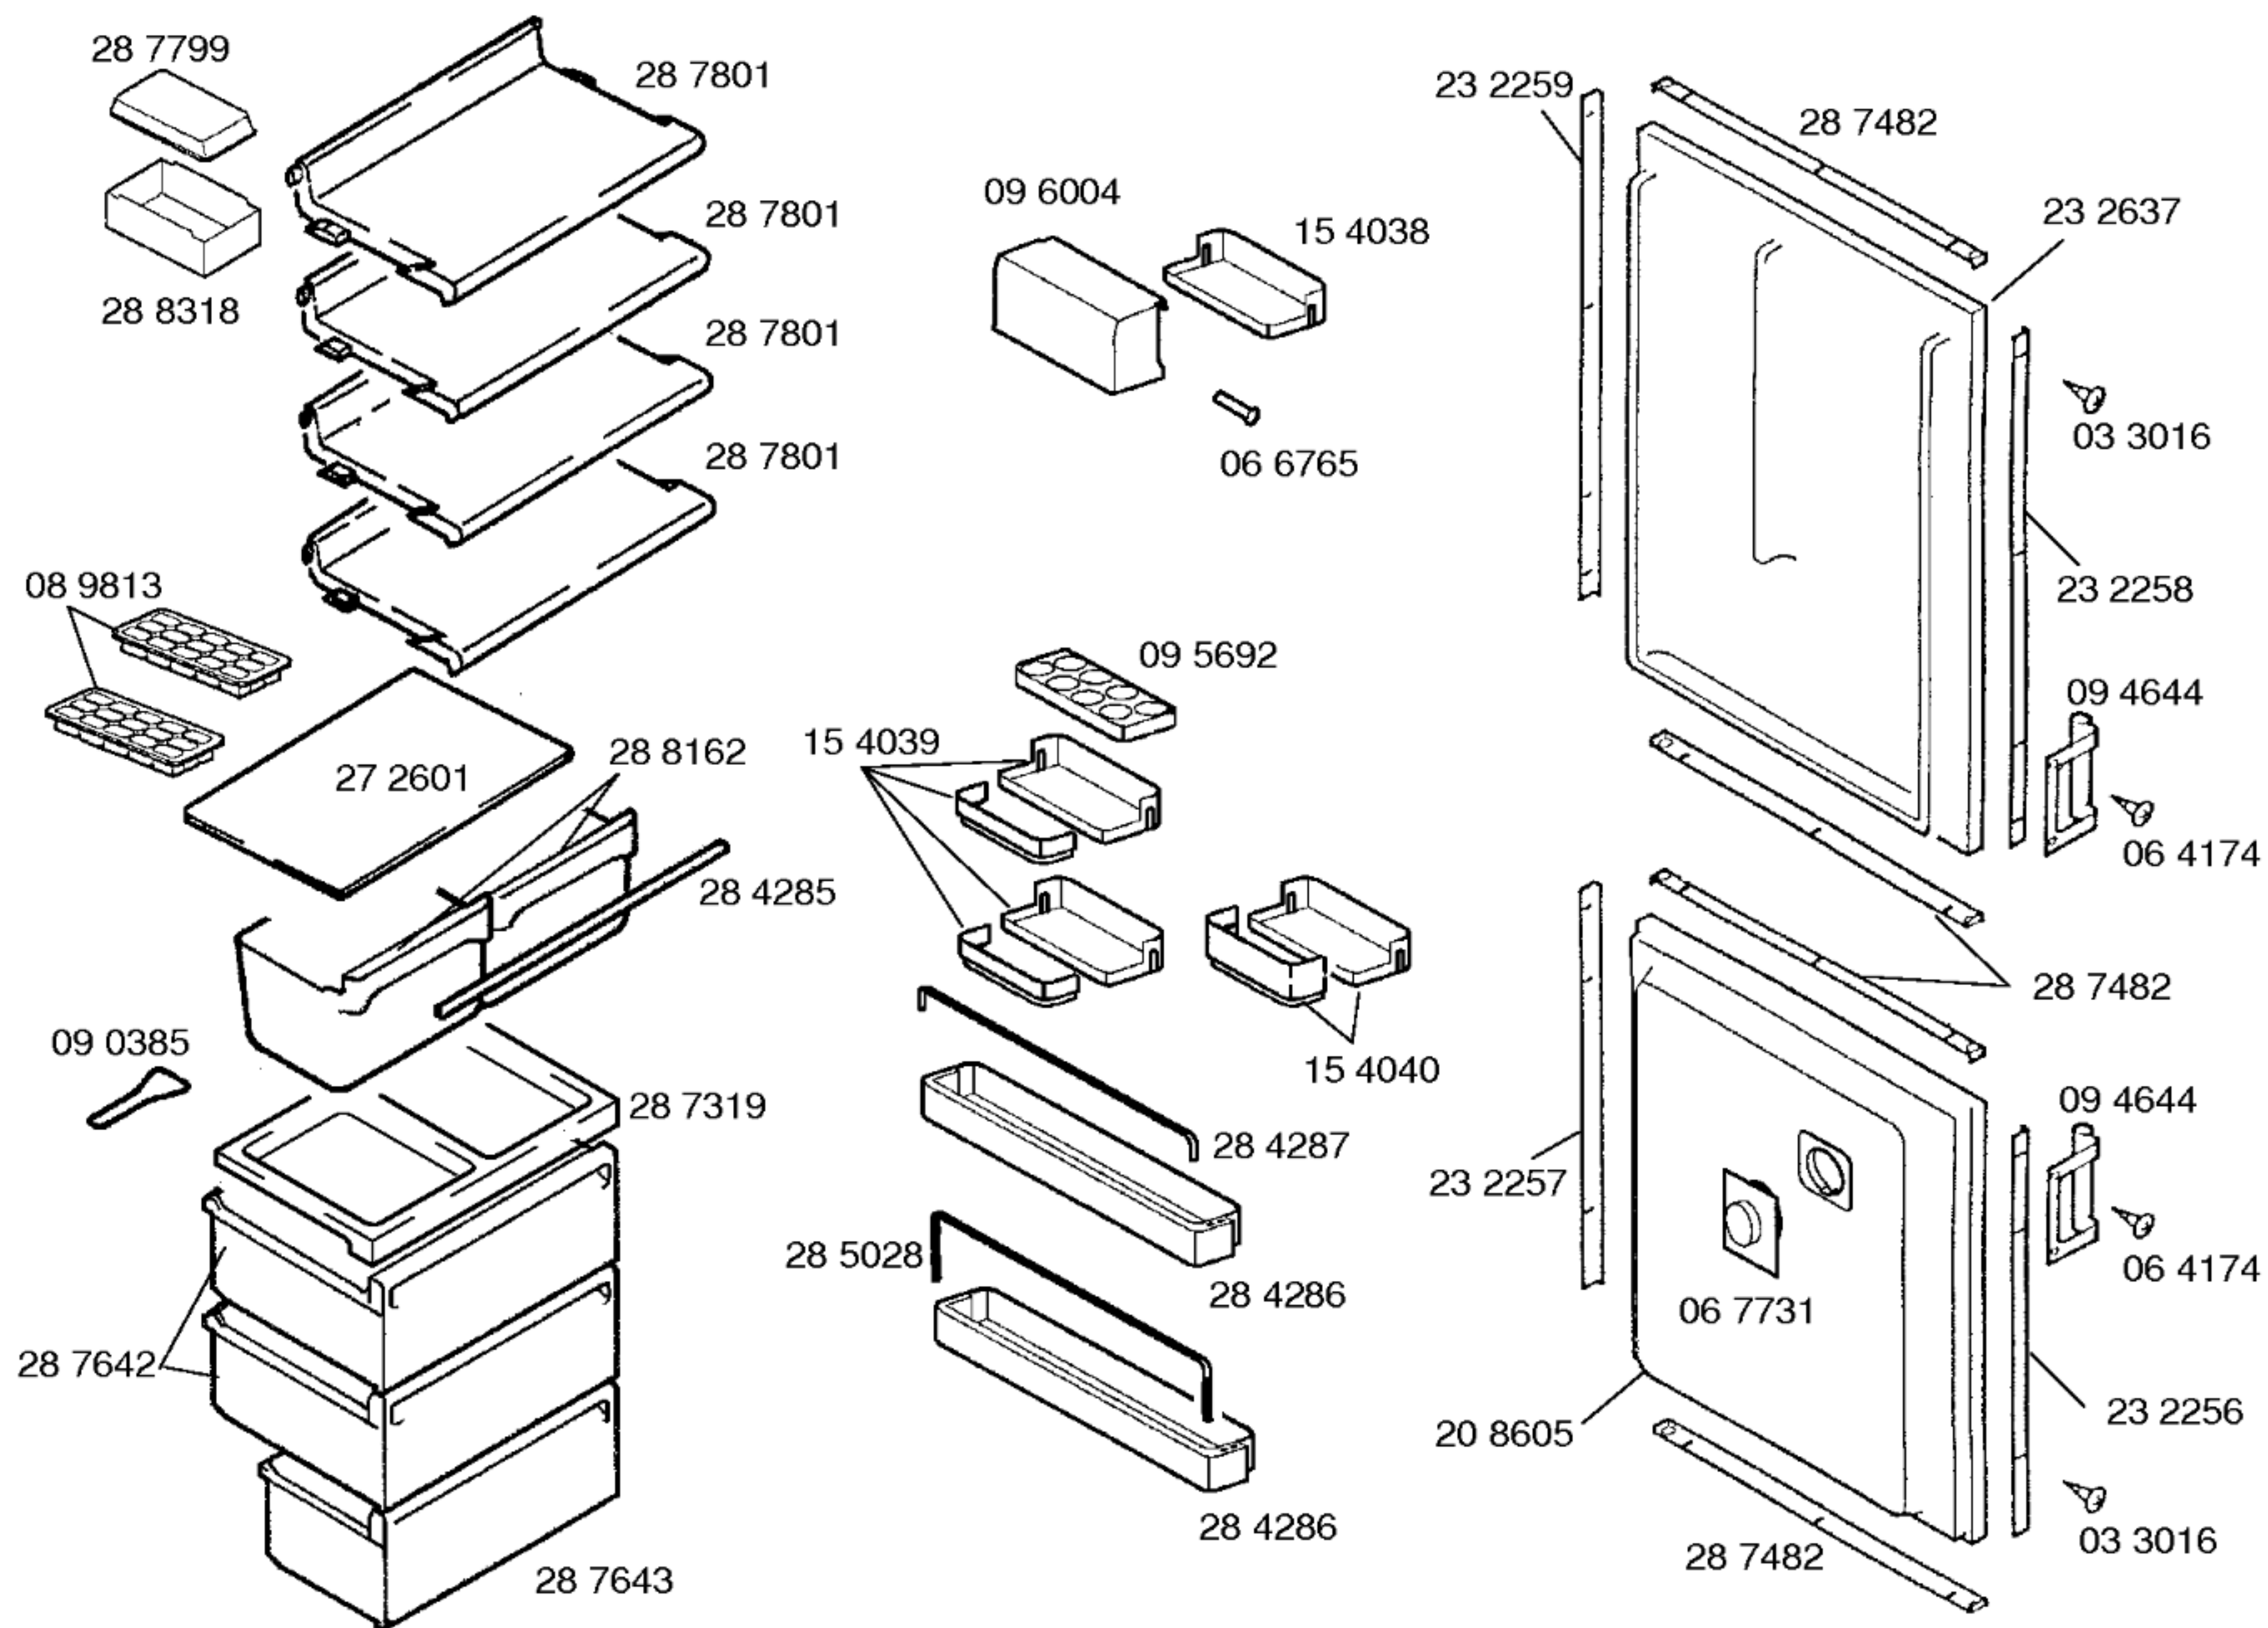

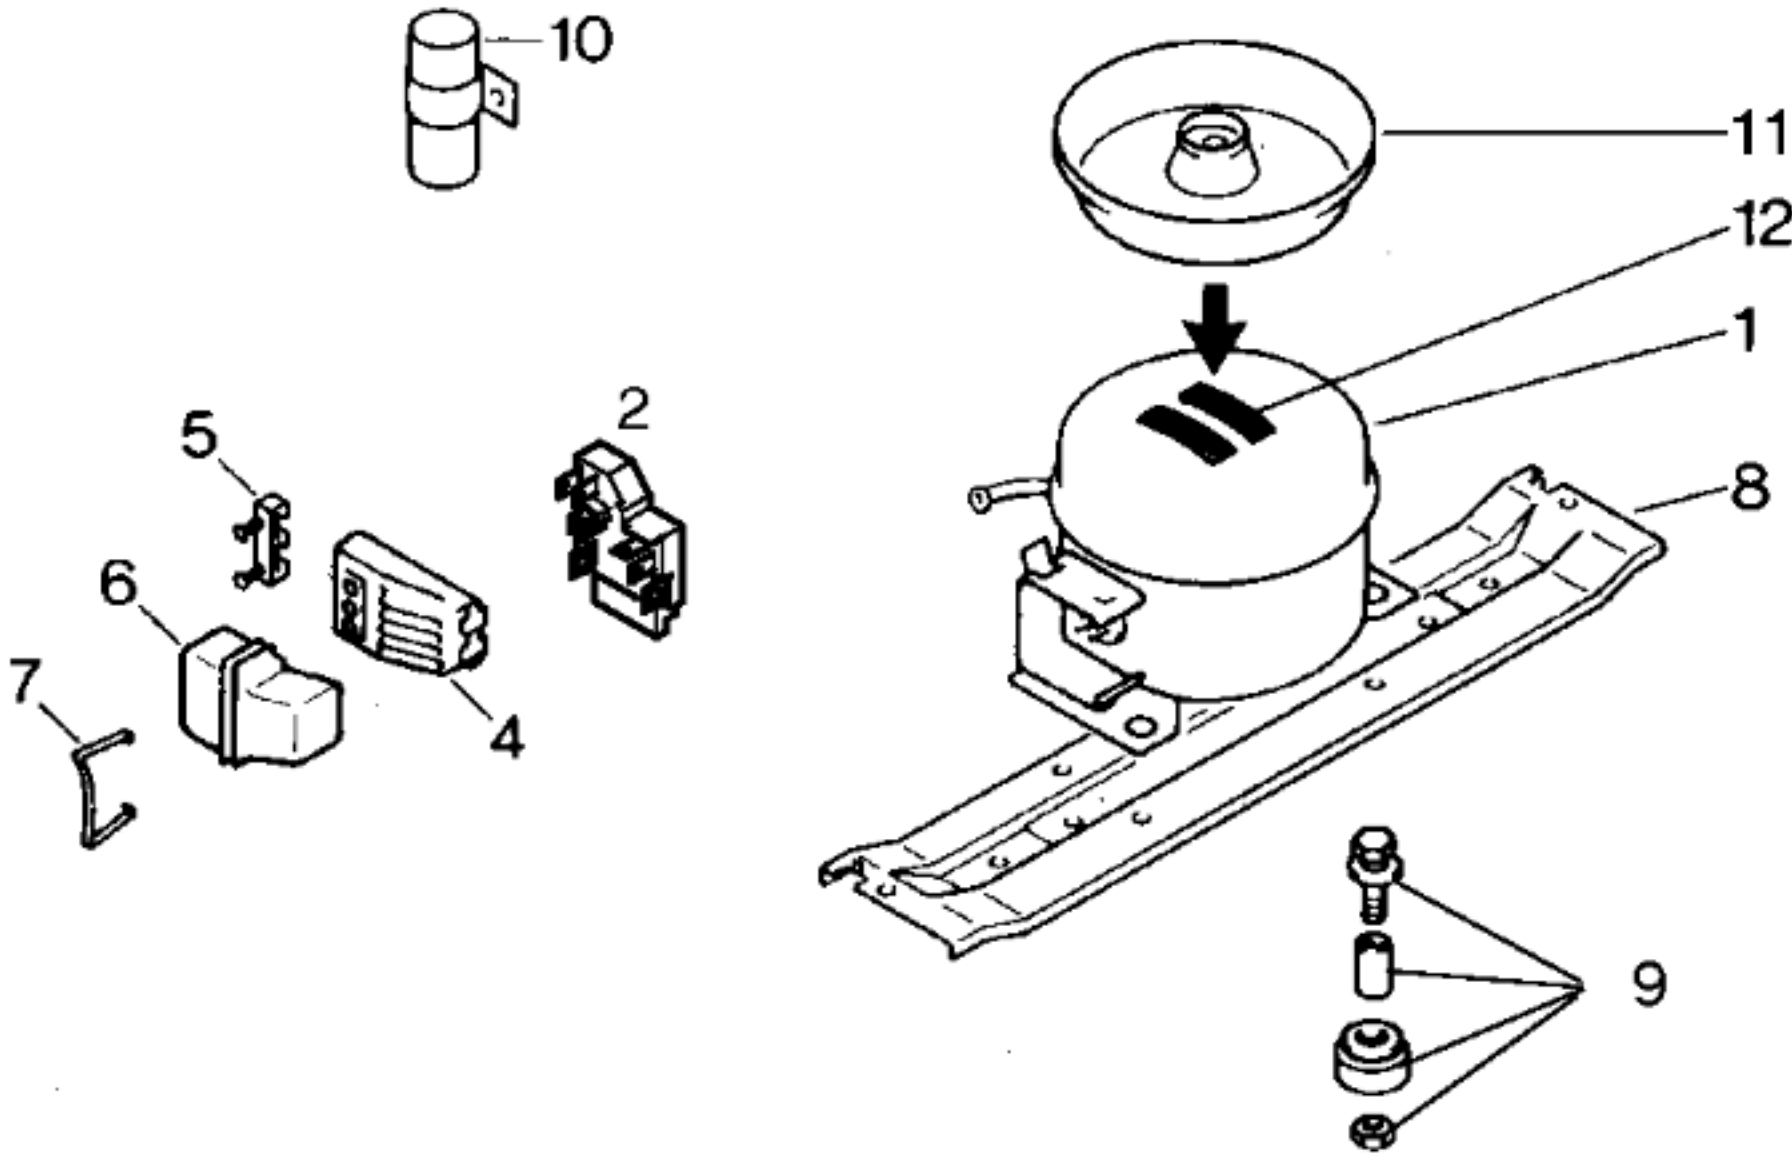

Pos.	U.Hermetica	ASPERA
	GL 45 AA	BMP1084Z
1	14 1374	14 1343
2	15 5130	15 4315
3		
4		
5		
6		
7		
8	28 0162	
9	05 0166	05 0166
10		
11	09 6883	
12		
13		

TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECHNIQUES/DATOS TECNICOS			
Verdichter/Compressor/Compresseur/Compresor Typ/Type/Tipo Förderleistung/Delivery/Debit/Aspiración l/h Anlaufstrom/Starting current/Cour.démarrage/Int.arranque A Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm Hi/aux.		U. Hermetica GL 45 AA 8,3 21,2 24,3	Aspera BMP1084Z 27,8 38,5
Temp.Reyler/Thermostat/Termostato Typ/Type/Tipo Reglerstellung/Position/Conexión Schaltwerte/Switching values/ Valeurs de commutation/Desconex. (..abtaven' od)		DANFOSS 077B62 MIN.-MAX +6° -13° -28° ..ein/conex.°C ..aus"/descon. ..alarm'	RANCO K54 L1940 MIN.-MAX -14° -22° -20° -28° -10° -18°
Füllmenge/Fill. quantily/Charge/Carga 134a		g	50 125
Anschlußwert/Comm. load/puiss. Connect./Potenc.		W	87 84
Heizung/Heater/Chauflage/Resistenc.descong. Widerstand/Resistance/Resistencia Leistung/Power/Puissance/Potencia		Ohm W	
Ventilador/Blower/Ventilateur/Ventilador Widerstand/Resistance/Resistencia		Ohm	
Magnetventil/Magnetic valve/Electrovanne/Electrovalvula Widerstand/Resistance/Resistencia Spannung/Volare/Tension/Tensión		Ohm V	
Temp.Reyler/Thermostat/Termostato ambiente para ventilador refrigerador			