


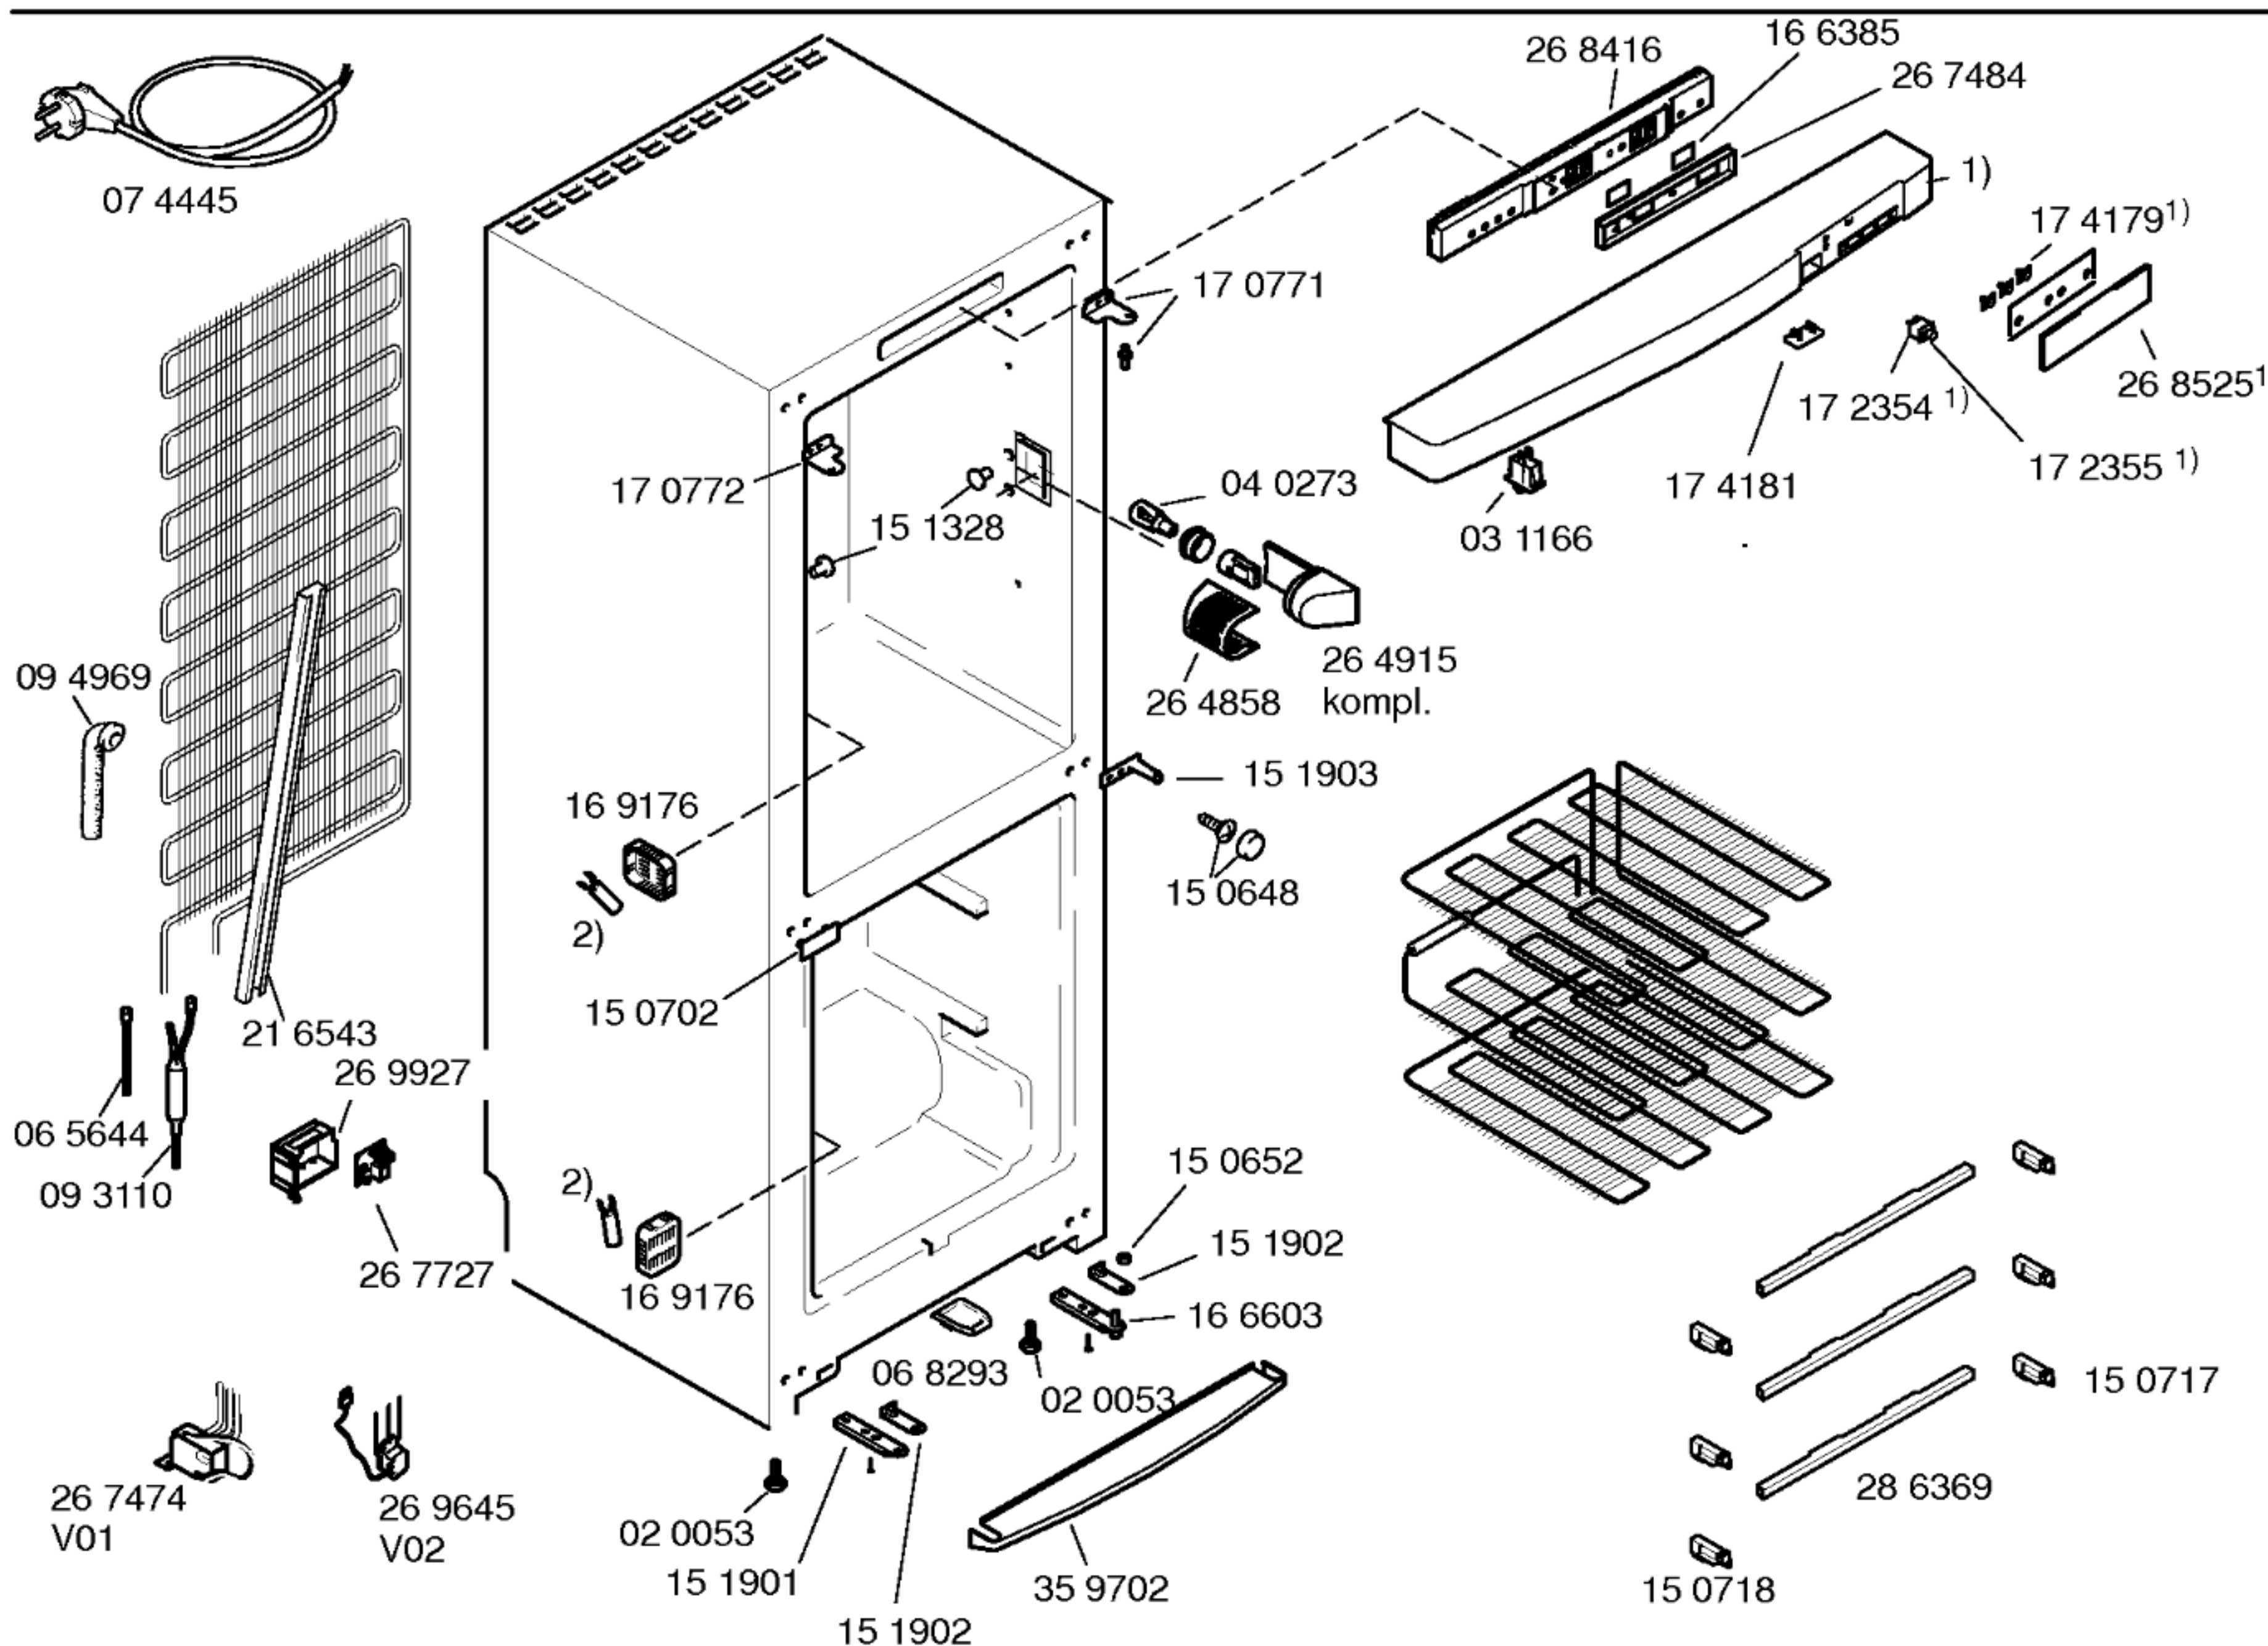


Ident – Nummern – Konstante
3740

Gebrauchsanweisung
52 6947
(D,GB,F,NL)
52 6948
(DK,N,SF,S)
Montageanleitung
52 7676
(D,GB,F,I,NL,DK,N,SF,S
E,P,GR,TR)

Beistellsatz
16 2597


1) 35 8666
Blende kompl.
2) 16 8766
Rep.-Satz

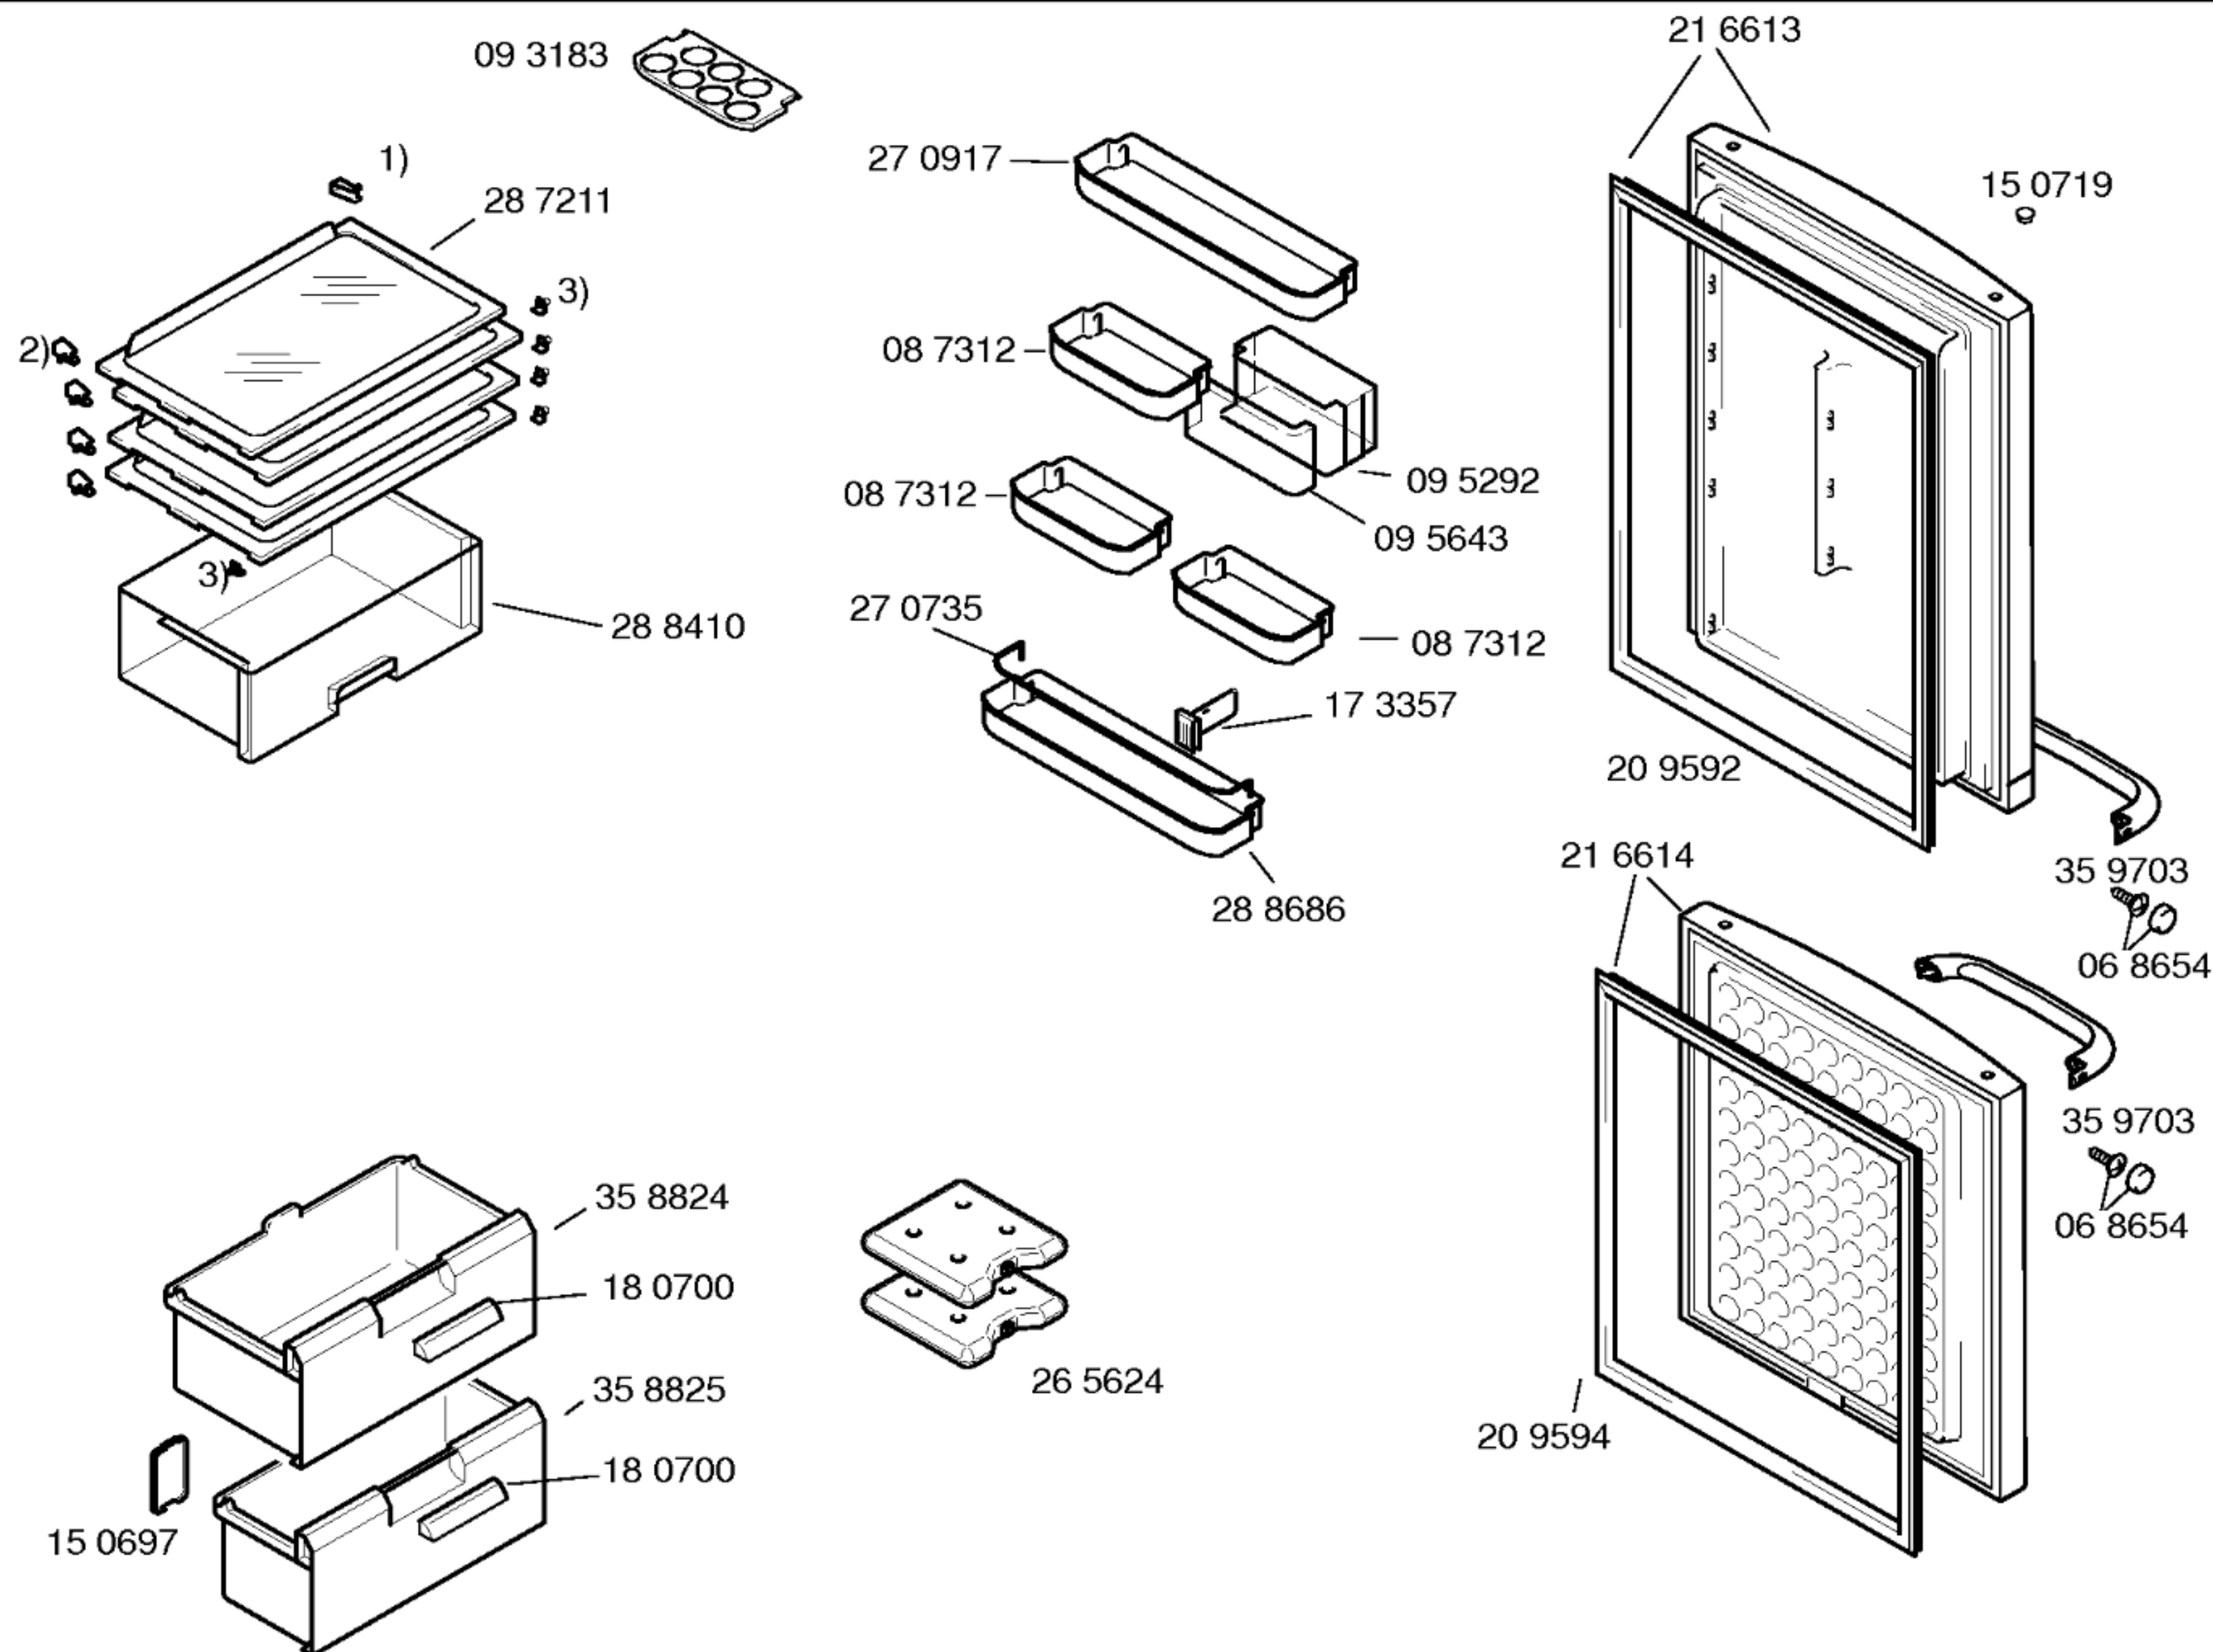

Ident – Nummern – Konstante
3740

- 1) 15 0693
- 2) 15 0694
- 3) 16 5789

Ident – Nummern – Konstante
3740

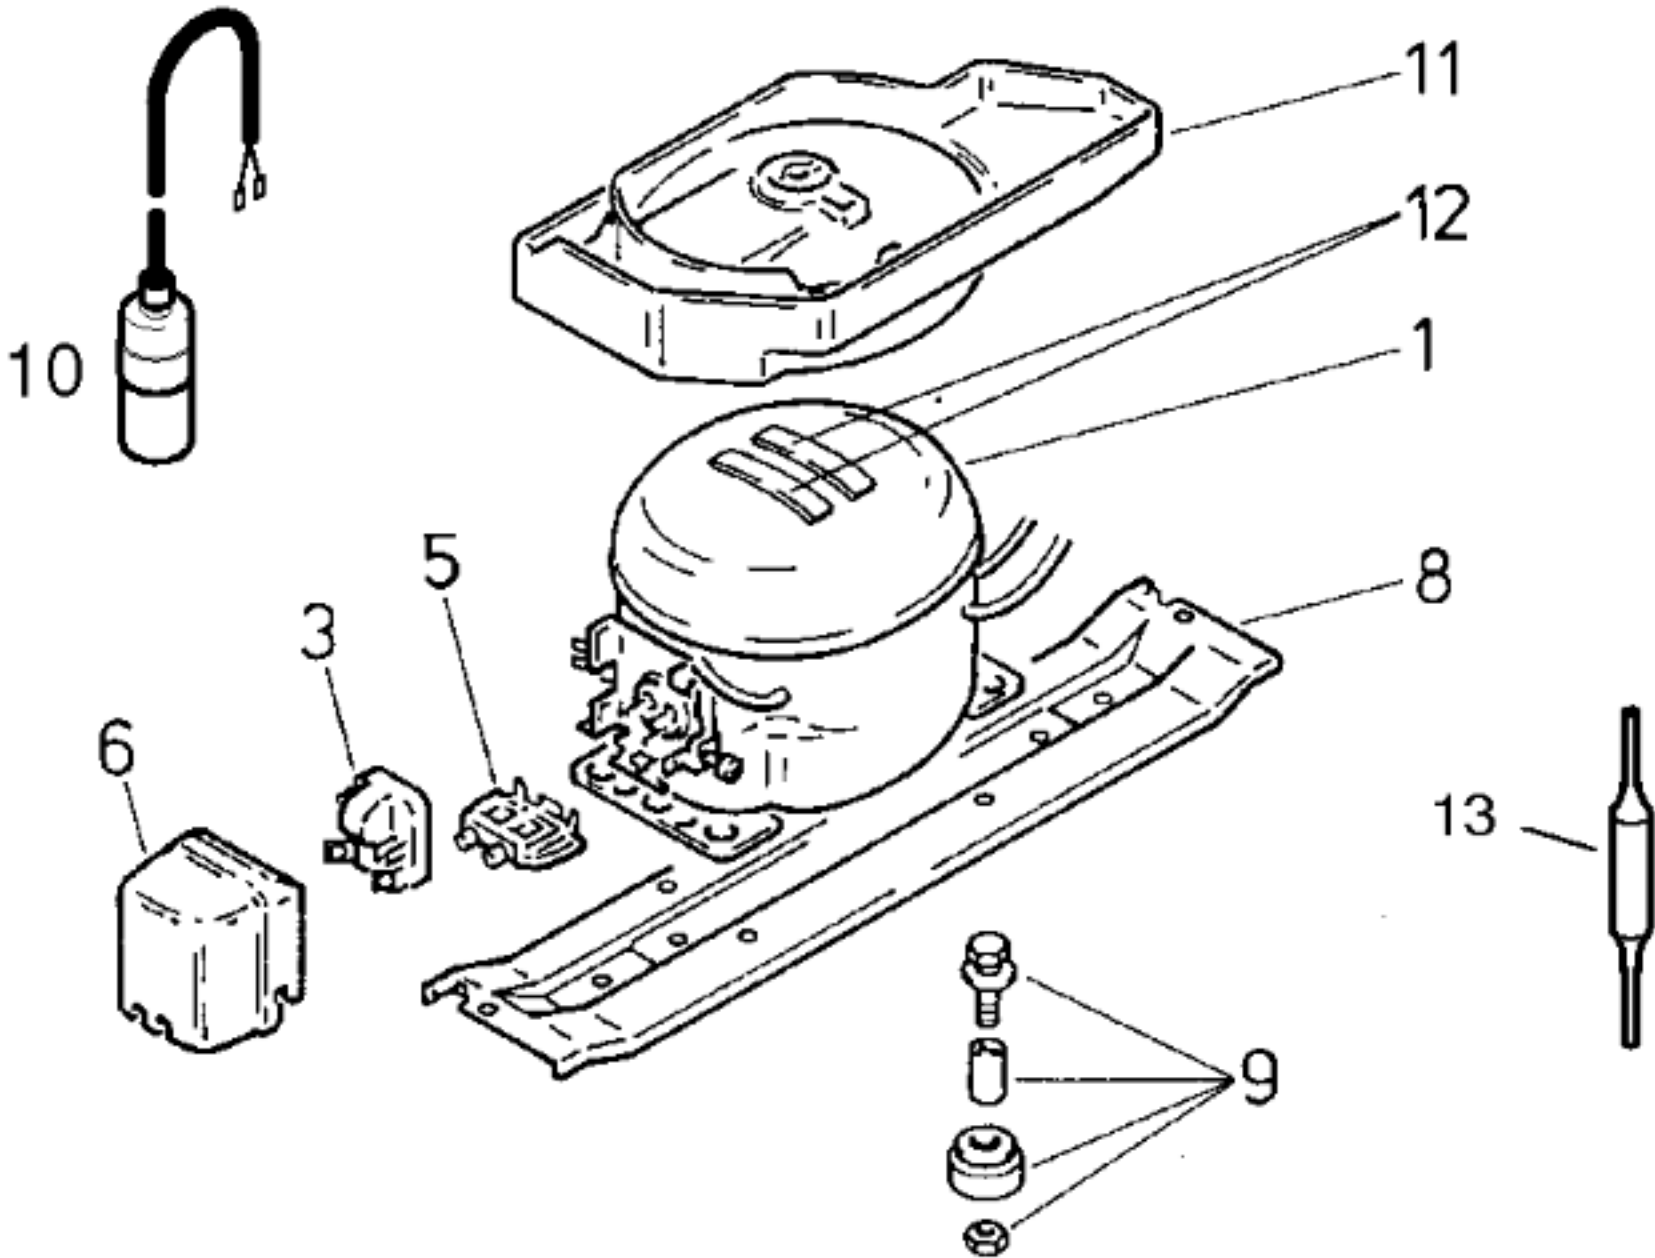

Pos.	V01		
	Matsushita		
	DC 110 E		
1	14 2130		
2			
3	17 2671		
4			
5	16 2549		
6	16 6782		
7			
8	28 7447		
9	05 0166		
10	15 2222		
11	26 9945		
12	05 6008		
13	35 0026		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Matsushita		
Typ/Type		DC 110 E		
Förderleistung/Delivery/Débit		l/h	1954	
Anlaufstrom/Starting current/Cour de démarrage		A	8,6	
Widerstand/Resistance/Résistance		Ha/main/prin	Ω	14,2
		Hi/aux	Ω	12,8
Temp.-Regler/Thermostat				
Typ/Type				
Regelstellung/Position				
Schaltwerte/Switching values		"warm"		
Valeurs de commutation		"kalt"		
		"alarm"		
Füllmenge/Fill.quantity/Charge		R600a		
Anschlußwert/Conn.load/Puiss. connectée		W	106	
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω		
Temp.-Regler/Thermostat		°C	kΩ	°C
		+10	9,95 ±0,18	-18 43,31 ±1,10
		+5	12,70 ±0,18	-22 54,66 ±1,59
		0	16,33 ±0,16	-26 69,42 ±2,29
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω	1650	
Spannung/Voltage/Tension		V	220	