


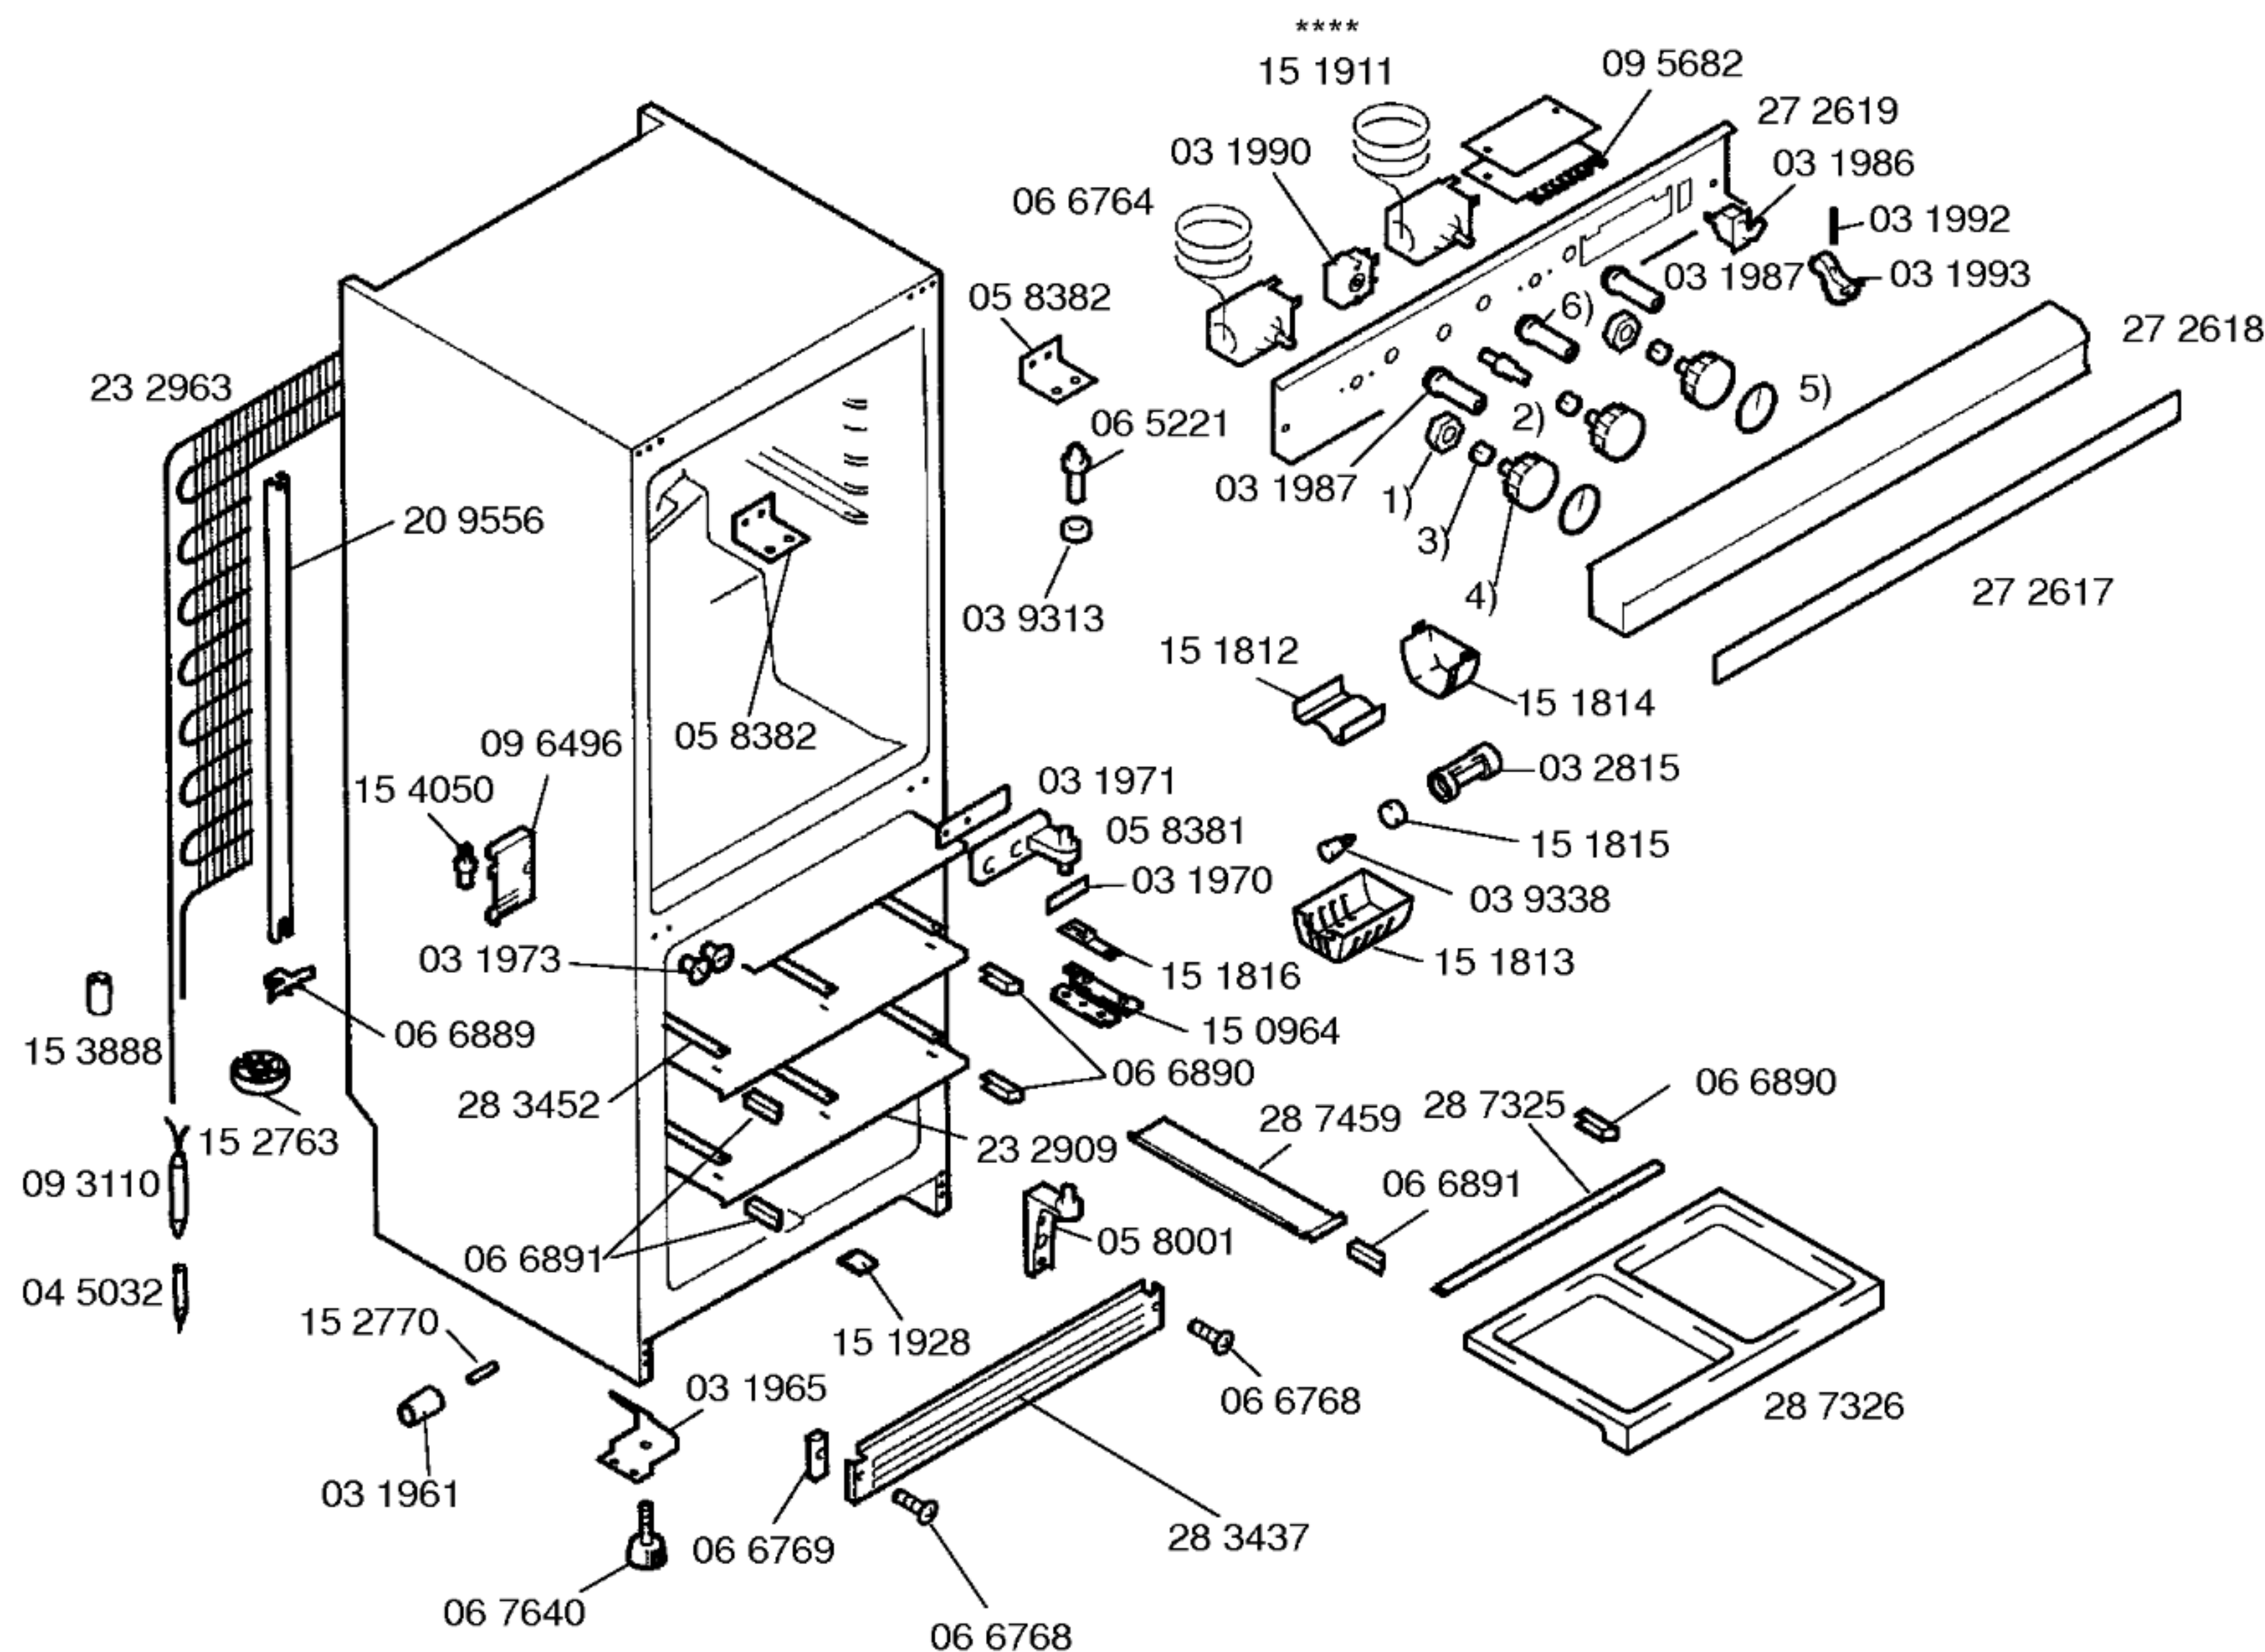



Ident – Nummern – Konstante
3740

Gebrauchsanweisung
51 7371
(D, GB, F, I, NL, P)

Montageanweisung
51 4870
(D, GB, F, I, NL)

1)	03 3055
2)	03 1989
3)	03 5731
4)	03 1985
5)	06 6770
6)	03 1988

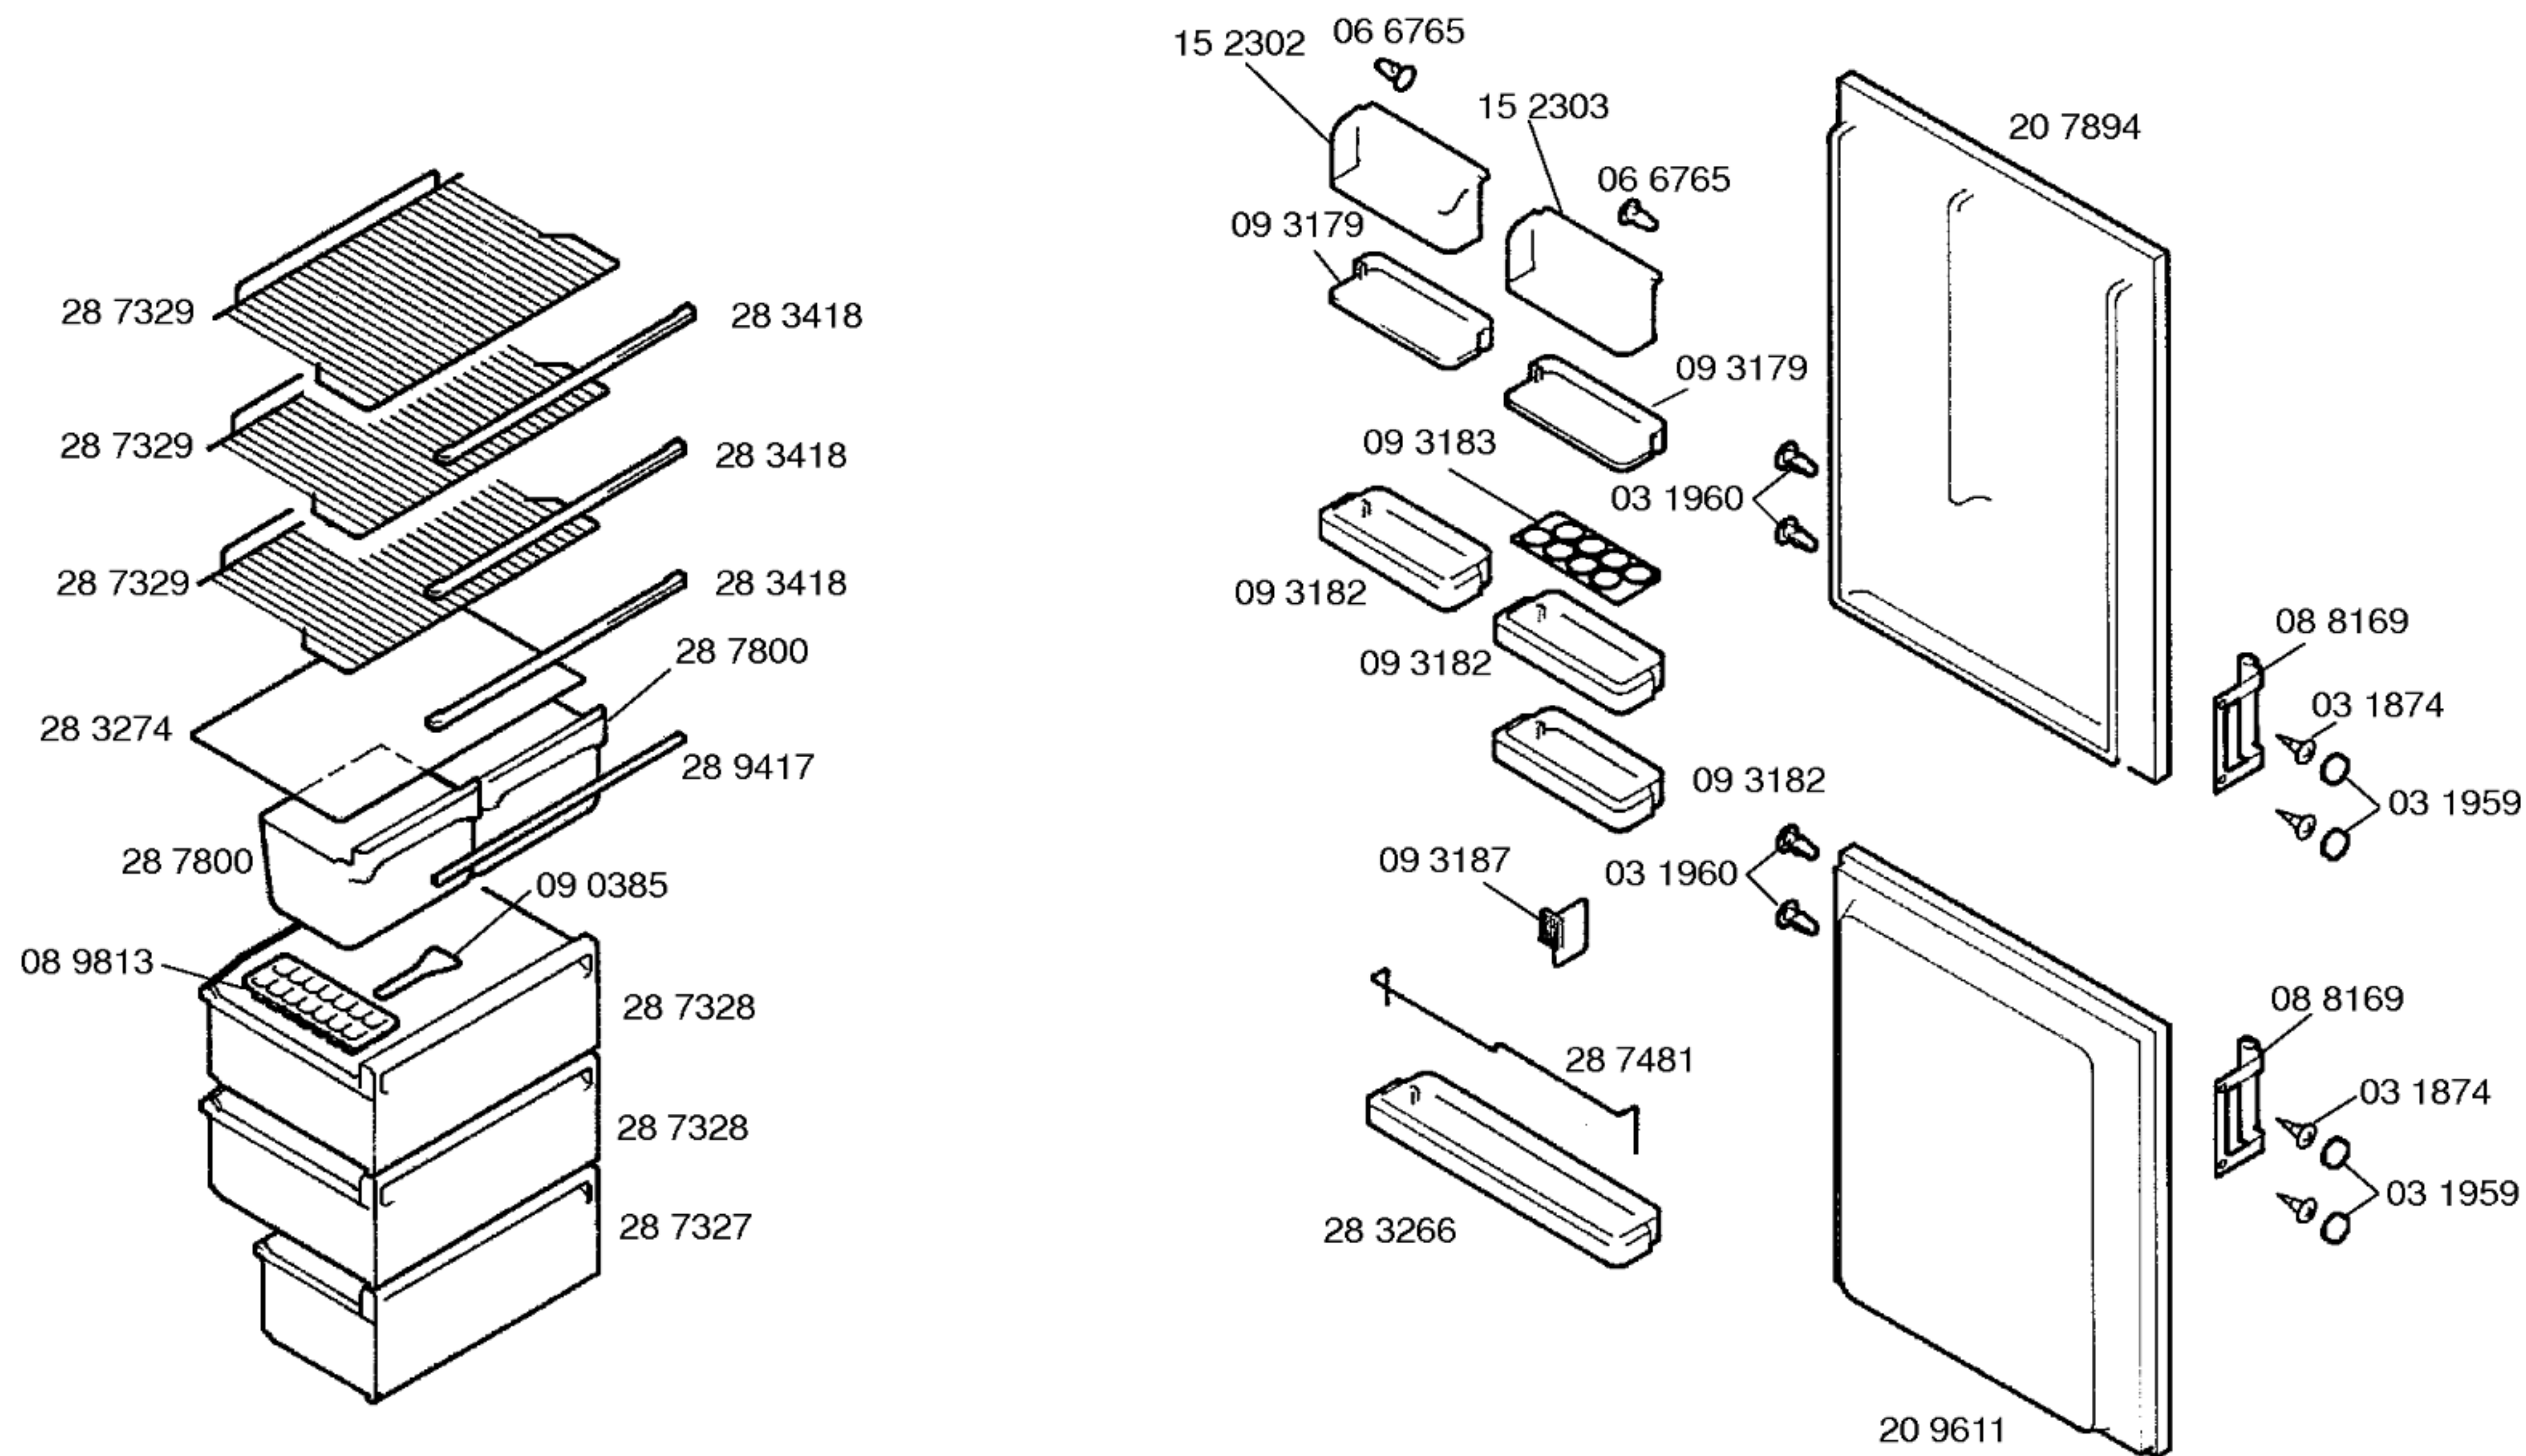

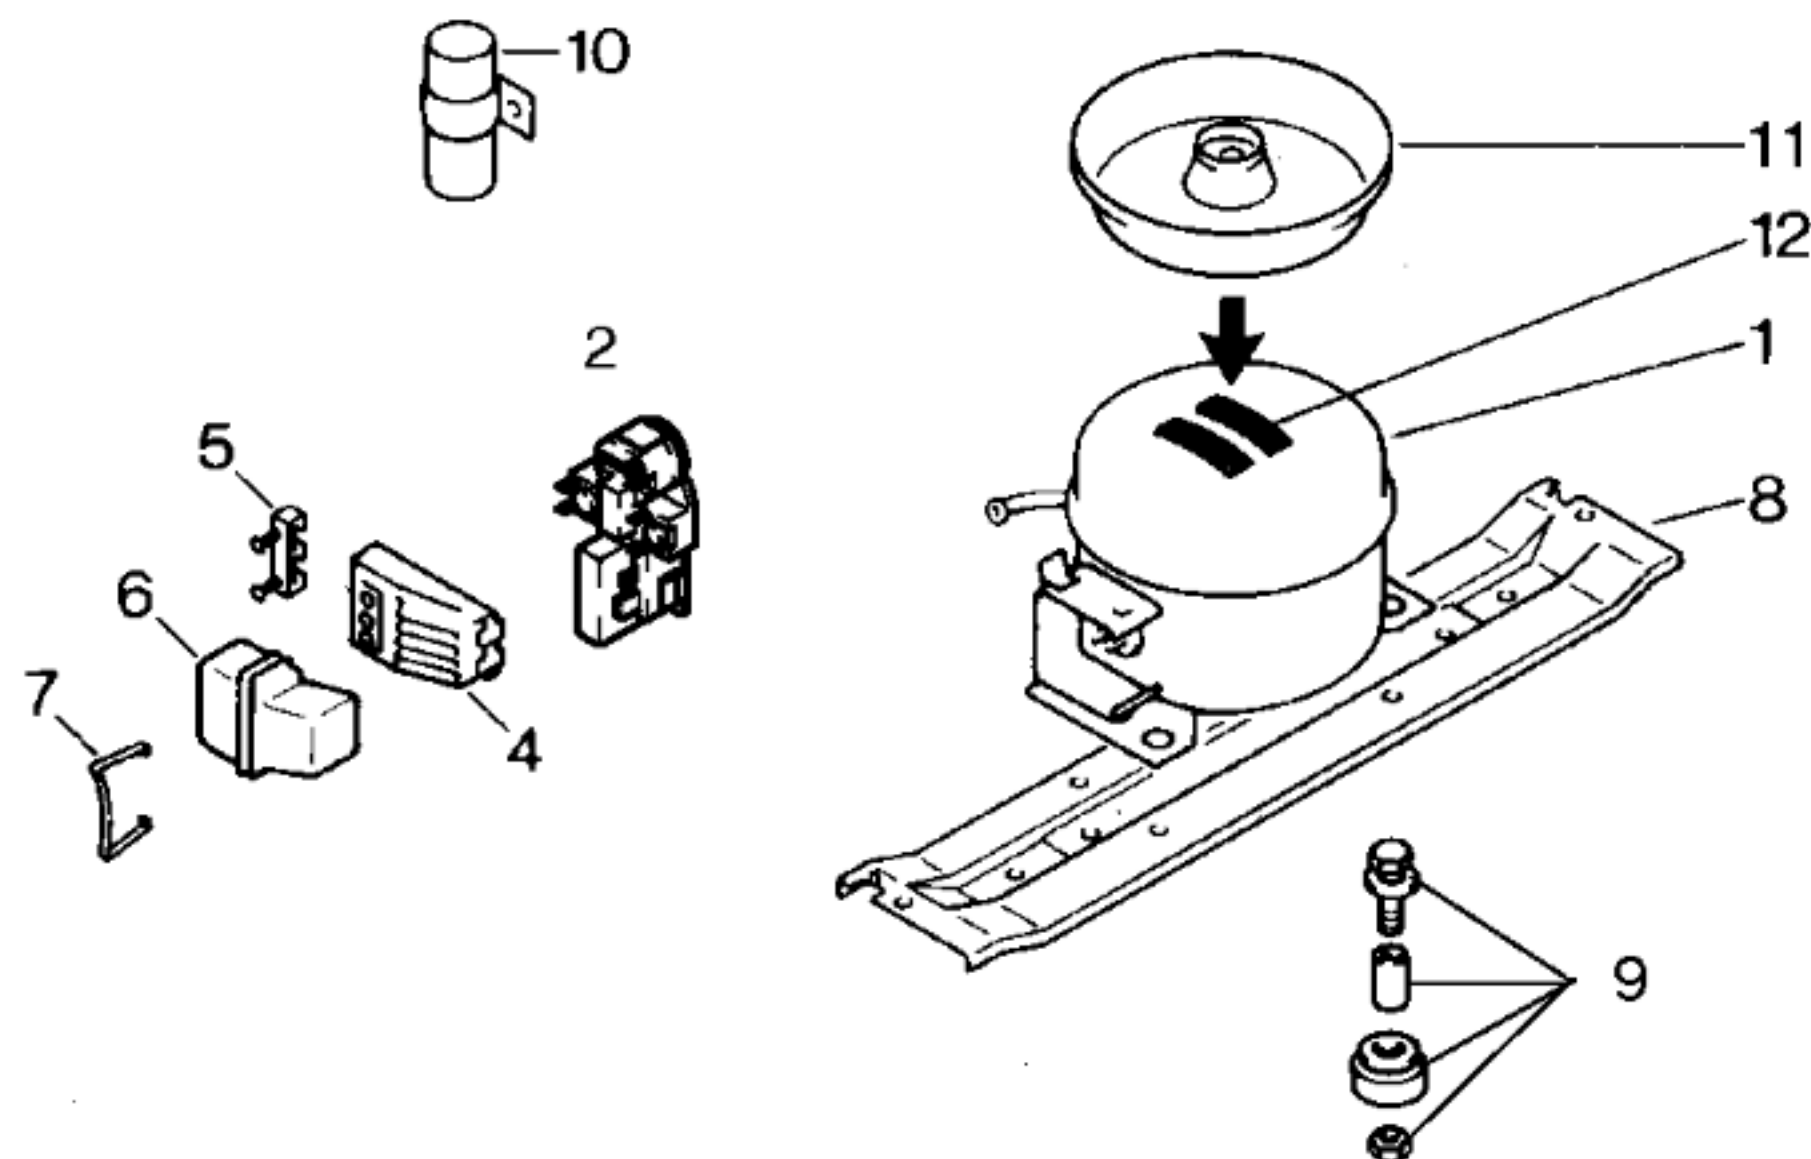

Pos.	KS	GS
	MATSUSHITA SB43C90WA	MATSUSHITA SB48C10WA
1	14 1291	14 1290
2	15 0603	15 0603
3		
4		
5		
6		
7		
8	28 8253	
9	05 0166	05 0166
10		
11	09 5320	
12		
13		

TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECHNIQUES/DATOS TECNICOS

Verdichter/Compressor/Compresseur/Compresor	MATSUSH.	MATSUSH.
Typ/Type/Tipo	SB43C90WA	SB48C10WA
Förderleistung/Delivery/Debit/Aspiración l/h		
Anlaufstrom/Starting current/Cour.démarrage/Int.arranque A	6,45	7,00
Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm	18,92	16,59
Hi/aux.	31,40	30,10

Temp.Reyler/Thermostat/Termostato	DANFOS	RANCO
Typ/Type/Tipo	077B62	K57-L2821
Reglerstellung/Position/Conexión	MIN. MAX	MIN. MAX
Schaltwerte/Switching values/	+6°	-14° -24°
Valeurs de commutation/Desconex.	-13° -28°	-21° -31°
(..abtaven' od)	..alarm'	-15°

Füllmenge/Fill. quantity/Charge/Carga 134a	g	50	125
--	---	----	-----

Anschlußwert/Comm. load/puiss. Connect./Potenc.	W	94	108
---	---	----	-----

Heizung/Heater/Chauflage/Resistenc.descong.			
Widerstand/Resistance/Resistencia	Ohm		
Leistung/Power/Puissance/Potencia	W		

Ventilator/Blower/Ventilateur/Ventilador			
Widerstand/Resistance/Resistencia	Ohm		

Magnetventil/Magnetic valve/Electrovanne/Electrovalvula			
Widerstand/Resistance/Resistencia	Ohm		
Spannung/Voltage/Tension/Tensión	V		

Temp.Reyler/Thermostat/Termostato ambiente para ventilador refrigerador			
---	--	--	--